JC SYSTEMS

MODELS 510 AND 520

CONTROLLER/ SETPOINT PROGRAMMER

TEMPERATURE / HUMIDITY / ALTITUDE

- Ideal for *all* environmental chambers
- Single or dual channel versions
- Direct digital control with direct digital readout
- Full Proportional, Integral and Derivative (PID)
- Supervisory computer control RS-232C, RS-422A, IEEE-488
- Dual heat/cool outputs on each loop
- Separate PID constants for Heat & Cool
- 0.1° sensitivity/repeatability
- On/off, time proportional or continuous control
- Easy to operate

THE JC SYSTEMS 510 & 520 ARE NOW IN FULL CONTROL OF YOUR CHAMBER FUNCTIONS

Here are two versatile, integrated temperature controller/setpoint programmers designed specifically for environmental chambers. The JC Systems Model 510 Controller/Programmer or 520 Dual Controller/Programmer can take full control of your chamber functions, the 520 using two independent control loops and two setpoint programmers operating from a common time base.

The 510 and 520 are the most versatile chamber controller/programmers available, yet are also the easiest to operate. All parameters are digitally set, including the proportional/integral/derivative tuning functions, and stay the same over time and from unit to unit. The setpoint programmers include cycles, single level nested loops, and smooth, "bumpless" startup.

Accurate control is maintained when operated from thermocouples, RTD's, linear humidity sensors, or from any 4-20 mA process sensor or transmitter. Control outputs include dual time proportional heat and cool functions for each loop, or analog proportional outputs for 4-20 mA or other control values.

INPUTS AND TEMPERATURE RANGES

The 510 and 520 accept a wide range of thermocouple, RTD and linear humidity sensor inputs (see specifications and ordering guide for ranges). Thermocouple inputs have built-in cold junction compensation for outstanding temperature stability. Thermocouple break detection is standard; an alert is displayed on the front panel, and the heat and cool outputs are automatically turned off.

CONTROL FUNCTIONS

Full PID (Proportional, Integral, and Derivative) control capability is standard, providing the maximum controllability and efficiency regardless of chamber size or system complexity. Separate PID tuning constants for heating and cooling are also standard to assure optimum system performance. Digital linearization of sensor output assures that internal calculations are done with actual temperature values, providing equally precise control at all temperatures.

CONTROL OUTPUTS

Either time proportional or optional power proportional (current loop) outputs may be ordered.

The time proportioning output consists of two separate output connections—one

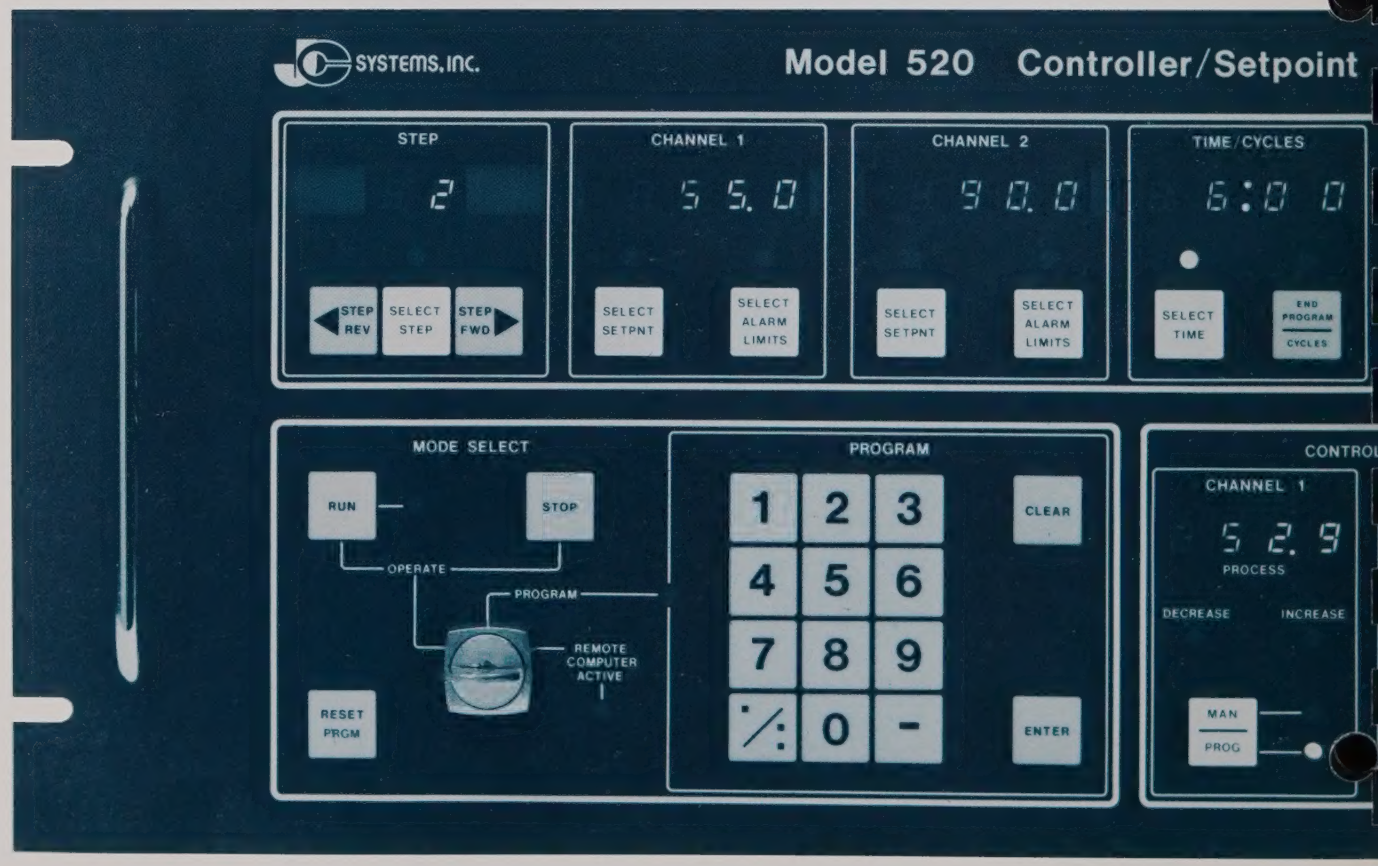

for heating and one for cooling for each channel. Both are suitable for driving photo-isolated solid state relays. The time proportioning period is settable from 1 second to 255 seconds by an internal DIP switch.

The optional power proportioning output is a current loop usable in any of these ranges:

4-20 mA	(0 to 100% output)
0-16 mA	(0 to 100% output)
4-12-20 mA	(-100% to 0 to 100% output)
0-8-16 mA	(-100% to 0 to 100% output)

SETPOINT PROGRAMMING

Ninety-one steps are available, each one a ramp or soak step. The 91 steps may be divided into any number of programs, and any program may be automatically executed up to 9999 times. Single level nested looping is provided.

Step times are entered in hours and minutes: maximum 99 hours, 59 minutes per step (or in minutes and seconds, 99 minutes, 59 seconds per step). Ramp steps are formed by entering the ending setpoint and the time duration.

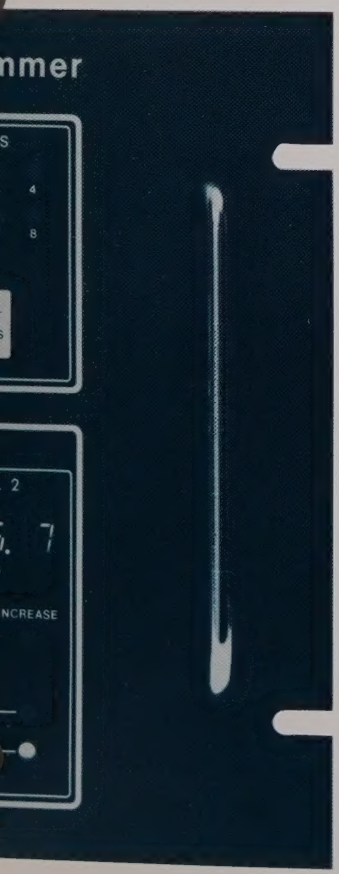

The Models 510 and 520 produce a linear setpoint change from the previous setpoint to the new one over the specified time interval. To assure no system shocks, the first step of a program begins automatically from the current temperature (or other process variable).

Each setpoint is individually settable for each step, via simple keyboard entry.

Deviation limits, alarms and guaranteed soak

During each step, deviation limits may be set which provide for a flashing display lamp and an alarm output if the deviation limit has been exceeded. The deviation alarm condition may also be used to "freeze" the step clock temporarily until manually reset, or until the process variable is within the deviation band. All deviation limits are "tracking" in that they follow the setpoint value while ramping.

In addition to these features, a guaranteed soak operation is available, which inhibits the advance from one step to the next until the process is within a preselected value of the ending setpoint.

EVENT OUTPUTS

Eight event outputs are individually programmed for off/on operation, ideal for control of external devices.

Single step operation

The 520 may be configured (with an internal DIP switch) to halt execution at the end of each step in which Event 6 is ON. A RUN command is required to continue. This feature is handy for debugging, and for on-line operation where the program needs to wait for an external input. The remote RUN input, the front panel RUN button, or a computer RUN command may be used to continue.

Non-volatile program storage

All program parameters are stored in battery-backed memory. The lithium battery provides over five years data retention.

COMPUTER COMMUNICATIONS

The Models 510 and 520 have a built-in RS-232C serial computer communications interface operating at 2400 baud. In addition, communications capability may be expanded with an optional IEEE-488 or a multidrop party line RS-422A interface.

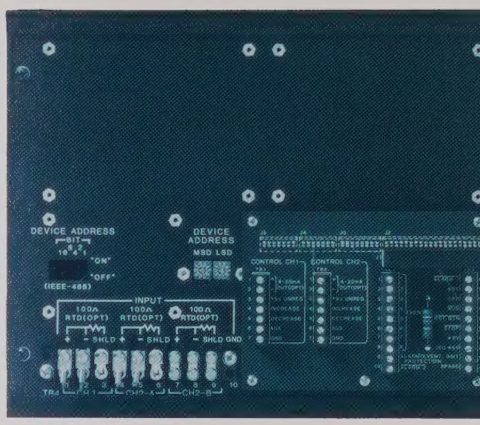

Model 520 rear panel

The IEEE-488 Interface option allows full computer supervision and monitoring of the controller/programmer. Alarms and/or external inputs may generate a Serial Poll Request as an interrupt.

The RS-422A Serial Interface option has all the features of the IEEE-488 interface, except for Service Request capability. Operation is selectable from 300 to 19,200 baud, and party line operation allows up to 99 Model 510s and/or 520s to be addressed from a single computer port. Photoisolation between all 510s or 520s and the 422A network is provided.

MANUAL CONTROL OPERATION

Each controller may be operated from a setpoint manually entered from the numeric keypad, rather than automatic operation from the setpoint programmer. Manual deviation limits may also be entered, and deviation limit checking is active at all times except during setpoint program review or entry. One controller may be operated with a manual setpoint while the other is operating automatically in a setpoint program, or both programmed, or both manual.

If both controllers are in manual mode, the event outputs may be preset to be all ON or all OFF.

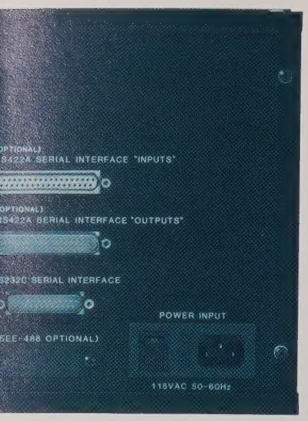

FUNCTIONAL PACKAGING

The Model 510 and 520 package is both functional and attractive. The 19" standard rack configuration is designed to facilitate installation into any environmental chamber system and rugged enough to handle even the toughest test chamber locations.

The rear panel layout is designed for simple and quick installation. Large, well-marked terminals are provided for all sensor inputs, control outputs, event outputs and other system connections. The standard RS-232C serial communications port and optional ports for RS-422A and IEEE-488 are accessed via clearly labeled, industry standard connectors.

MULTIPLE PROGRAM STORAGE

The entire program content of the Model 520 may be copied to EEPROM cartridges by the JC Systems Model 285 PromSave™. The PromSave communicates with the 520 via the RS-232C serial port, and provides fast, easy storage and retrieval of programs. One PromSave can readily serve a number of JC Systems controller/setpoint programmers.

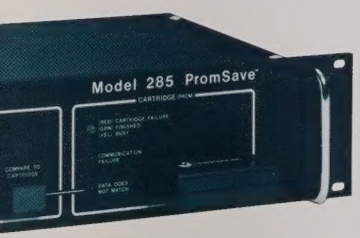

Model 285 PromSave

COMPUTER COMMUNICATIONS COMMANDS

Command set for Remote Computer switch position:	
RUN	Starts operation
STP	Stop, halts operation
PRR	Reset to first step in present program
!	Enter data and advance pointer (same as depressing Enter button)
CLR	Clear data (same as depressing Clear button)
MN1	Place controller 1 into manual mode
MN2	Place controller 2 into manual mode
PG1	Place controller 1 into program mode
PG2	Place controller 2 into program mode
DLD	Download - load programmer memory with data from computer (programmer must be in STOP mode)
Command set for any switch position:	
SP1	Read current setpoint #1
SP2	Read current setpoint #2
PR1	Read current process variable #1
PR2	Read current process variable #2
TIM	Read time to go in current step
STN	Read current step number
CTG	Read no. of cycles to go in current program
LTG	Read no. of loops to go in current nested loop
DIP	Read internal programmer and configuration DIP switch setting
SW1	Read internal DIP switch 1 (same as DIP)
SW2	Read internal DIP switch 2
LCK	Read position of keyswitch
ALM	Read alarm status
CTL	Read controller modes
SST	Select Step Mode
SCY	Select Cycles/End of Program
SLP	Select Loops
SS1	Select Setpoint 1
SS2	Select Setpoint 2
SL1	Select Limit 1
SL2	Select Limit 2
STM	Select Time
SE1	Select stored Events
EV1	Select event outputs
RQN	Service request enable (IEEE-488 only)
RQD	Service request disable (IEEE-488 only)
MOD	Read mode (Run, Stop, End of Program, or Diagnostic)
?	Used during programming to read program parameters and to advance program pointer
!	Enter step # and advance pointer
ULD	Upload - send entire programmer memory contents to computer (programmer must be in STOP mode)
PRR	Reset to first step in program being reviewed

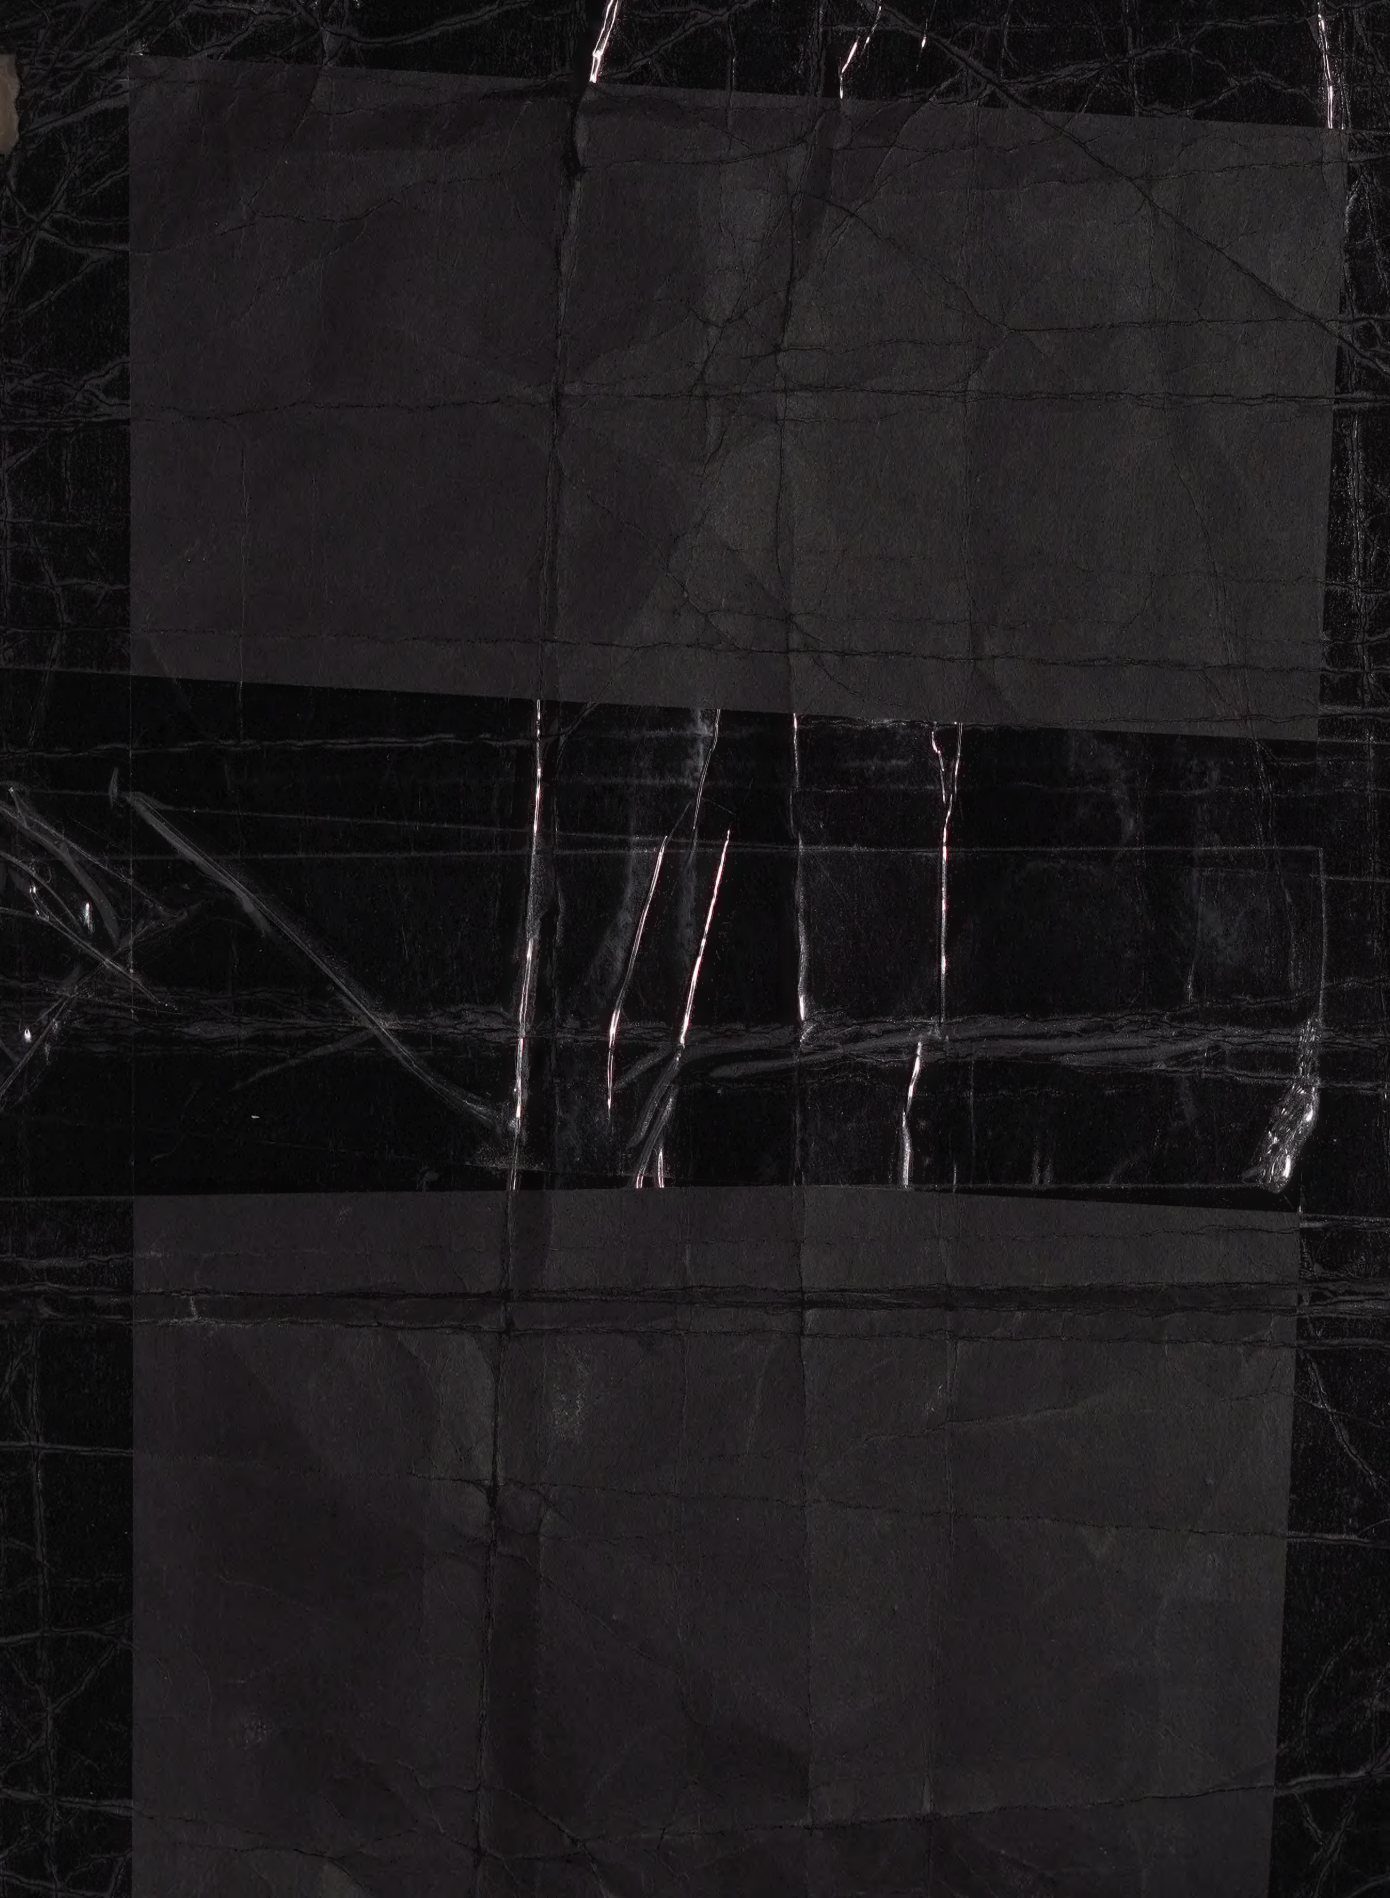

MODEL 510 CONTROLLER / SETPOINT PROGRAMMER
MODEL 520 DUAL CONTROLLER / SETPOINT PROGRAMMER
SPECIFICATIONS

CONTROLLERS

Input Ranges: (Each channel on Model 520)	Thermocouple inputs: types J, T, K, R and B standard, covering ranges from – 299°F to 3400°F, and – 184.0°C to 1871°C. See ordering guide for specific standard ranges. Many special ranges are also available—please consult the factory. Resolution: 0.1°C or F on ranges to 600°F, 0.1°C or 0.2°F on ranges to 799.8°F, 1°C or F on higher temperature ranges. RTD inputs: 100 ohm platinum, alpha = 0.00385. 0.1°C or F resolution Linear—% humidity inputs: 0.1% resolution.
Temp Display Resolution	0.1° (1° for Hi Temp Units)
Setpoint Resolution	0.1° (1° for Hi Temp Units)
Repeatability	± 0.1° (1° for Hi Temp Units)
Cold Junction Compensation	± 0.01 deg./degree over 15° to 35°C ambient.
Control Mode	DIGITAL—THREE MODE (Proportional, Integral and Derivative "PID") with digitally selectable Reset Windup Inhibit.
Display Update Rate	7.5 readings per second
Calibration Accuracy	± 0.5°C over entire range
Proportional Gain	Selectable by means of DIP Switches from 1 to 255.
Automatic Reset (Integral Action)	Selectable by means of DIP Switches from 0.00 Resets/Minute to 2.55 Resets/Minute
Rate (Derivative Action)	Selectable by means of DIP Switches from 0.0 to 0.7 Minutes
Reset Wind-Up Inhibit	DIP Switch selectable form 1% to 100% of the Proportional Bandwidth.
Time Proportioning Outputs	Heat & Cool Outputs: Logic outputs, max. load voltage 40V dc, 50 mA max. sink. (Suitable for driving photo-isolated solid state relay.) Cycle Time: Selectable 1 sec. to 255 sec. by means of DIP Switches.
Power Proportioning Output (Optional)	4-20mA, 0-16mA, 4-12/12-20mA or 0-8/8-16mA current loop. 12 Bit Resolution (3.91 microamp resolution) Maximum Loop Resistance: 1000 ohms.

SETPOINT PROGRAMMER (Channel 2 references on Model 520 only)

Setpoint range	Full range of controller
Program steps	91, divisible into any number of programs
Program cycles	0 to 9999
Step time duration	0 minutes to 99 hours and 59 minutes (Or: 0 seconds to 99 minutes and 59 seconds)
External events	Eight programmed open collector logic clamps, 40V dc max, 50mA max
Process deviation limits	± 0.1° to 999.9° (or units)
Indicators	Power on, Run, Program, Step select, Setpoint select, Alarm limit select, Step time select, Events select, Deviation alarm, 8 events, Remote computer active. For each controller: decrease (cool output on), increase (heat output on), and manual/program.
Numeric displays	Step; Channel 1 Setpoint/deviation limit; Channel 1 process variable; Channel 2 Setpoint/deviation limit; Channel 2 process variable; Step time/cycle number.
Program memory	Non-volatile; programs saved when power is lost. Lithium battery with over 5 year data retention.
Program restart	Automatic resumption of program when power is restored
Process deviation alarm action	- Flashing alarm limit indicator on front panel - Alarm output - Freeze program in current condition until deviation returns to within limits - Freeze program in current condition until manually reset (Halt)
Guaranteed soak	Program waits at end of step until process variable reaches within a selected value (± 1, ± 2 or ± 4 degrees or units, per single internal DIP switch). Select on either or both channels, or disable.
Control inputs	External inputs provided for Run, Stop and Reset. An external interrupt input is also available for IEEE-488 computer communications.

PHYSICAL CHARACTERISTICS

Size	8¾" (222mm) high; 19" (482mm) wide; 9" (229mm) deep
Mounting	Panel mount standard 19" rack with 8¾" rack space required
Weight	18 lbs. (8.2 Kg)
Power requirements	117V ac, 50-60 Hz, 275 Watts
Operating Temperature	0-40°C

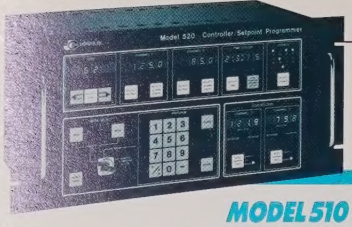

ORDERING INFORMATION

MODEL 510 CONTROLLER / SETPOINT PROGRAMMER

ORDER NO.

Time proportioning (heat & cool) outputs with one temperature range (select with dash number), 91 step setpoint program memory, 8 event outputs, programmable tracking alarm limits, locking operation keyswitch, and RS-232C program upload/download capability. **510–***

MODEL 520 DUAL CONTROLLER / SETPOINT PROGRAMMER

Time proportioning (heat & cool) outputs on each loop with one temperature range for each control loop (select with two dash numbers), 91 step setpoint program memory, 8 event outputs, programmable tracking alarm limits on each channel, locking operation keyswitch, and RS-232C program upload/download capability. **520–***

*RANGE AND SENSOR ORDERING

With Time Proportioning Outputs

Thermocouple Sensors

TEMPERATURE RANGE	*SENSOR*	*DASH NO.*
– 99.0°F to 600.0°F (– 73.0 to 315.0°C)	J	–315CJ
– 32.0°F to 799.8°F (0 to 600.0°C)	J	–600CJ
– 99.9°F to 600.0°F (– 99.9 to 315.0°C)	T	–315CT
– 299.0°F to 393.0°F (– 184.0 to 200.0°C)	T	–200CT
0°F to 2000°F (– 15 to 1100°C)	K	–2000FK
0°F to 2500°F (– 18 to 1371°C)	K	–2500FK
0°F to 3000°F (– 15 to 1650°C)	R	–3000FR
0°F to 3400°F (– 18 to 1871°C)	B	–3400FB

100 Ohm Platinum RTD (European curve, Alpha = 0.00385)

TEMPERATURE RANGE	*DASH NO.*
– 99.9°F to 608.0°F (– 99.9 to 320.0°C)	–RTD

Linear—% Humidity

RANGE	*DASH NO.*
0.0 to 100.0%	–RH

With Power Proportioning Outputs

Add suffix "P" to dash number. **–P**

(**Example:** 520-488-315CTP/RH-S: Model 520 with optional GPIB Interface, – 99° to + 315° type T thermocouple input and power proportioning output on one loop, and linear-% humidity on second loop with time proportioning output only, and optional rack slides)

OPTIONS

IEEE-488 Interface **–488**

Built-in GPIB Interface, with bus connector conforming to IEEE-488-1978 standard.

RS-422A Serial Interface **–422A**

Built-in RS-422A Serial interface system, 300-19.2K baud; includes address switch for multidrop. Up to 99 Model 510s and/or 520s may be connected on a single RS-422A loop. Photoisolation between all 510s or 520s and the 422A network is provided.

(Note: the standard RS-232C interface remains installed and operable even when a -488 or -422A option is added)

Rack Slides **–S**

ACCESSORIES

Model 285 PromSave **285**

Stores and retrieves setpoint programs created on the Model 510 or 520 to/from removable, reusable EEPROM cartridges. Each cartridge stores entire program contents (up to 91 steps) of a 510/520 including deviation limits and events. Includes auto compare and verification. Communicates with 510/520 via RS-232C serial port. Also operates with JC Systems Model 240 Dual Setpoint Programmer.

Event Relay Board **A1728**

Provides 8 event and 2 alarm outputs (mechanical NO/NC relay contacts). Independent on-board 24V dc power supply. Directly interfaces with programmer/controller photocoupled event/alarm outputs.

JC SYSTEMS

JC SYSTEMS INC.
11175 Flintkote Ave., San Diego, CA 92121
(619) 453-9980 / FAX 619 453 2115

YOUR FEEDBACK WELCOME!

We welcome your comments and suggestions regarding this technical manual and the equipment it describes. Please contact:

Customer Service Dept.
JC Systems, Inc.
11175 Flintkote Ave.
San Diego, CA 92121

Thanks for your help.

Digitized by the Internet Archive
in 2025

https://archive.org/details/manualsplus_11048

TABLE OF CONTENTS

CHAPTER 1. INTRODUCTION.

HOW TO USE THIS MANUAL.....1-1
SYSTEM DESCRIPTION.....1-2
SYSTEM APPLICATIONS.....1-3
PRINCIPAL COMPONENTS.....1-4

CHAPTER 2. MANUAL CONTROLLER OPERATION

UNPACKING.....2-1
MOUNTING.....2-1
CONNECT ELECTRICAL POWER.....2-1
CONNECT TEMPERATURE INPUTS.....2-2
CONNECT TIME-PROPORTIONING OUTPUTS.....2-3
CONNECT POWER PROPORTIONING (CURRENT LOOP) OUTPUT...2-4
CONNECT ALARM OUTPUTS TO PHOTO-ISOLATED SSR.....2-7
SELECT INPUT MODE.....2-7
SELECT EVENTS PRESET FOR MANUAL OPERATION.....2-7
RUN SYSTEM AS A MANUAL CONTROLLER.....2-7
TURN ON THE SYSTEM.....2-9
HOW TO DETECT A FAILURE.....2-9
SELECT MANUAL MODE.....2-10
ENTER A SETPOINT.....2-10
ENTER DEVIATION ALARM LIMIT.....2-10
SHUT DOWN CONTROLLER.....2-11

CHAPTER 3. PROGRAMMED CONTROLLER OPERATION

FACTORY SWITCH SETTINGS.....3-1
CONNECT EVENTS INTERFACE.....3-4
SET DIP SWITCHES.....3-5
ENTER A PROGRAM.....3-8
ENTER THE PROGRAM AT MODEL 520 FRONT PANEL.....3-11
ENTER A PROGRAM WITH NESTED LOOPS.....3-15
USING THE NESTED LOOP CAPABILITY.....3-15
PROGRAMMING A NESTED LOOP.....3-18
STORE THE PROGRAM.....3-20
REVISE THE PROGRAM.....3-20
RUN THE PROGRAM.....3-22
ACCESS A STEP IN OPERATE MODE.....3-22
START OPERATION.....3-23
MONITOR DISPLAYS.....3-23
RESPOND TO DEVIATION ALARM.....3-24
RESPOND TO PROBE OPEN INDICATION. 3-25
RESPOND TO INVALID SETPOINT INDICATION.....3-25
STOP THE PROGRAM FOR REVIEW.....3-25
RESTART PROGRAM.....3-26

CHAPTER 4. USING THE PROMSAVE ACCESSORY

HOW THE PROMSAVE WORKS.....4-1
ESTABLISH COMMUNICATIONS INTERFACE.....4-2
SAVE MODEL 520 PROGRAM TO CARTRIDGE.....4-3
LOAD PROGRAM INTO MODEL 520 FROM CARTRIDGE.....4-3
COMPARE CARTRIDGE AND MODEL 520 MEMORY CONTENTS.....4-4
INTERRUPT PROMSAVE (RESET).....4-4

CHAPTER 5. REMOTE PROGRAMMING AND OPERATION

OPERATING WITH EXTERNAL CONTROL INPUTS.....5-1
REMOTE COMPUTER INTERFACE VIA RS-232 SERIAL CONNECTION.....5-3
REMOTE COMPUTER INTERFACE VIA RS-422A SERIAL NETWORK OPTION.....5-8
FORMAT FOR ENTERING RS-422A COMPUTER COMMANDS.....5-11
REMOTE COMPUTER INTERFACE VIA IEEE-488 OPTION.....5-12

CHAPTER 6. MAINTENANCE AND CALIBRATION

PERFORM PREVENTIVE MAINTENANCE.....6-1
PERFORM CORRECTIVE MAINTENANCE.....6-1
RUN DIAGNOSTICS.....6-1
USING DIAGNOSTICS.....6-2
LIST OF DIAGNOSTIC TESTS.....6-3
CALIBRATE CONTROLLER.....6-8
ADJUST CONTROLLER REFERENCE VOLTAGE AND BALANCE....6-10
FRONT PANEL SWITCH AND DISPLAY TESTS.....6-11

APPENDICES

A. CONTROLLER PID PARAMETER ADJUSTMENTS.....A-1
B. PROGRAM WORKSHEET.....B-1
C. REFERENCE DRAWINGS.....C-1
D. MODEL A2014 MULTI-PROGRAMMER SYNCHRONIZER.....D-1

LIST OF FIGURES

1-1: Model 520 Programmer/Controller Front Panel.....1-3

2-1: Rear Panel Layout -- Standard Configuration.....2-2
2-2: Connecting Time Proportioning Outputs 2-3
2-3: Controller Board DIP Switch Locations.....2-5
2-4: Control Logic Board DIP Switch S1 Location.....2-8
2-5: Front Panel Displays and Switches.....2-8

3-1: Front Panel Buttons, Displays and Indicators.....3-3
3-2: Rear Panel Connectors and Terminals.....3-4
3-3: Z33 DIP Switch Settings (for Standard Model 520).....3-5
3-4: Control Logic Board DIP Switch S1.....3-7
3-5: Profile for Program Listed on Sample Worksheet.....3-9
3-6: Program Worksheet with Program Entered.....3-10
3-7: Nested Loop Flow Chart and Profile.....3-16
3-8: Worksheet for Program Sample with Nested Loop.....3-17

4-1: Model 285 PromSave Controls and Indicators.....4-1

5-1: Rear Panel Terminals and Connectors.....5-2
5-2: Control Logic Board A1852/1550.....5-3
5-3: RS-422A Serial Communication Connections.....5-8
5-4: RS422A Programmer Interface Board A1566.....5-10
5-5: Format for Remote Computer Commands.....5-11
5-6: IEEE-488 SRQ and Device Address Board A1848.....5-12

6-1: Front Panel Displays and Indicators.....6-2
6-2: Display Positions for -590.2 Diagnostics Test.....6-7
6-3: Controller Calibration Points.....6-8

LIST OF TABLES

2-1: ERROR VALUE AND CORRESPONDING CURRENT OUTPUT FOR REVERSE ACTION.....2-6

3-1: FACTORY SETTINGS FOR CONTROLLER DIP SWITCHES.....3-1
3-2: FACTORY SETTINGS FOR CONTROL LOGIC BOARD DIP SWITCH S1..3-2
3-3: CONTROLLER SWITCH SETTINGS. 3-3
3-4: PIN ASSIGNMENTS FOR EVENTS CONNECTIONS.....3-5
3-5: COMPARISON OF SIMPLE AND NESTED LOOP PROGRAM.....3-17

5-1: EXTERNAL CONTROL SIGNAL CONNECTIONS.....5-2
5-2: COMMAND SET FOR OPERATE OR REMOTE MODE KEYSWITCH POSITIONS.....5-5
5-3: COMMAND SET FOR REMOTE COMPUTER ACTIVE KEYSWITCH POSITIONS.....5-6
5-4: RS-422A PORT PIN ASSIGNMENTS.....5-9

6-1: SUMMARY OF DIAGNOSTIC TESTS.....6-3

Change Notice

Dip Switch S3 on the A1970 Controller board now sets an adjustable ID (Integral-Derivative) band that disables proportional action between the selected Heat and Cool proportional bands. Revise the technical manual for the Model 510 and 520 Programmer/Controller to reflect the following changes.

Page	Item	Change to
2-8	Table 3-1, Switch No. S3	Description: ID Band Setting: 0.5 (Bits 1 & 3 up)
3-4	Table 6-1, Test No. -590.6	Item Tested: ID Band (No Proportional Action) Switch S3 Description: Displays the ID band in degrees (or units) expressed as the decimal equivalent of the binary value selected on switch S3. This value can range from 0.0 to 6.3, as only 6 bit positions of the switch are used.
A-13	Figure A-10, Switch S3	Change callout below S3 from"NULL B.W." to "ID BAND"

A-17 Para. A.4.8, change to read as follows:

A.4.8. Set ID Band (No Proportional Action Band), Switch S-3.

Switch S3 is used to set the value for the ID band between the Heat and Cool proportional bands. The ID band creates a zone between Heat and Cool proportioning where the proportional action is disabled. The Integral and Derivative actions continue to function in the ID band. The value selected — 0.0 to 6.3 degrees or units — offsets the Heat proportional band *down* from the setpoint. It offsets the Cool proportional band *up* from the setpoint.
A small amount of ID band can be very helpful in adjusting operating parameters for a chamber system. A value of 0.5 (S3 bits 1 and 3 both up) is suggested.

A-18	Table A-1, Switch No. S3	Description: ID Band Setting: 0.5 (Bits 1 & 3 up)
C-3&4 thru C-10	S3 Callouts	Change *from* "STAGING", "NULL", "NULL B.W.", etc. *to* "ID BAND". Also, wherever the binary values for the bits are shown, change *from* "1, 2, 4, 8, 16, 32" *to* ".1, .2, .4, .8, 1.6, 3.2".

Note

S3 was previously used to control staging or select a null bandwidth, which in turn regulated the auxiliary output. New circuitry now controls staging and the null bandwidth has been replaced with the ID band. The previous null output (AUX on the rear panel) now operates as follows:
A. When the setpoint is within allowable limits and the input to the controller is not an open circuit (no P.O.P. alarm present), the AUX output is active and clamped to ground (OK STATUS).
B. When the setpoint is outside allowable limits or the input to the controller is an open circuit (probe open, P.O.P. alarm condition exists), the AUX output goes inactive (HI state).

Reset action is now clipped.

If the process value (temperature or relative humidity) exceeds the setpoint by 3.2 units, the integral action (reset) overshoot is clipped so that the system can rapidly settle to the final setpoint value. This performance improvement does not directly affect PID parameters.

Chapter 1. Introduction.

1.1. HOW TO USE THIS MANUAL.

This manual describes how to use the JC Systems Model 510 Single-Channel Programmer/Controller and the Model 520 Dual-Channel Programmer/Controller.

1.1.1. How to Find Information.

Table of Contents

This reference aid lists major topics in the order they appear. It's an outline of the manual that also shows the page on which the discussion of each topic starts. All the figures and tables are listed separately at the end of the table of contents.

Index

The index is on the very last pages of the manual. It indexes each paragraph and subparagraph of the manual in alphabetical order.

Reference Drawings

Electrical schematics and assembly drawings of the programmer/controller's principal components are grouped together at the back of the manual, in the last pages immediately before the index.

Appendixes

Appendix A provides detailed instructions for fine-tuning PID parameters. Appendix B contains a sample program worksheet. You can make as many copies of this as you need for your own use. Appendix C contains copies of schematics and assembly drawings for the Model 510/520 and related components.

1.1.2. How the Manual Is Organized.

The first chapter summarizes the applications, components and features of the Model 510 or 520 Programmer/Controller systems, usually referred to simply as "the Model 520". (Where material applies only to one configuration, this will be stipulated; for example, "Model 520 only".)

Chapters 2 through 5 each describe a different application, beginning with manual controller operation and progressing to remote computer operation. Each chapter builds on the information in the preceding chapter. The last chapter of the manual describes maintenance and calibration of the system.

1.1.3. Conventions Used in This Manual.

1. Names of pushbutton switches and displays are shown in ALL CAPITAL LETTERS. If the name appears on the equipment, spelling is exactly as shown there.

   Example: SELECT SETPNT

2. If an item is shown on a figure, the figure callout (item number) appears in parentheses after the item name is mentioned for the first time in each paragraph or step.

   Example: Press SELECT SETPNT button (Figure 2-5, Item 8).

   If the figure number does not appear with the item number, the item is on the last figure number referenced.

   Example: Refer to Figure 2-5 and proceed as follows.
   1. Press SELECT SETPNT button (8).

3. Standard abbreviations are not defined. However, the first time a non-standard abbreviation or acronym is used, its meaning is spelled out in parentheses.

   Example: PCB (printed circuit board).

1.2. SYSTEM DESCRIPTION.

The Programmer/Controller (Figure 1-1) is available in two models. The Model 510 consists of a single-channel programmer and a single-channel setpoint controller. The Model 520 consists of a dual-channel programmer and dual-channel setpoint controller. Except for the fact that the Model 510 has only one channel, all programming and operating procedures apply to both. Where differences do arise, these are mentioned in the text. Unless otherwise noted, illustrations show the Model 520.

Para. 1.2 (Cont.)

This JCS product includes many features that result in easier use and more effective applications. These include random access to any step within the programmer's memory; internal nested looping capability in addition to repeating the complete program, soft start to prevent thermal stress to devices under test; switch-selectable deviation limits; a split-range current loop for reverse/direct output; long-life battery backup for program memory, and many other features. (See the product data sheet provided at the beginning of this manual for more information on features.)

1.3. SYSTEM APPLICATIONS.

The Model 520 is designed to program and perform direct digital control of temperature and related process values, such as pressure or humidity. The Model 520 comes equipped with a RS-232C interface. IEEE-488 or RS-232C/RS-422A communication interfaces are available as options. Typical applications of the Model 520, some of which depend on the options and accessories available, are briefly described in the following paragraphs. The chapter describing each application in full is referenced in the paragraph heading.

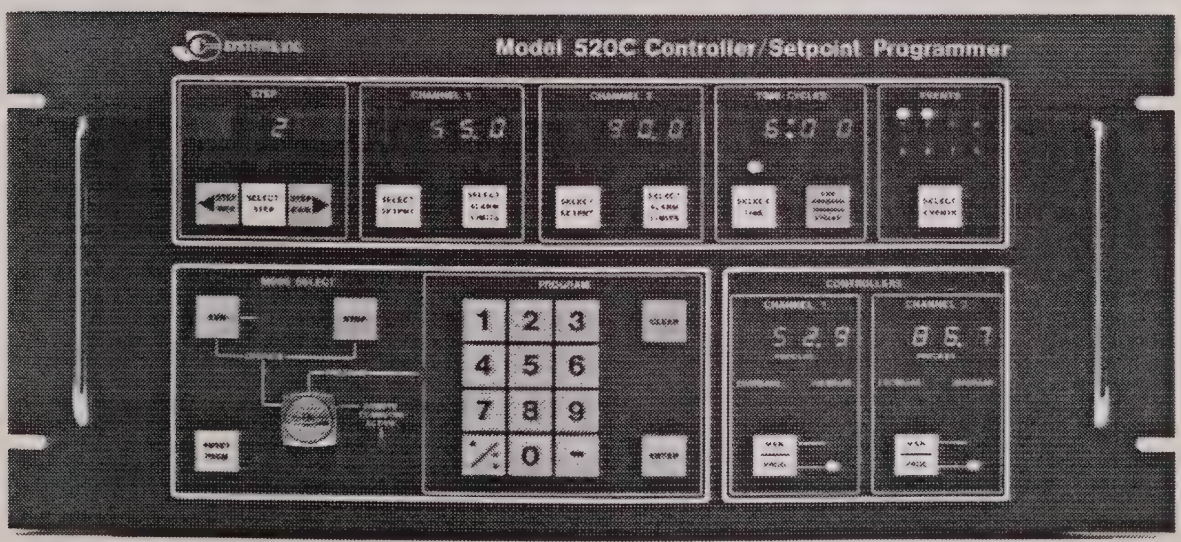

Figure 1-1: Model 520 Programmer/Controller Front Panel.

1.3.1. Manual Controller Operation - Chapter 2.

The controller portion of the Model 520 is used by itself as a pair of single-loop controllers. Constant-temperature setpoints can be entered, along with deviation alarm limits. The setpoints and process values are always displayed.

1.3.2. Programmed Controller Operation - Chapter 3.

The front panel keyboard is used to enter a program into the Model 520 program memory. The controller channel(s) then exercises direct digital control of the process value. All features can be used in programmed operation. The entered program remains in the Model 520 memory until revised. A helpful feature: any parameter of any program can be changed at any time -- you don't have to reenter the whole program to change one parameter.

1.3.3. Program Storage with PromSave™ - Chapter 4.

One or more programs stored in Model 520 memory can be stored in and retrieved from the PromSave™. This JC Systems accessory uses removable, reusable EEPROM (electrically erasable, programmable, read-only memory) cartridges that hold the entire content of a Model 240, 510, or 520 programmer's memory.

1.3.4. Remote (Computer) Operation - Chapter 5.

A remote computer interfaces with the Model 520. Using the 520's standard RS-232C serial interface or either of the interface options (RS-422A or IEEE-488), the remote computer exercises complete control of the Model 520 programming and operating functions.

1.4. PRINCIPAL COMPONENTS.

Principal components of the system are its front panel, which contains the operating controls; the rear panel, where electrical connections are made, and the printed circuit boards (PCB) within the cabinet. Some switches, which must be set before beginning operation, are mounted on these PCB. Procedures for making the electrical connections and setting switches are given in the applicable chapter noted above.

Chapter 2. Manual Controller Operation.

2.1. INFORMATION PROVIDED.

This chapter describes using the Model 520 as a manual setpoint controller with a deviation alarm. It includes unpacking and mounting the system, connecting electrical power, thermocouples, and controller outputs. It also describes the controls and displays used for manual controller operation, as well as the DIP switch settings required for correct controller operation.

2.2. UNPACKING.

Remove all protective packing and tiedowns from the Model 520 and remove the programmer/controller from its shipping container.

2.3. MOUNTING.

2.3.1. Rack Mounting.

Mount the Model 520 in a standard 19-in. electronic rack, allowing at least 8-3/4 in. rack space to accommodate its height.

2.3.2. Bench Mounting.

For bench use, be sure to install rubber feet (available at no charge from JC Systems) on bottom of the Model 520 to prevent damage to the benchtop.

2.4. CONNECT ELECTRICAL POWER.

Plug in power cable to 117V, 50/60 Hz grounded socket (Figure 2-1, Item 1).

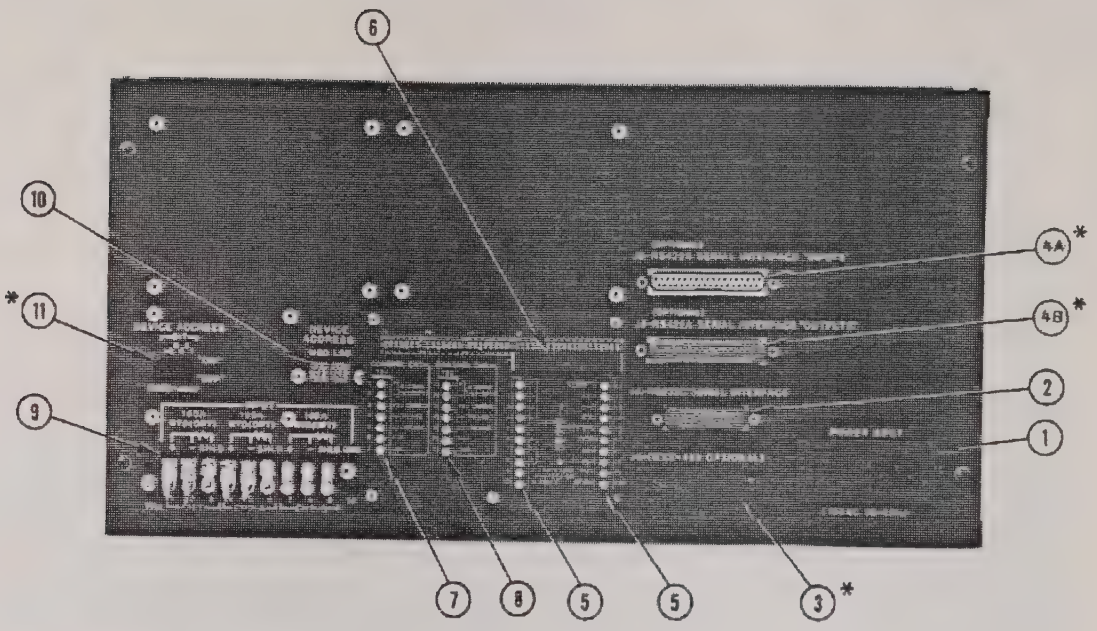

* OPTIONAL COMPONENTS - BLANK PANEL IF NOT INSTALLED

Figure 2-1: Rear Panel Layout -- Standard Configuration

2.5. CONNECT TEMPERATURE INPUTS.

Connect thermocouple or RTD (resistance temperature detector) leads at temperature input terminal board TB4 (Item 9) on the rear panel. A label on the rear panel specifies the temperature input configuration of your unit.

2.5.1. Thermocouples.

Use terminals 1 and 2 for single-channel Model 510 or Channel 1 of dual-channel Model 520, and terminals 4 and 5 (also marked CH2-A) for Channel 2. Terminals 7-10 (marked CH2-B) are not used in either the Model 510 or 520 configuration.

2.5.2. RTD Sensors.

Use the same terminals as described for thermocouples. When using two-wire RTD sensors, connect one sensor wire each to the first and third terminals (for example, 1 and 3 of TB4). Then connect the first and second terminals (1 and 2 in our example) with a short jumper wire.

When using three-wire RTD sensors, connect the two same-colored wires to the first and second terminals. Connect the remaining wire to the third terminal; if a shield is present, connect that to terminal 10.

2.6. CONNECT TIME-PROPORTIONING OUTPUTS.

NOTE

If your Model 520 is equipped with the power proportioning (current loop) option and you want to use power proportioning instead of time proportioning, skip this paragraph and proceed to the next one, which describes current loop output connections.

Connect controller channel time-proportioning outputs (located on terminal boards on the rear panel) to the heat and cool SSR (solid-state relays) as shown in Figure 2-2. Make the connections at terminals 3 thru 5 of the applicable controller terminal board. Use TB1 for single-channel Model 510 or for Channel 1 of dual-channel Model 520, and TB2 for Channel 2. Figure 2-2 shows connections for typical applications.

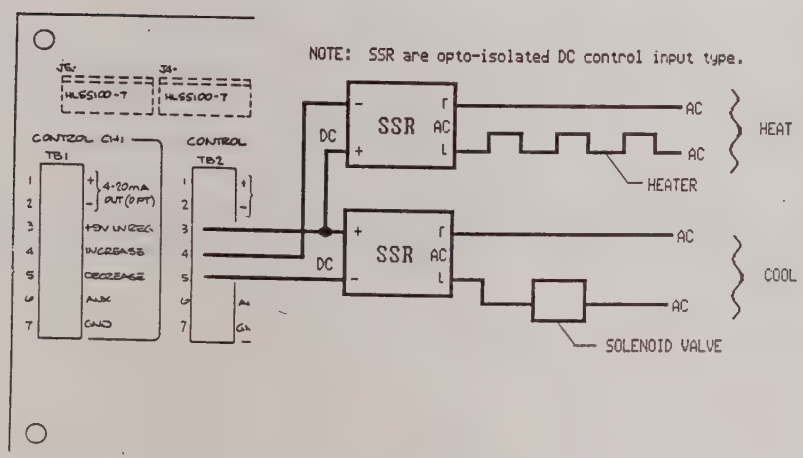

Figure 2-2: Connecting Time Proportioning Outputs (Typical Applications)

2.7. CONNECT POWER PROPORTIONING (CURRENT LOOP) OUTPUT OPTION.

NOTE

This type of output is available only on units equipped with the Model 1034 current loop option.

2.7.1. Connect Power Proportioning Outputs.

Connect the 4-20 mA proportional current loop to terminals 1 and 2 of the applicable controller terminal board on the rear panel. (Use TB1 for single-channel Model 510 or for Channel 1 of dual-channel Model 520, and TB2 for Channel 2).

NOTE

Heat and cool time proportioning outputs with one-second cycle time are also available when the current loop output is installed.

2.7.2. Set Cycle Time Switch.

When the power proportioning feature is used (ribbon cable connected between A1034 current loop and A1270 controller PCB), the controller cycle time DIP switch (S1) must be set to 255 (all bits up). (If you have a Model 520 with power proportioning on both channels, you will need to set the switch on both controller boards.) This switch is located on the controller PCB (Figure 2-3, Item 1). To gain access to the switch, loosen the four camlock fasteners securing the top cover and remove it.

The setting of 255 defaults the time proportioning output period to 1 second as long as the power proportioning output is installed. If power proportioning is removed, the time proportioning period reverts to 255 seconds (the switch setting), and *must* be reset for correct time proportioning operation.

If S1 is set to any value other than 255 when power proportioning output is installed, the process value display will read "LOOP". To remove the LOOP display, set S1 to 255.

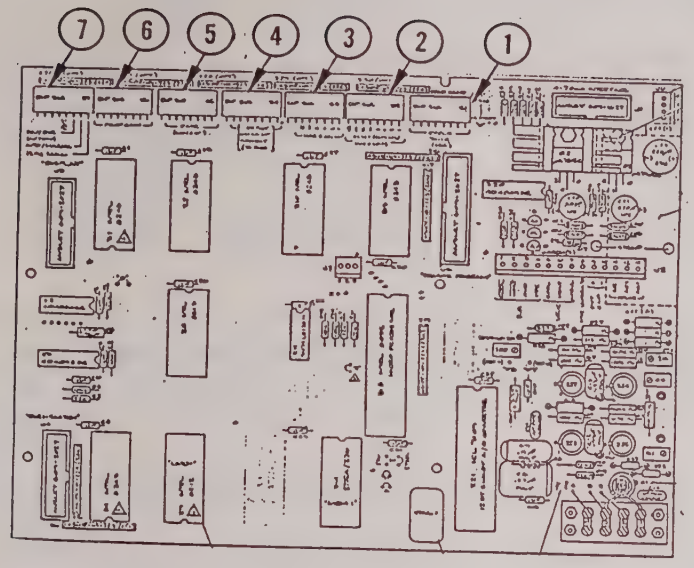

Figure 2-3: Controller Board DIP Switch Locations

2.7.4. Select Power Proportioning Operating Modes.

Select operating modes for the power proportioning output by setting DIP switch S7 on the controller board (Figure 2-4, Item 7) as specified below. The "normal" setting is the factory setting in all cases. If you have a Model 520 with power proportioning output on both channels, you will need to set the switches on both controller boards.

2.7.4.1. Select Single-Current or Split-Range Output (S7-1).

1. Set S7-1 HI (up position) to select single-current (normal) operation. In this position, 4 mA is null output. Current output from 4mA to 20mA corresponds linearly to required output action from 0 to 100%.
2. Set S7-1 LO (down position) to select split-range operation. In this position, current output is 12-20 mA for 0-100% heat requirement and 12-4 mA for 0-100% cooling requirement. The null output current value is 12 mA.
3. Table 2-1 shows what effect the position of Switch S7-1 has on current loop output.

TABLE 2-1: ERROR VALUE AND CORRESPONDING CURRENT OUTPUT FOR REVERSE ACTION

ERROR (% BANDWIDTH)	OUTPUT CURRENT, mA	PERCENT POWER
OUTPUTS IN SINGLE-CURRENT OPERATION (S7-1 HI)		
+100.0	20.0	100
+50.0	12.0	50
0.0	4.0	0
-50.0	4.0	0
-100.0	4.0	0
OUTPUTS IN SPLIT-CURRENT OPERATION (S7-1 LO)		
+100.0	20.0	100 HEAT
+50.0	16.0	50 HEAT
0.0	12.0	0
-50.0	8.0	50 COOL
-100.0	4.0	100 COOL

2.7.4.3. Select Reverse or Direct Action (S7-3).

1. Set S7-3 HI (up position) to select reverse (heating) action. In this position, the controller decreases the output as the process value approaches the setpoint from a temperature *below* the setpoint.
2. Set S7-3 LO (down position) to select direct (cooling) action. In this position, the controller decreases the output as the process value approaches the setpoint from a temperature *above* the setpoint.

2.7.4.4. Select Automatic or Manual Current Loop and Time Proportioning Function (S7-2).

1. Set S7-2 HI (up position) to select automatic (normal) current loop and time proportioning functions. This is the normal operating position for the controller.
2. Set S7-2 LO (down position) to select manual current loop and time proportioning functions. In this position, the operator can manually select the amplitude of current output by changing the Model 520 setpoint setting from -100 to +100%. When this function is selected, the controller does not operate as a closed-loop system. In other words, it does not take feedback from the process and correct for deviations.

2.8. CONNECT ALARM OUTPUTS TO PHOTO-ISOLATED SSR.

Connect alarms to appropriate terminals of TB3 (Figure 2-1, Item 5) as shown in Table 2-1. (If you're using the JCS A1748 Event Relay Board Accessory, you can connect the cable supplied with that accessory directly to panduit J1 on the Model 520 rear panel (2); the pin assignments correspond with the terminals). All outputs are open collector logic type limited to 50 mA and 50 Vdc maximum. TB3-12, the internal +9V source, should be used as the positive source for photo-isolated solid-state relays (SSR) on the alarm output drives.

Make connections to TB3 terminals 10 thru 12 only at this time. (Remaining programmer outputs are used elsewhere, and will be explained later.) Terminal No. 10 is alarm #2 output; No. 11 is alarm #1 output, and No. 12 is the +9 Vdc unregulated internal voltage (100 mA max) used as source voltage for SSR.

2.9. SELECT TEMPERATURE OR LINEAR INPUT MODE (S7).

Controller DIP Switch S7 (Figure 2-3, Item 7) positions 1-3 select power proportioning output modes as previously described in Para. 2.7.4. On Model 520's configured for temperature applications, S7 bit 4 sets control circuitry to function in either ^{o}C when up or ^{o}F when down.

On Model 520's configured for linear input applications, S7-4 is preset to the required value at the factory. S7-4 is set HI for 4-20 mA input current loop operations. Note that an external resistor (25.5 Ohms, 1%, 1/2 W) must be used with the 4-20 mA input. S7-4 is set LO for 0-500 mV input.

S7 bits 5 thru 8 are not used.

2.10. SELECT EVENTS PRESET FOR MANUAL OPERATION.

The setting of the Control Logic Board DIP switch S1 positions 2 and 3 (Figure 2-4, Item 1) determines the status of events during manual operation. Bit 3 determines if all events will be ON or OFF. If bit 2 is set to PRESET EVENTS, then the status of events upon entering manual operation will be as selected by bit 3. If Bit 2 is set to HOLD EVENTS, event status will not change upon entering manual operation regardless of the bit 3 setting.

2.11. RUN SYSTEM AS A MANUAL CONTROLLER.

To run the system as a manual controller, refer to Figure 2-5 and proceed as specified below. Numbers in parentheses refer to item numbers shown on Figure 2-5. If you are using a dual-channel system, you can operate one controller in the manual mode while the other is in the program mode. If you have a single-channel system, the references in the following paragraphs to the "appropriate" or "desired" channel do not apply.

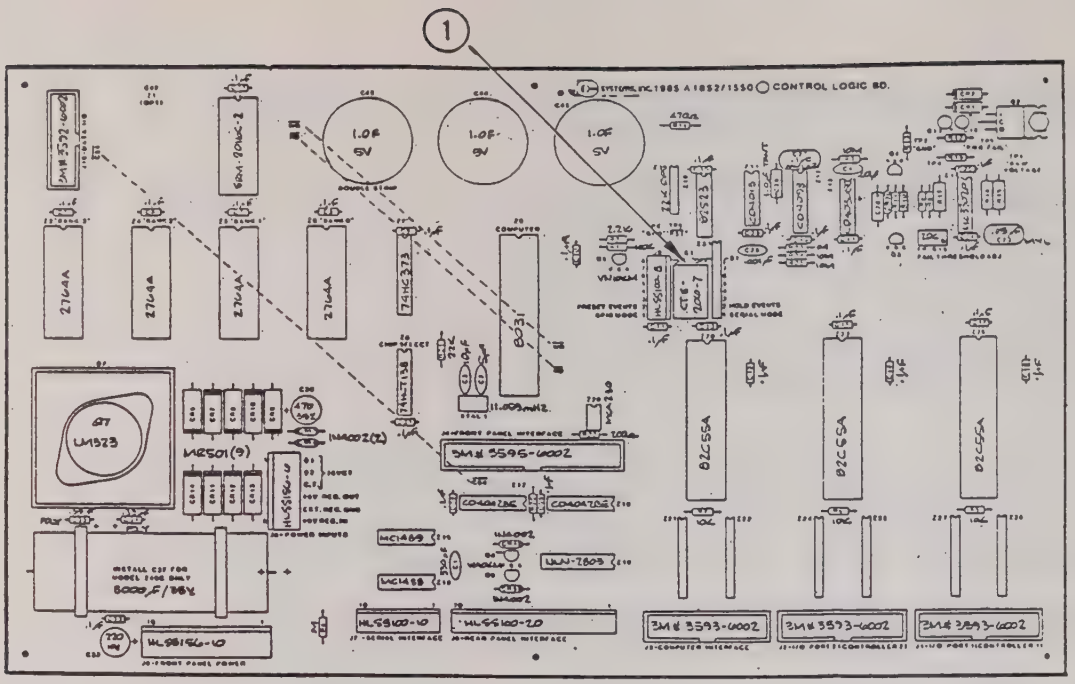

Figure 2-4: Control Logic Board DIP Switch S1.

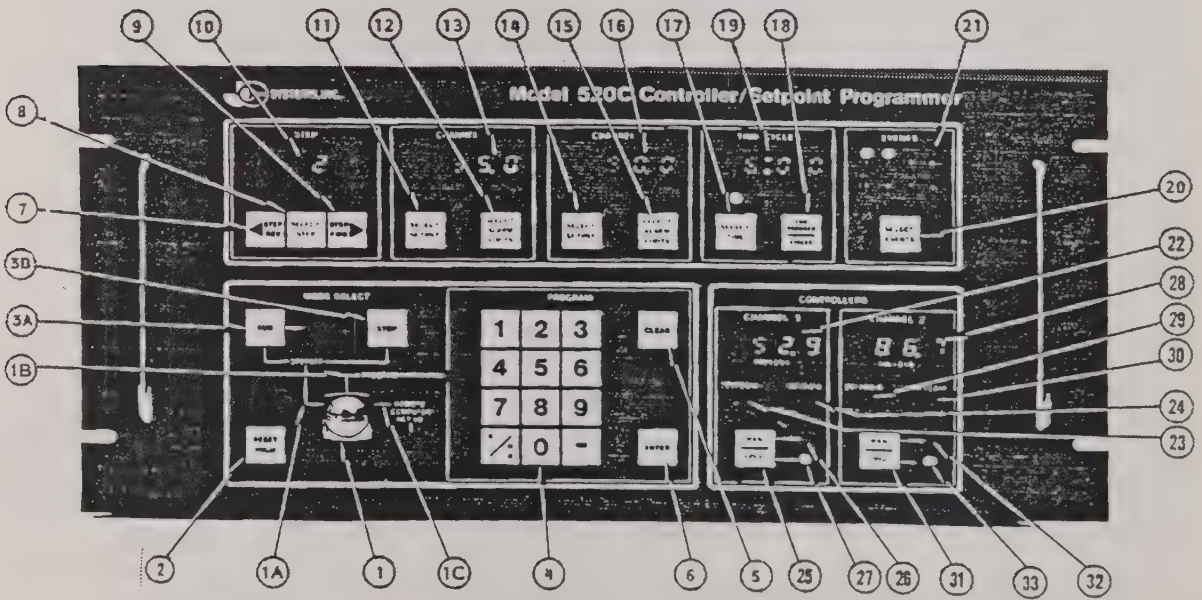

Figure 2-5: Front Panel Displays and Switches.

2.11.1. Turn on the System.

1. Turn on power at rocker switch on rear panel.
2. Place MODE SELECT keyswitch (1) in either the OPERATE or PROGRAM position.

2.11.2. How to Detect a Failure.

2.11.2.1. Alarm Conditions.

The following conditions result in an alarm while operating in manual mode.

1. *Alarm Limits Exceeded.* The process variable is outside the range allowed by the selected alarm limits.
2. *Probe Open (P.OP.).* A temperature controller's probe is disconnected, open, or defective.
3. *Setpoint Fail (---.-).* The setpoint is outside of the controller's range.

2.11.2.2. Alarm Actions.

When an alarm condition is present, the following actions occur.

1. The applicable channel's SELECT ALARM LIMITS LED flashes for alarm condition 1 (limits exceeded). The SELECT SETPNT LED flashes for alarm conditions 2 (probe open) and 3 (out-of-range).
2. The applicable channel's alarm output on TB3-10 or -11 goes low.

2.11.2.3. Probe Open.

If a probe is open, the following actions occur.

1. The CODE "P. OP." appears in the controller's PROCESS display (22 or 28) and the applicable channel's SELECT SETPNT LED flashes.
2. Heat and Cool outputs automatically turn off.

2.11.2.4. Invalid Setpoint.

If the setpoint entered by the operator is outside the operating range of the Model 520 controller(s), the following actions occur. (Diagnostics can be used to determine the Model 520's operating range -- refer to Chapter 6.)

1. The applicable channel's SELECT SETPNT LED flashes.
2. A series of dashes (---.-) appears in the controller's PROCESS display (22 or 28).
3. The Heat and Cool outputs automatically turn off.

2.11.3. Select Manual Mode.

If the controller manual mode LED (26 or 32) for the desired controller channel is not lighted to indicate that the controller is in manual mode, select manual operation as follows.

1. If the keyswitch is in OPERATE position and the Model 520 is running (RUN LED lighted), press STOP button (3B).
2. Press the MAN/PROG button (25 or 31) to change to manual operation. MAN LED (26 or 32) will light.

NOTE

You can operate manually with the MODE SELECT keyswitch in the PROGRAM position. However, if you try to operate manually with the keyswitch and controller mode both set to PROGRAM, you will overwrite the setpoint information for that channel stored in the Model 520.

2.11.4. Enter a Setpoint.

1. Press SELECT SETPNT button (11) for appropriate controller channel. SELECT SETPNT LED will light.
2. Use keyboard (4) to input the desired setpoint value, which will be displayed in the window (13) above the SELECT SETPNT button. If the setpoint is out of range, the controller's process display will show a series of dashes (----). (See Para. 2.11.2.3).
3. If the displayed setpoint is incorrect or out of range, press clear to erase the value and reenter the desired value.
4. Once the displayed setpoint is correct, press ENTER button (6) to record the setpoint in memory and start controller operation.

2.11.5. Enter Deviation Alarm Limit.

Press SELECT ALARM LIMITS button (12 or 15). Pointer LED will light. Use the keyboard to input the deviation alarm limit in the same fashion as you entered the setpoint.

In manual operation, the Model 520 deviation alarm function is enabled whenever the process temperature is outside the deviation limits.

2.11.6. Shut Down Controller.

To shut down a controller operating in manual mode, proceed as follows.

1. Press SELECT SETPNT button (11 or 13) for appropriate controller channel. Pointer will light.
2. Press CLEAR button (5). Display will show a row of dashes (---.-).
3. Press ENTER button (6). Controller will shut down.

Chapter 3. Programmed Controller Operation.

3.1. INFORMATION PROVIDED.

This chapter describes how to plan and record a simple program using the program worksheet, how to enter the program, and how to operate the controller using that program. Before the program can be entered, events must be connected and the setting of certain switches must be selected, so these procedures are described first.

3.2. FACTORY SWITCH SETTINGS.

3.2.1. Controller Dip Switches.

Each Model 520 leaves the factory with the controller DIP switch settings shown in Table 3-1. You can use any Model 520 operating mode with these settings. If you need to change these settings, refer to Appendix A. You can use the diagnostics feature to determine the switch settings as explained in Para. 3.2.3 below.

TABLE 3-1: FACTORY SETTINGS FOR CONTROLLER DIP SWITCHES.

SWITCH NUMBER	DESCRIPTION	SETTING
S1	Cycle Time	2 seconds (bit 2 up)
S2	Automatic Reset	128 x 10 -2 (bit 8 up)
S3	Null Bandwidth	2 (bit 2 up)
S4	Reset Windup Inhibit	10 (bits 2 and 8 up)
S5	Rate (Derivative)	Off (0 -- all bits down)
S6	Proportional Gain	Varies (Set to obtain a proportional bandwidth of 6° -- see Appendix A)
S7	Miscellaneous Functions	On (All bits up -- see Para. 2.10)

3.2.2. Programmer Logic Control Board A1852/1550 Switch S1.

Bit positions for this switch should be set for the intended application as specified in Para. 3.4.2. Factory settings are shown in Table 3-2.

TABLE 3-2: FACTORY SETTINGS FOR
CONTROL LOGIC BOARD DIP SWITCH S1.

BIT	SETTING	DESCRIPTION (ON/OFF SETTING)
1	ON	Serial/GPIB (RS-232C & RS-422A/IEEE-488)
2	OFF	Preset/Hold Events (Preset defined by bit 3 setting)
3	OFF	All Events On/All Events Off
4	OFF	Single Step On/Off - (programmed stop) enables automatic stop after any step that has event 6 on

3.2.3. Read Switch Settings Using Diagnostics.

To determine current controller switch settings, use the Model 520 diagnostic mode to examine and record the values used as follows.

3.2.3.1. Enter and Select Diagnostic Test.

NOTE

Controller switch S5 bit 7 must be in the up position for the diagnostics to work. (This switch is factory sealed in place and should not be changed.)

1. Set keyswitch (Figure 3-1, Item 1) to PROGRAM.
2. Hold down the RESET PRGM button (2) while pressing the STOP button (3B). This places you in diagnostics with the controller(s) in manual mode and the display test running. (Wait until the display test is over before proceeding, or enter .9 to exit the display test.)
3. Press SELECT SETPNT button (11) and input the diagnostic test code (-590.4, for example) for the switch setting you want displayed. (The decimal must be entered when any code is used.) Use the keyboard (4) to enter the diagnostic code, then press ENTER button (6) to view the switch setting.
4. Perform Step 3 for each of the diagnostic codes in Table 3-3 to determine the corresponding switch setting. Record the setting in the space provided (or any convenient place).

TABLE 3-3: CONTROLLER SWITCH SETTINGS.

SWITCH NUMBER	FUNCTION	DIAGNOSTIC CODE*	SETTING
S1	Cycle Time	-590.4	_____
S2	Reset/Minute	-590.5	_____
S4	Reset Windup Inhibit	-590.7	_____
S5	Rate	-590.8	_____
S6	Proportional Bandwidth†	-591.6	_____
--	Reset Windup Inhibit	-591.7	_____

*A decimal point must be entered between the 0 and the last digit in these numbers, or the code will not be read correctly.
†The proportional bandwidth is derived from the S6 switch setting (proportional gain).

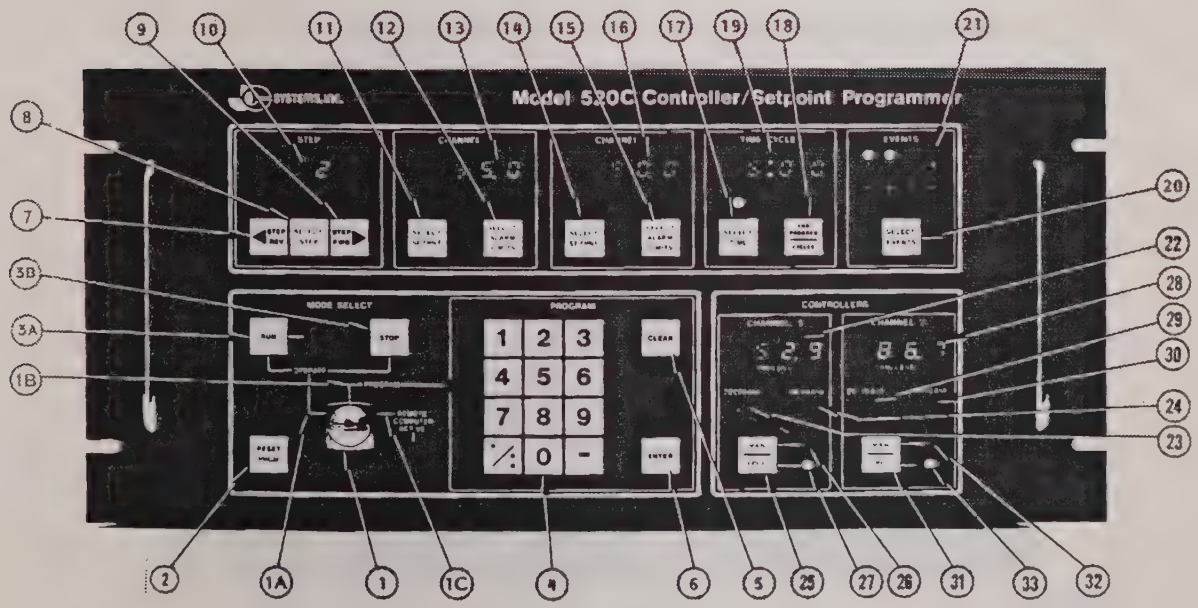

Figure 3-1: Front Panel Buttons, Displays and Indicators.

3.2.3.2. Exit Diagnostics.

To exit diagnostics, turn keyswitch (1) to either OPERATE or REMOTE COMPUTER ACTIVE mode. The Model 520 will exit diagnostics, remaining in the manual mode, and the controller PROCESS display will show an error message (----). The error message will be replaced when a valid setpoint is sent to the controller from the front panel (with controller in manual mode).

3.3. CONNECT EVENTS INTERFACE.

Connect events solid-state relays to appropriate terminals of TB3 (Figure 3-2, Item 5) as shown in Table 3-4. (If you're using the JCS Model A1728 Event Relay Board, you can connect the cable supplied with that accessory directly to panduit J1 on the Model 520 rear panel (6); the pin assignments correspond to the terminal assignments listed in Table 3-4.) The terminals identified as 14 through 19 are used for external control signals; their use will be explained later.

All outputs are open collector logic type limited to 50 mA and 50 Vdc maximum. TB3-12, the internal +9V source, can be used as the positive source for photo-isolated solid-state relays (SSR) on event output drives.

NOTE

Alarms (Pins 10 and 11) were connected earlier.

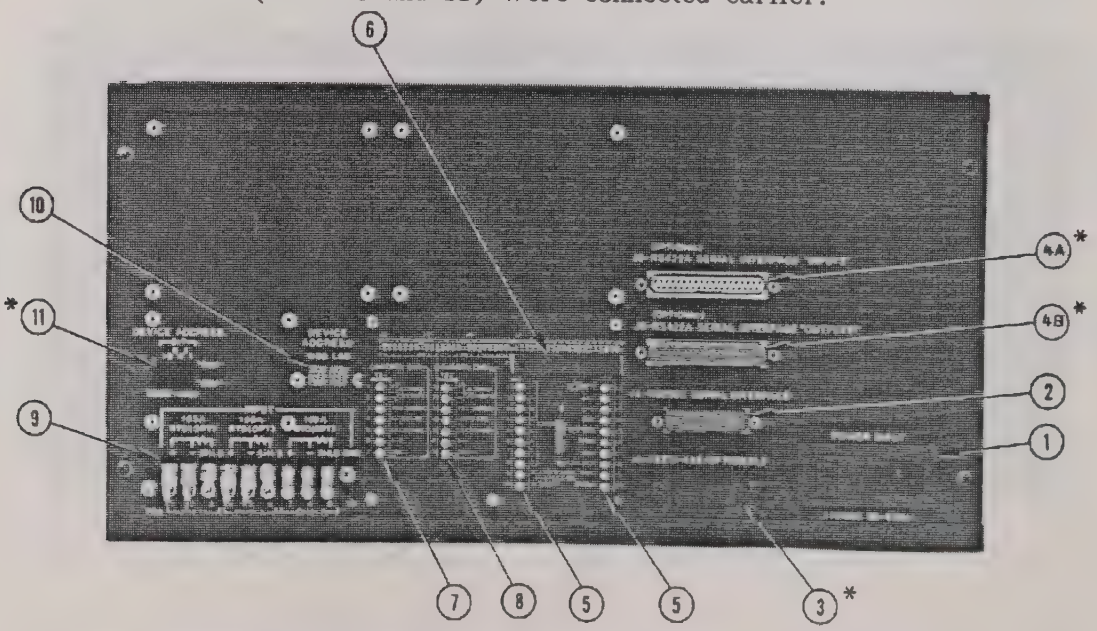

Figure 3-2: Rear Panel Connectors and Terminals.

TABLE 3-4: TERMINAL ASSIGNMENTS FOR EVENTS CONNECTIONS TO SSR.

TERM. NO.	FUNCTION	TERM. NO.	FUNCTION
1	Event 1	8	Event 8
2	Event 2		
3	Event 3		
4	Event 4		
5	Event 5	12	+ 9 V DC unregulated internal source (100 mA max) (SSR source voltage)
6	Event 6		
7	Event 7		

3.4. SET DIP SWITCHES.

3.4.1. Set Front Panel Dip Switch Z33.

Certain operating characteristics of the Model 520 programmer can be selected by changing the bit positions of DIP switch Z33 (Figure 3-3) on the inside of front panel display board A1840 as specified below. Note that the paragraph headings do not correspond to the actual legends on the PCB. Also, Channel 2 functions are inoperable on single-channel Model 510.

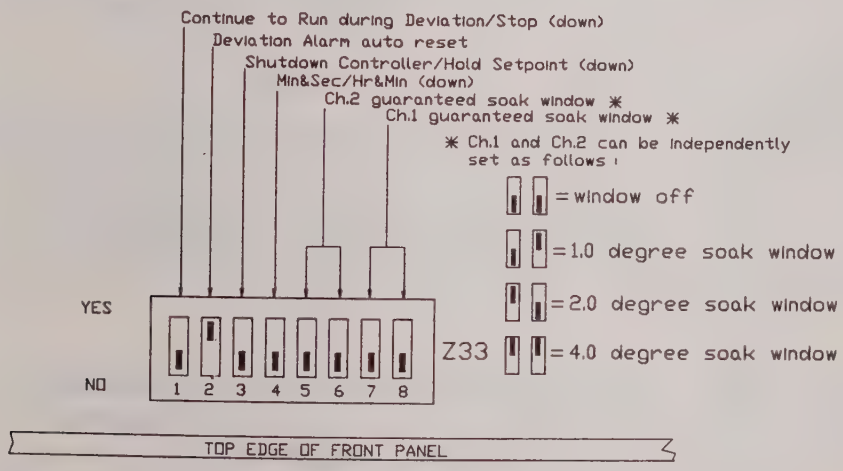
Continue to Run during Deviation/Stop (down)
Deviation Alarm auto reset
Shutdown Controller/Hold Setpoint (down)
Min&Sec/Hr&Min (down)
Ch.2 guaranteed soak window *
Ch.1 guaranteed soak window *
* Ch.1 and Ch.2 can be independently set as follows :
= window off
=1.0 degree soak window
=2.0 degree soak window
=4.0 degree soak window
YES
NO
Z33
1 2 3 4 5 6 7 8
TOP EDGE OF FRONT PANEL

Figure 3-3: Z33 DIP Switch Settings (for Standard Model 520).

3.4.1.1. Channel 1 Guaranteed Soak Window.

Bit positions 7 and 8 of Switch Z33 can be set to select how long Channel 1 of the Model 520 controller will wait (even though step duration has elapsed) until process variable No. 1 is within its setpoint ± the selected soak window. Figure 3-3 shows how to set the switch to select soak windows of 0, 1, 2, or 4 degrees. During this guaranteed soak window, the Model 520 will hold operation (colon in TIME/CYCLES display will stop flashing) until process variable No. 1 is within the selected limit.

3.4.1.2. Channel 2 Guaranteed Soak Window.

Bit positions 5 and 6 of Switch Z33 can be set to select the guaranteed soak window for Channel 2 of the Model 520 controller in the same manner as positions 7 and 8 are used for Channel 1 (see preceding paragraph and Figure 3-3).

3.4.1.3. Set Time Base.

With the MIN&SEC/HR&MIN, bit position 4, set to YES (MIN&SEC), time can be measured in minutes and seconds from 0 seconds to 99 minutes, 59 seconds. In the NO (HR&MIN) position, time can be measured in hours and minutes from 0 minutes to 99 hours and 59 minutes.

3.4.1.4. Controller Shutdown/Setpoint Hold.

When the CONTROLLER SHUTDOWN/SETPOINT HOLD, bit position 3, is set to YES (CONTROLLER SHUTDOWN) position, the programmer automatically shuts down both controllers at the end of the program. When the switch is set to NO (SETPOINT HOLD) position, the setpoint specified at the end of the program (in program memory) will be used as the final setpoint.

3.4.1.5. Alarm Auto Reset.

Placing the DEVIATION ALARM AUTO RESET, bit position 2, to OFF (no AUTO RESET) causes the following: whenever alarm limits are exceeded, the Model 520 stops (TIME/CYCLES colon stops flashing), the alarm limit energizes, and the applicable SELECT ALARM LIMIT LED flashes. These conditions continue until parameters returns within limits and the RUN button is actuated (by manual or remote computer operation).

When the switch is set to YES (AUTO RESET), the Model 520 will automatically resume operation as soon as an out-of-limits condition has ended. At the same time, the alarm outputs are reset.

3.4.1.6. Run During Deviation.

When the CONTINUE TO RUN DURING DEVIATION, bit position 1, is set to ON, the Model 520 will continue running even though alarm limits have been exceeded. The alarm outputs will either latch (continue) or automatically reset (turn off), depending on ALARM AUTO RESET bit 2 position.

3.4.2. Programmer Control Logic Board Switch S1.

This switch is used to select event output status in manual mode and single-step operation as explained below. It is also used to select serial or IEEE-488 interface mode, which is discussed in Chapter 5.

3.4.2.1. Events Status.

The setting of the Control Logic Board DIP switch S1 positions 2 and 3 (Figure 3-4, Item 1) determines the status of event outputs when both controllers are switched from programmed to manual operation. Bit 3 determines if all events will be ON or OFF. If bit 2 is set to PRESET EVENTS, then the status of events upon entering manual operation will be as selected by bit 3. If Bit 2 is set to HOLD EVENTS, programmed events will not change when the controllers are switched from programmed to manual operation. (For the Model 520, both controllers must be set to manual before this feature is enabled.)

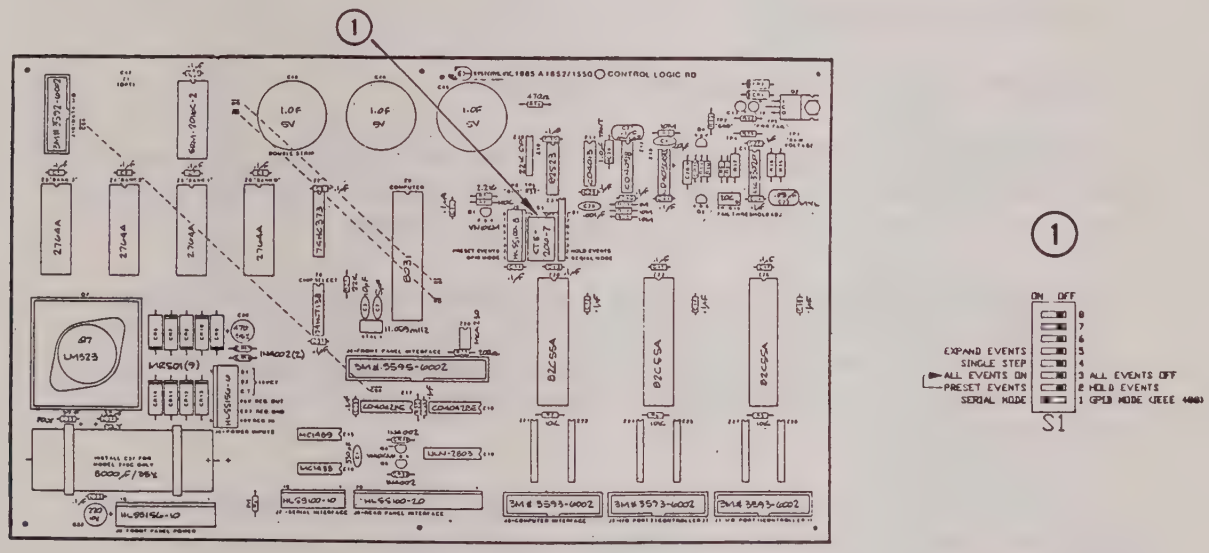

Figure 3-4: Control Logic Board DIP Switch S1.

3.4.2.2. Single-Step (Programmed Stop) Operation.

Single-step programmed stop operation allows you to automatically stop a program at the end of a selected step. When Switch S1 Bit 4 is ON (set to Single Step) and Event 6 of a program step is enabled, program execution will halt at the beginning of the next step. The STEP display will show the next step number. The time/cycle display will show the time for the next step, and the clock will stop. The last setpoint output will be displayed, latched, and maintained from the step where Event 6 was enabled. The event outputs will also remain in the configuration selected for the step in which Event 6 was turned on.

For example, assume that Step 2 of your program is a 2-hour soak at 100°C with Event 6 enabled and Switch S1-4 ON to invoke the program stop (single-step) feature. Step 3 is a 1-hour ramp to -55°C. At the end of the 2-hour soak in Step 2, the programmer will halt program execution. The setpoint will be displayed, latched and maintained at 100°C. The step display will show 3, the time display will show 1 hour, and the event display will show Event 6 on.

To restart program execution, either press the RUN button on the front panel, activate the remote RUN switch (if installed), or use the remote computer RUN command.

3.5. ENTER A PROGRAM.

3.5.1. Use the Worksheet to Plan a Program.

Figure 3-5 shows a typical profile that demonstrates the basic features of the Model 520 programmer. The program assumes that the Model 520 is set for operation in °C with a time base in minutes and seconds.

You will find it much easier to enter a program in the Model 520 if you first use a program worksheet to write down the program. This way, you can spot potential problems and correct them without backtracking through the Model 520 displays. Figure 3-6 shows the profile from Figure 3-5 entered on a sample program worksheet.

In Paragraph 3.7, we will revise the program to introduce more advanced features. But for now, let's go through the program on Figures 3-5 and 3-6 step by step.

Step 1. Ramp from ambient to -50° in 15 minutes, 10° alarm deviation limit set. The Model 520's soft start feature permits starting the program immediately from ambient. If a guaranteed ramp is desired, add a preliminary step to achieve the desired starting temperature.

Step 2. Soak at -50° for 15 minutes; alarm limits unchanged, no events turned on.

Step 3. Ramp to 100° in 30 minutes; alarm limits unchanged, no events on.

Step 4. Soak at 100° for 15 minutes; alarm limits unchanged, no events on.

Step 5. Ramp to 25° (ambient) in 15 minutes. Alarm limits unchanged, no events on.

Step 6. Execute Program 5 Times and End Program. Note the 5 in the time column. This is my reminder that I entered a 5 at the END PRGM/CYCLES step, so that the entire program would execute 5 times. (More about that when we actually enter the program.)

(N) PROGRAM STEP - "N" IS THE STEP NUMBER - STORES:

- Ch. 1 Step Setpoint
- Ch. 1 Deviation Alarm Limit
- Ch. 2 Step Setpoint
- Ch. 2 Deviation Alarm Limit
- Time (Hrs:Min) or (Min:Sec)
- Event Status (8 events)

(EOP N) END OF PROGRAM STEP - STORES:

- Number of times Main Program is executed (Cycles)
- Marks END of Current Program and START of Next Program.

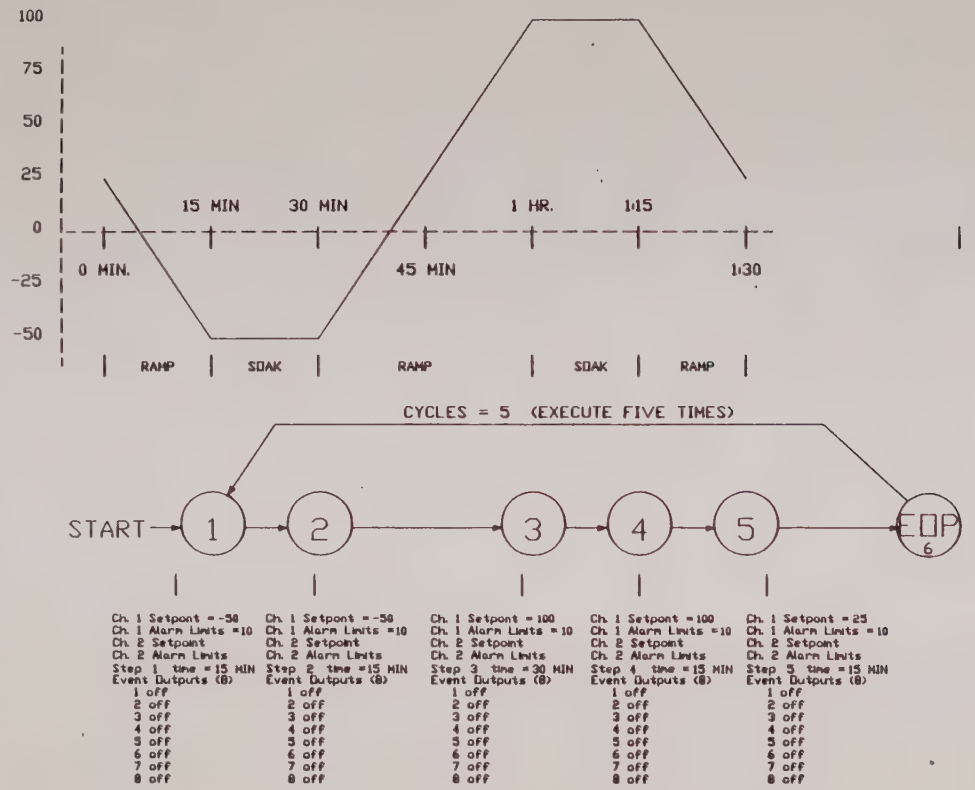

1915

NOTE: Encircled numbers correspond to step numbers shown on sample program worksheet.

Figure 3-5: Profile for Program Listed on Sample Worksheet (Figure 3-6).

PROGRAM WORKSHEET

JC SYSTEMS INC. PROGRAM NO. Sample #1 (for Fig. 3-5) DATE: _____

STEP	CHANNEL 1		CHANNEL 2		TIME/	EVENTS							
NO.	SETPNT	ALM LMT	SETPNT	ALM LMT	CYCLES	1	2	3	4	5	6	7	8
1	-50	10	--	--	15								
2	-50	10	--	--	15								
3	100	10	--	--	30								
4	100	10	--	--	15								
5	25	10	--	--	15								
6	EOP				5								
7													
8													
9													
10													
11													
12													
13													
14													
15													
16													
17													
18													
19													
20													
21													
22													
23													
24													
25													
26													
27													
28													
29													
30													

NOTES:
1. Each separate program must be terminated with an END OF PROGRAM (EOP) step to separate it from the ones before and after.
2. Multiple programs can be stored and individually executed -- select first step of desired program

Figure 3-6: Program Worksheet with Program Entered.

3.5.2. Watch Program Length.

3.5.2.1. Program Length and Model 520 Program Storage Capacity.

One complete program consists of all steps containing parameters and the EOP step. A program with nine steps is actually ten steps long (counting the EOP). Since the Model 520 can store a maximum of 91 steps, it has room for nine programs each containing ten steps total (9 steps plus the EOP step).

3.5.2.2. Importance of End-of-Program Step.

The EOP has the following functions:

1. It marks the end of one program and the beginning of another.
2. It specifies the number of times the program will be executed.

The first step of a program must be immediately preceded by an EOP step, unless the program starts at Step 1. If a program does not start after an EOP, the programmer will skip over channels and will not accept your input.

Hint: it's not necessary, and may even be inconvenient, to start the next program on the next available step after an EOP. Leave a few steps blank in case you want to revise and expand the program later. (Be sure to terminate the blank steps with an EOP step.) This technique is especially useful if you have a way to store Model 520 programs elsewhere (on the JC Systems PromSave™ or a remote computer disk), which we'll explain later.

3.6. ENTER THE PROGRAM AT MODEL 520 FRONT PANEL.

Now that we've planned the program, let's enter it in the Model 520. For this first program, we will be using Channel 1 only. If you compare Figure 3-6 to the front display panel (Figure 3-1), you will see that the worksheet provides a place to enter each of the values you will program into the Model 520. The order of the values is the same order as the Model 520 pointer (the LED that lights above the SELECT buttons) will progress across the top row of the Model 520.

3.6.1. General Instructions.

1. The controller(s) being programmed must be in program mode (PROG indicator LED on), or the values will not entered in memory.
2. Remember that the CLEAR button (5) can be used at any time to remove incorrect input, and the ENTER button (6) must be used to store input in memory. If the value already in memory is correct, simply press the ENTER button to keep that value.

3. As you progress through programming, the LED above the top row of buttons serve as a pointer to tell you where you are in a program. For example, the pointer above the SELECT SETPNT button will light as soon as you select a program starting step. The SELECT SETPNT pointer will go out as soon as you have entered the setpoint, and the pointer above the SELECT ALARM LIMITS button will light.
4. The sample program lists the applicable value from Figures 3-5 and 3-6 in brackets []. You could enter any similar program simply by substituting your own values.

3.6.2. Finding Switches and Displays.

Figure 3-1 shows the location of and identifies front panel displays and buttons you will use to enter the program.

3.6.3. Select Starting Step.

1. Insert key in keyswitch (1) and turn to PROGRAM mode (1B). PROGRAM LED lights and keypad becomes active.
2. Be sure that both controllers are in program mode (PROG LED on). If not, press controller mode selection buttons (25 and 31) to change to program mode.
3. If a program has been entered, there are two convenient ways to access the first available step.

    a. If you are currently on any step of the program you wish to run, press the RESET PRGM BUTTON (2).
    b. If you know the first step number of the program you want to run, use the random access feature to select the starting step as follows:
        1) Press SELECT STEP button (8). The SELECT STEP LED will light.
        2) Use the keypad (4) to input the desired step number, then press the ENTER button (6). SELECT STEP pointer will go out and SELECT SETPNT pointer will light. (You are ready to start programming.)

NOTE

The easiest way to keep track of available steps and programs is by using a program worksheet like Figure 3-6 as a log. (A blank worksheet form is provided in Appendix B that you may copy for your own use.)

3.6.4. Enter Step 1.

3.6.4.1. Enter Channel 1 Setpoint.

The Model 520 will only run with a setpoint within the operating range of your system's controllers (as listed on the rear panel and the Calibration Parameters Sheet included at the front of this manual). To enter the setpoint, proceed as follows.

1. Using keypad (4), input desired value [-50°]. CHANNEL 1 display (13) will show inputted value.
2. Press ENTER button (6) to record value in program memory and advance program pointer to next parameter.

3.6.4.2. Enter Channel 1 Alarm Limits.

Enter a deviation limit of 10° for Step 1 as follows.

1. Using keypad (4), input desired deviation limit value (10°). CHANNEL 1 display (13) will show inputted value.
2. Press ENTER button (6) to record value in program memory and advance program pointer to next parameter.

3.6.4.3. Enter Channel 2 Setpoint.

Channel 2 is not used for this program, so when the Channel 2 SELECT SETPNT pointer lights, press CLEAR (5) and then ENTER (6) buttons to advance pointer to Channel 2 SELECT ALARM LIMITS. This will clear Channel 2 setpoint for all remaining steps.

If Channel 2 *were* used, the procedure would be the same as that for Channel 1 (except that the values might be different.)

3.6.4.4. Enter Channel 2 Alarm Limits.

Channel 2 is not be used for this program, so when the Channel 2 ALARM LIMITS pointer lights, press CLEAR (5) and then ENTER (6) buttons to advance pointer to SELECT TIME button (17). Since the Channel 2 setpoint was already cleared, this will clear Channel 2 and the program pointer will skip Channel 2 for all remaining steps.

If Channel 2 *were* used, the procedure would be the same as that for Channel 1 (except that the values might be different.)

3.6.4.5. Enter Time (Step Duration).

1. Using keypad (4), input desired value [15 minutes]. (The Model 520 will accept values from 0 minutes thru 99 hours, 59 minutes, or from 0 seconds thru 99 minutes, 59 seconds, depending on the setting of switch Z-33 bit 4 (time base setting.) A colon must be entered to select seconds (or minutes, if the hour/minute mode has been selected). TIME/CYCLES display (19) will show inputted value.
2. Press ENTER button (6) to record value in program memory and advance program pointer to next parameter.

3.6.4.6. Select Events.

There are no events for this step (or for any step of this program; programming of events will be explained later). Press CLEAR (5) and ENTER (2) buttons; STEP display (10) will advance to next step (Step 2) and pointer will advance to channel 1 SELECT SETPNT.

3.6.5. Enter Additional Intermediate Steps.

For each additional intermediate step in the program (up to the final end-of-program step), the procedure is the same as it was for Step 1. Only the parameters change as shown in Figure 3-5 and repeated here for reference.

Step 2. Soak at -50 ±10° for 15 minutes.
Step 3. Ramp to 100 ±10° in 30 minutes.
Step 4. Soak at 100 ±10° for 15 minutes.
Step 5. Ramp to 25 ±10° in 15 minutes.

3.6.6. Enter End-of-Program (EOP) Step.

After all parameters for all steps of the program have been stored in memory, Step 6 will be displayed and the program pointer LED will be on over the Channel 1 SELECT SETPNT button (11). Enter the End of Program (EOP) step as specified below.

3.6.6.1. Program Cycles.

The CYCLES selection contained in the EOP step makes it possible to repeat the entire program as many times as desired. (One cycle equals one complete program execution.) Our sample program executes the complete program's heat/cool cycle five times. You can program as many as 9999 cycles with the EOP step. The cycle will execute the entire program as many times as necessary without using up valuable program memory.

1. To enter an EOP step with multiple executions (cycles), press END PRGM/CYCLES button (18). Program pointer LED over button will light and display will show current setting.
2. Using keypad (4), input desired number of program executions [5 for our sample.] TIME/CYCLES display (19) will show inputted value.
3. Press ENTER button (6) to record value in program memory. Program pointer automatically moves to first step of program just entered (Step 1), ready to begin operation.

3.6.6.2. End Program After One Execution.

1. To enter an EOP step for a program you only want to execute once, press END PRGM/CYCLES button (18). Program pointer LED over button will light and display will show current setting.
2. Using keypad (4), input desired number of program executions [1 if only one cycle is desired].
3. Press ENTER (6) button to record value in program memory. Program pointer automatically moves to first step of program just entered, ready to begin operation.

3.7. ENTER A PROGRAM WITH NESTED LOOPS.

3.7.1. Using the Nested Loop Capability.

With the first sample program above, you saw how you could use the EOP step to cycle the entire program several times. The nested loop capability enables you to do the same thing with selected portions of the program.

In our second sample program, starting at Step 10, we've added such a loop. Now we're going to turn the power supply on and off 50 times within a program using a nested loop, *and* we're going to repeat the entire program 20 times. That means we're actually going to repeat Steps 12 and 13 a total of 1,000 times. Figure 3-7 graphically presents the program and its profile; Figure 3-8 is the worksheet for the program shown in 3-7.

(N) PROGRAM STEP - "N" IS THE STEP NUMBER - STORES:
- Ch. 1 Step Setpoint
- Ch. 1 Deviation Alarm Limit
- Ch. 2 Step Setpoint
- Ch. 2 Deviation Alarm Limit
- Time (Hrs:Min) or (Min:Sec)
- Event Status (8 events)

(LC N) LOOP COMMAND STEP - STORES:
- Number of times (loops) Nested steps are executed.
- Marks END of Nested Loop and START of Next section of nested program.

(EOP N) END OF PROGRAM STEP - STORES:
- Number of times Main Program is executed (Cycles)
- Marks END of Current Program and START of Next Program.

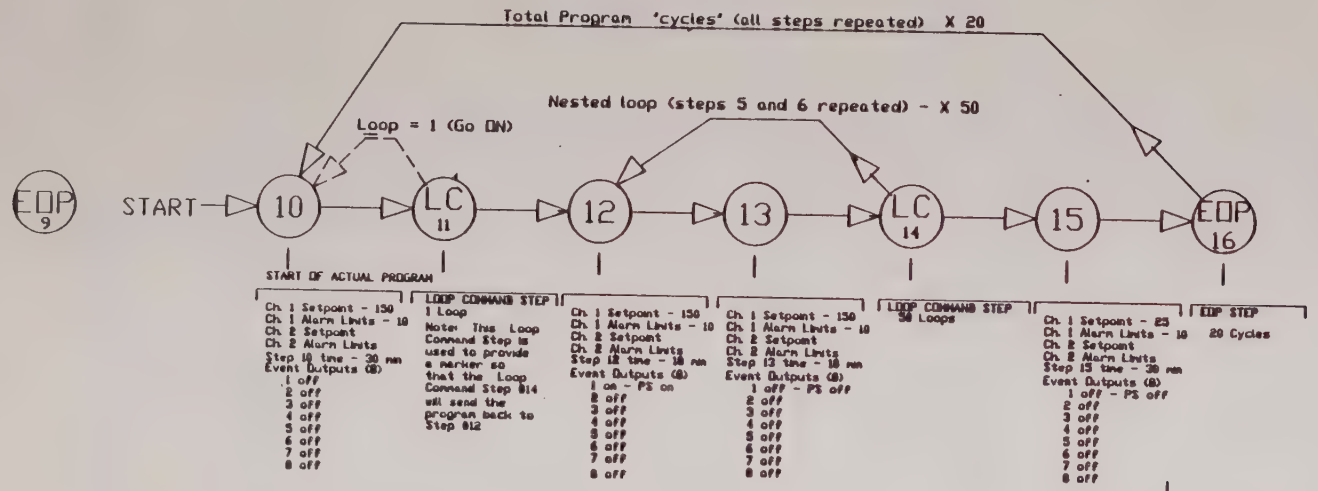

Note: This example is to demonstrate the power of the nested loop. The power supplies have to be turned on for 10 min. and off for 10 min. 50 times.

Channel 2 is ignored in this example

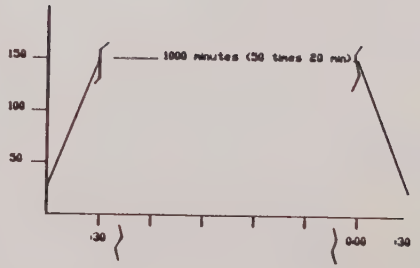

LOOPS_1

Figure 3-7: Nested Loop Flow Chart and Profile.

PROGRAM WORKSHEET

JC SYSTEMS INC. PROGRAM NO. Sample #2 (for Fig. 3-7) DATE: _____

STEP	CHANNEL 1		CHANNEL 2		TIME/	EVENTS							
NO.	SETPNT	ALM LMT	SETPNT	ALM LMT	CYCLES	1	2	3	4	5	6	7	8
1													
2													
3													
4													
5													
6													
7													
8													
9													
10	150	10	--	--	30								
11	LOOP				1								
12	150	10	--	--	10	ON							
13	150	10	--	--	10								
14	LOOP				50								
15	25	10	--	--	30								
16	EOP				20								
17													
18													
19													
20													
21													
22													
23													
24													
25													
26													
27													
28													
29													
30													

NOTES:
1. Each separate program must be terminated with an END OF PROGRAM (EOP) step to separate it from the ones before and after.
2. Multiple programs can be stored and individually executed -- select first step of desired program

Figure 3-8: Worksheet for Program Sample with Nested Loop.

3.7.2. Programming a Nested Loop.

The sample program shown in Figures 3-7 and 3-8 incorporates two more Model 520 features: the nested loop and events programming. The following paragraphs explain these procedures.

3.7.2.1. Loop Location.

The programmer will not start on any loop command step. If the RUN button (3a) is pressed while in such a step, the RUN LED will flash and the Model 520 will return to the STOP mode.

3.7.2.2. Loop Execution.

A nested loop must contain its program steps in sequence. The beginning of the nested loop is marked either by an EOP step or by a loop command step. The loop will return to first step after that beginning marker and execute the program steps within the nested loop until it executes the number of loops specified in the end loop command step. Then the program exits the loop and proceeds to the step immediately following the end loop command. At no time can the program exit the nested loop and jump to other parts of the program.

3.7.2.3. Loop Storage.

Each loop command uses one program step, just like the EOP command. Up to the 91-step capacity of the program, a 520 program can contain as many *sequential* nested loops as required. (Nested loops may not be nested *within* nested loops.)

3.7.2.4. Loop Format.

The nested loop consists of:

1. A marker at the beginning of the loop. This can be either a loop command with a cycle number of 1, or the first step after an EOP. No marker is required for Step 1.
2. The program steps to be performed during the nested loop.
3. A LOOP command step to mark the end of the loop and specify the number of times it will be executed.

When the Model 520 encounters a loop command step, it decrements the loop counter (number of cycles selected for the loop) by 1 and checks the count. If the count is not 0, the Model 520 moves backward linearly through the steps until it encounters either a previous loop command or an EOP command, then resumes program execution. If the count is 0, the Model 520 advances to the next programmed step.

To enter a nested loop that begins with the Step 1 of the program, you do not need a loop command step as a beginning marker. The beginning marker is needed only when the nested loop does not include the first step of the program, as is the case for our second sample.

3.7.2.5. Programming Procedure for a Nested Loop.

For the example, we are entering the nested loop shown in Figures 3-7 and 3-8. The steps of this program are numbered 10 thru 16 to distinguish them from the first sample program.

1. Make sure there's an EOP step immediately before the first step of your program. The easiest way to do this is to enter an EOP step.
2. Start the program in the usual way, by entering desired program parameters for Step 10, the first step [Channel 1 setpoint 150°, alarm limits ±10, time 30 minutes, no events]. Advance to the next step.
3. For Step 11, mark the beginning of the nested loop by pressing the END PRGM/CYCLES button (18). A number between 0 and 9999 will appear in the TIME/CYCLES display (19). This is the value (if any) previously entered for that step.
4. Use the keypad (4) to input 1 (the beginning loop step is only executed once). Then press the END PRGM/CYCLES button to mark the beginning of the loop. **DO NOT PRESS THE ENTER KEY**, since the Model 520 would then interpret the entry as an EOP command instead of a loop marker.
5. Enter the steps you want executed in the nested loop (No. 12 and 13 of our sample program). The setpoint and alarm limits for both are the same as program Step 10, but the time changes to 10 minutes. We also want to turn on an event [#1, which energizes the power supply of the device under test] during Step 12, then turn it off during Step 13. To program these steps, proceed as follows.
   a. Enter the setpoint, alarm limit, and time for Step 12 using the same procedures previously described. The program pointer advances to SELECT EVENTS.
   b. Enable Event #1 for Step 12 using the procedure described in Para. 3.7.2.6 below.
   c. Repeat procedural Step 3.a above for program Step 13, then disable Event #1 using the procedure described in Para. 3.7.2.6.
6. At Step 14 of the sample program, press the END PRGM/CYCLES button (18). A number between 0 and 9999 will appear in the TIME/CYCLES display (19). This is the value (if any) previously entered for that step.
7. Use the keypad (4) to input the number of times you want the loop to execute [50 for our sample]. Then press the END PRGM/CYCLES button to record the loop command. **DO NOT PRESS THE ENTER KEY**, since the Model 520 would then interpret the entry as an EOP command instead of a LOOP command.

8. Enter any additional operational steps (Step 15 in our sample).
9. Enter the EOP step. The nested loop program has an EOP step with 20 repeat cycles instead of the first sample program's 5 cycles, but the procedure for step entry is the same.

3.7.2.6. Select EVENTS Status.

The buttons used to clear or select events are as follows.

1. The first time after events are selected for a step, pressing the keypad (4) button corresponding to the event number toggles the selected event on and toggles off any previously selected events. (The corresponding event status LED (22) will toggle on and off as applicable.)
2. At any other time, pressing the keypad (4) button corresponding to the event number toggles the selected event on and off as indicated by the corresponding event status LED (22).
3. Pressing the CLEAR button (5) turns off all events.
4. Pressing the ENTER button (6) enters the current events status in program memory.
5. Once events status has been selected and the ENTER button pressed, STEP display (10) will advance to next step and program pointer will light over Channel 1 SELECT SETPNT button (11).

3.8. STORE THE PROGRAM.

No special procedure is required to store the program in the Model 520's internal memory. The program will remain in the Model 520's memory until you either revise it or write over it. (The battery backup's minimum five-year life will protect the program almost indefinitely, even with repeated shutdowns or power outages.)

You can also save the program to a remote storage device and retrieve it later. See Chapter 4 for instructions on using the JC Systems PromSave™ accessory, or Chapter 5 for saving programs to a remote computer.

3.9. REVISE THE PROGRAM.

You can revise any step of a program without having to redo the entire program. You also can change one or more values within the step without affecting values you don't want to change. However, if you add steps to a program, you must re-enter any subsequent steps. The procedures for accessing and revising the step are given below. Numbers in parentheses refer to Figure 3-1.

3.9.1. Access a Step in Program Mode.

You can access the step(s) you want to revise by either random access or sequential selection.

3.9.1.1. Random Access.

This feature enables you to select and revise any step of a program with the following simple procedure.

1. If program is running (RUN LED on), press STOP button (3B).
2. Press SELECT STEP button (8). Pointer LED will light.
3. Input desired step number on keypad (4). The selected step number will appear in the STEP display (10).
4. Press desired parameter SELECT button.

3.9.1.2. Sequential Access.

In sequential access, you simply use the STEP REV (7) or STEP FWD (9) button to move the program pointer to the step you want to change. Pressing the button momentarily moves the pointer one parameter; holding the button down causes the pointer to slew rapidly thru parameters and steps.

3.9.2. Access a Step During Manual Controller Operation.

A step can be accessed for review or programming even when the Model 520's manual controller operation mode is selected. To do so, simply reset the controller to program mode by pressing the controller MAN/PROG button (25 or 31) while program execution is stopped. The controller will continue to regulate process temperature at the previously entered manual setpoint while the corresponding programmer display will show the program parameter being entered or reviewed. To restore the manual setpoint display, press the MAN/PROG button again.

3.9.3. Make the Change.

1. Turn the MODE SELECT keyswitch (1) to PROGRAM position (1B).
2. Use STEP REV (7) or STEP FWD (9) button to select the parameter you want to change.
3. The present value will appear on the display for the selected parameter. Input the desired change on the keypad (4), then press ENTER button (6). The change is now recorded.
4. Repeat Steps 2 and 3 as required for each change you wish to make.

3.10. RUN THE PROGRAM

This section describes operations where all commands originate from a program in the Model 520's memory evoked from the front panel by the operator. No computer or external control signals are used, and the MODE SELECT keyswitch (1) is in the OPERATE position (1A).

3.10.1. Access a Step in Operate Mode.

You can access step(s) from the operate mode by either random access or sequential selection. If the Model 520 is in OPERATE-RUN mode, press STOP button (3B) to freeze operation before accessing the new step. The RUN LED will go off.

3.10.1.1. Random Access.

This feature enables you to select and start at any step of a program with the following simple procedure.

1. Press SELECT STEP button (8). Pointer will light.
2. Input desired step number on keypad (4). The selected step number will appear in the STEP display (10).
3. Push the RUN button (3A) to start operation.

IMPORTANT

> Reviewing a running program using random access will reset the time/cycles clock. Returning to any step and restarting the program will invoke the entire time programmed for that step (program will not resume at the point where it was stopped).

3.10.1.2. Sequential Access.

With the programmer in STOP mode, sequential access allows you to use the STEP REV (7) or STEP FWD (9) button to move the program pointer to the step you want to review. Pressing these buttons momentarily will cause the pointer to advance one parameter; holding them down will cause the pointer to move rapidly through the parameters and steps.

IMPORTANT

> When using sequential access, pressing the RUN button will return the program to the step where it was stopped, and the program will resume with the time remaining for that step. DO NOT use the SELECT STEP switch if you're only reviewing parameters; if you do, you can't return to the original step.

3.10.2. Start Operation.

To start programmed controller operation, proceed as follows.

1. Set MODE SELECT keyswitch (1) to OPERATE position.
2. Select starting step using either of the methods explained in Para. 3.10.1.
3. Press RUN button. Colon (:) in TIME/CYCLES display (19) will start flashing. The Model 520 will execute programmed controller operations without any further operator intervention. If sequential access was used in 3.10.1, execution will resume from the point where the program was stopped. If random access was used, execution will begin at the currently displayed step.
4. If an alarm sounds, respond as specified in Para. 3.10.4 or 3.10.5.

3.10.3. Monitor Displays.

3.10.3.1. Active Displays.

With the keyswitch in OPERATE position and the RUN button pressed (RUN LED is on), the Model 520 displays current STEP number, realtime current setpoints, actual time remaining, EVENTS status (programmed events have a lighted LED), and the current process temperature (or value) for each operating controller channel. The INCREASE and DECREASE LED for each controller channel will also light whenever heating or cooling (respectively) is in process.

3.10.3.2. Reviewing Programmed Values for Current Step.

Setpoint -- To view programmed setpoints in the corresponding CHANNEL display (13 or 16), press and hold down the corresponding SELECT SETPNT button (11 or 14).

Alarm Limits -- To view programmed alarm limits in the corresponding CHANNEL display (13 or 16), press and hold down the corresponding SELECT ALARM LIMITS button (12 or 15).

Duration -- To view programmed step duration (total time) on the TIME/CYCLES display (19), press and hold down the SELECT TIME button (17).

Cycles or Loops -- To view cycles remaining on the TIME/CYCLES display (19), press and hold down the END PRGM/CYCLES button (18) during any step that is not in a loop. To view the number of loops remaining, press and hold down the END PRGM/CYCLES button during any step that is in a loop. If you hold down the button while the programmer is in RUN, the display will show the number of cycles (or loops) left until completion. If you hold down the button while the programmer is in STOP, the display will show the number of cycles (or loops) originally programmed. In either case, if the number of *cycles* is displayed, the CYCLES LED will light; if the number of *loops* is displayed, the LED will not light.

3.10.4. Respond to Deviation Alarm.

When the process variable is outside the range allowed by the selected alarm limits, the following actions occur.

1. The SELECT ALARM LIMITS LED flashes.
2. The applicable channel's alarm output to TB3-10 or -11 goes low.
3. If the program was running and the CONTINUE TO RUN DURING DEV switch is off, the colon (:) in the TIME/CYCLES display stops flashing to indicate that the program has stopped.

3.10.4.3. Run During Deviation.

If the CONTINUE TO RUN DURING DEVIATION/STOP switch (Z33-1) is set to ON, the Model 520 will continue running even though alarm limits have been exceeded. The alarm outputs will either latch on (continue) or automatically reset (turn off), depending on ALARM AUTO RESET switch position (next paragraph).

3.10.4.4. Reset.

If the DEVIATION ALARM AUTO RESET switch (Z33-2) is set ON to enable automatic reset, the Model 520 will automatically resume operation and the alarm outputs will be automatically reset as soon as the out-of-limits condition has ended. If the switch is set OFF to disable the automatic reset, alarm actions continue until parameters return within limits and the RUN button is actuated (either manually or by remote computer).

3.10.5. Respond to Probe Open Indication.

If a probe is defective, disconnected, or has an open junction, the following actions occur.

1. The CODE "P. OP." appears in the controller's PROCESS display (22 or 28) and the SELECT SETPNT LED flashes.
2. Heat and Cool outputs automatically turn off.
3. The alarm output is activated.
4. Program execution stops.

Press the STOP button, correct the error condition, and press RUN to resume program operation.

3.10.6. Respond to Invalid Setpoint Indication.

If the realtime setpoint goes outside the operating range for the Model 520's controllers, the following actions occur.

1. The SELECT SETPNT LED flashes.
2. A series of dashes (---.-) appears in the controller's PROCESS display (22 or 28).
3. The Heat and Cool outputs are disabled.
4. The alarm output is activated.
5. Program execution stops.

NOTE

Diagnostics can be used to determine the Model 520's operating range -- refer to Chapter 6.

Stop the program and revise the setpoint to one within Model 520 limits, then restart.

3.11. STOP THE PROGRAM FOR REVIEW.

In programmed operation, the program will stop automatically when completed. To stop the program during operation for review, simply press the STOP button (3B). RUN button LED will go out and the colon on the TIME/CYCLES display (19) will stop flashing to show that program was interrupted. The clock stops; the program freezes at present conditions and holds there until the RUN button (3A) is pressed to resume Model 520 operation.

Program parameters can then be reviewed as follows.

1. Use STEP REV or STEP FWD buttons (7 or 9) to move program pointer to desired parameter as indicated by lighted LED above corresponding SELECT button.
2. Value will appear in the display window above the selected parameter: SETPNT, Channel 1 or 2 (11 or 14); ALARM LIMITS, Channel 1 or 2 (12 or 15); and TIME (17). Programmed events are always displayed (their corresponding EVENTS LEDs are on).
3. To review settings at other steps, use random or sequential access (Para. 3.10.1) to select the desired step.

NOTE

Use sequential access if you want to resume the program from the step and time at which it was stopped. Using random access or changing the keyswitch position resets the time/cycles clock.

3.12. RESTART PROGRAM.

3.12.1. Soft Start.

This feature can be used to abort and restart a program without thermal stress to the device under test. For the soft start to work, the step selected for restart must be one with a nonzero time (time other than 0:00). (The soft start feature calculates a ramp from the process temperature to the programmed temperature based on time allotted for a step.)

When the Model 520 is started from any program step with a nonzero time, the soft start is invoked as follows.

1. The Model 520 reads the actual *process* temperature and uses that temperature as the starting setpoint for that step.
2. The Model 520 then takes the process temperature to the programmed value at a linear rate over the time programmed for the ramp.
3. If the program is stopped for any reason, the timer stops and the present process temperature is latched and maintained.

3.12.2. Restarting at Ramp or Soak Step (XX:XX STEP TIME).

The setpoint starts at the actual process value and is linearly incremented or decremented to arrive at the final programmed setpoint value at the end of the programmed time.

3.12.3. Restarting Without Ramp or Soak (00:00 STEP TIME).

The Model 520 will supply the controller(s) with the setpoint stored for the restart step. The system will go to the programmed temperature at the maximum possible rate.

3.12.4. Select Restarting Step.

3.12.4.1. Restart at First Step of Present Program.

To restart at the current program's first step (start the program over), press STOP (3B) to stop program operation, then press RESET PRGM button (2) to reset to step 1 of the current program, and finally press the RUN button (3A) to restart.

3.12.4.2. Restart at Any Other Step.

To restart at any other step of the same program *OR* a different program, use random access to select the starting step as described in Para. 3.10.1.1, then press the RUN button (3A).

Chapter 4. Using the PROMSAVE™ Accessory.

4.1. INFORMATION PROVIDED.

This chapter describes how to connect and use the JC Systems Model 285 PromSave™ (Figure 4-1). This device is an optional accessory that permits fast, easy storage and retrieval of programs developed on the JCS Model 240A, 510 or 520. Such programs can be stored on the PromSave™'s cartridge and retrieved for reuse at any time.

4.2. HOW THE PROMSAVE™ WORKS.

The PromSave™ uses an EEPROM cartridge that stores programs developed for the user's JC Systems programmer applications. Programs in a RS-232C serial-capable JC Systems programmer such as the Model 240A, 510, or 520 can be readily saved to the Model 285's cartridge EEPROM, stored indefinitely, then loaded back into the programmer when next required. The 285 does an auto-compare and verification between the programmer memory and the cartridge with every memory transfer.

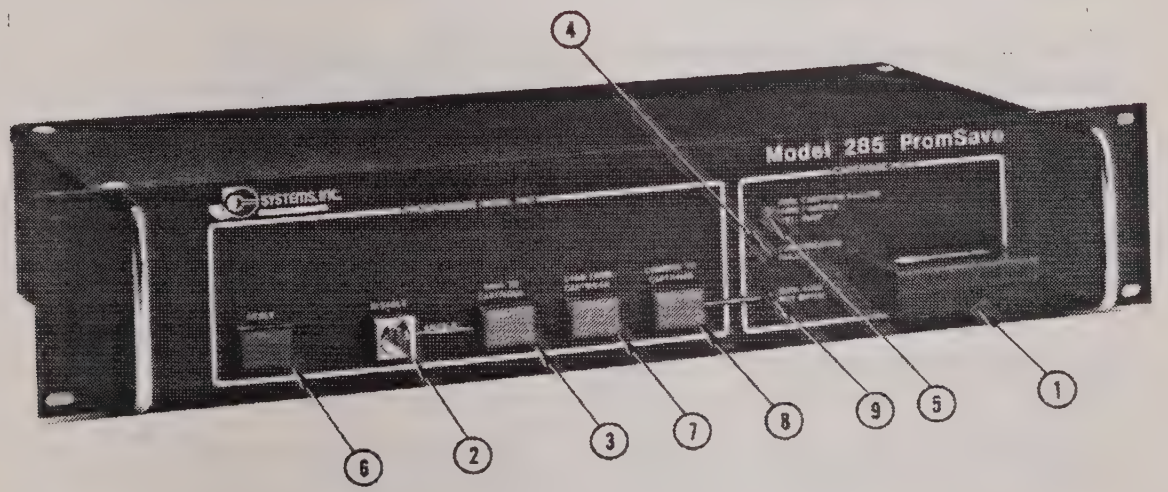

Figure 4-1: Model 285 PromSave™ Controls and Indicators.

4.3. CONNECT PROMSAVE™ POWER.

The Model 285 requires 115 Vac electrical power at 50-60 Hz.

4.4. ESTABLISH COMMUNICATIONS INTERFACE.

4.4.1. Connect PromSave™ to 520.

Disconnect RS-232C interface from the Model 520 to any other system at Model 520 rear panel connector J4. Use the cable supplied with the PromSave™ to connect the Model 520 to the PromSave™ RS-232C interface on the rear panel at J1, a 25-pin Type D subminiature connector.

4.4.2. Configure 520 for Communication.

4.4.2.1. RS232C Configuration.

The 520 standard configuration is RS-232C compatible, so it is ready for use with the PromSave™.

4.4.2.2. RS422A Configuration.

If the optional RS-422A Programmer Interface Board A1566 is installed, set switch S3 on that board to the RS-232C position.

4.4.2.3. IEEE488 Configuration.

If the optional IEEE488 Interface is installed, be sure the Serial Mode Select Jumper is installed on the 2-pin terminal strip on the rear panel.

4.4.3. Set Model 520 to Remote.

Turn MODE SELECT keyswitch on Model 520 front panel to REMOTE COMPUTER ACTIVE position.

4.5. TURN ON PROMSAVE™ POWER.

Press rocker switch on the PromSave™ rear panel to turn on power.

4.6. SAVE MODEL 520 PROGRAM TO CARTRIDGE.

To save a program stored in the Model 520 memory to the PromSave™ EEPROM cartridge, proceed as follows.

1. Insert EEPROM cartridge (Figure 4-1 Item 1) into its receptacle on PromSave™ front panel.
2. Turn PromSave™ keyswitch (2) to ENABLE position.
3. Press SAVE TO CARTRIDGE button (3). Program transfer will begin. During memory transfer, the PromSave™ will automatically perform a comparison and verification between the Model 520 memory and the cartridge. One of the three LEDs on the PromSave™ front panel will light as appropriate to indicate cartridge or transfer status as follows.

   a. Top LED (5) will be:
   Yellow if PromSave™ is BUSY (transfer in progress).
   Red if the cartridge is defective. (Replace cartridge and try again.)
   Green when the transfer is successfully completed.

   b. Center LED (4), which is red, will light if there is a communications failure between the Model 520 and the PromSave™. Check Model 520 front panel keyswitch and control board switch S1 mode selections (see Para. 4.4) and RS-232C interface cable connections.

   c. Bottom LED (9), which is also red, will light if the Model 520 memory and the PromSave™ cartridge memory do not contain the same information.

4. If a red LED lights during transfer, correct the indicated problem and press the RESET button (6) to try again.
5. After transfer has been successfully completed, turn the PromSave™ keyswitch (2) to DISABLE position.

4.7. LOAD PROGRAM INTO MODEL 520 FROM CARTRIDGE.

To load a program from the PromSave™ EEPROM cartridge to the Model 520 memory, proceed as follows.

1. Insert EEPROM cartridge and turn PromSave™ keyswitch (2) to DISABLE position.
3. Press LOAD FROM CARTRIDGE button (7). Program transfer will take place in the same manner and with the same indications as described for the SAVE TO CARTRIDGE procedure.

4.8. COMPARE CARTRIDGE AND MODEL 520 MEMORY CONTENTS.

To compare the contents of the two memory storage areas (EEPROM cartridge and Model 520 program memory), set keyswitch to DISABLE and press COMPARE TO CARTRIDGE button (8). If the two are not exactly alike, the DATA DOES NOT MATCH red LED (9) will light.

NOTE

Data comparison occurs automatically when data is transferred from one storage area to another.

4.9. INTERRUPT PROMSAVE™ (RESET).

To abort memory transfer, press the RESET button (6). Transfer will stop and the PromSave™ will be returned to its initial state.

To clear a red LED indication, press the RESET button (6).

Chapter 5. Remote Programming and Operation.

5.1. INFORMATION PROVIDED.

This chapter describes how to interface a remote computer to the Model 520 and then enter, run, and monitor programs. The Model 520 understands and responds to commands from a remote computer in the same manner as though you were entering the command directly into the Model 520 front panel. (You may want to review Chapter 3 before using the information in this chapter for the first time.) You must develop your own software using the command set provided in this chapter to communicate with software resident in the Model 520.

Note that the RS-232C serial interface capability is standard on any Model 510/520, while either the RS-422A interface or the IEEE-488 (GPIB) interface is available as an option. To quickly determine which interface capabilities your unit has, check the connectors installed on the back panel (see Figure 5-1). Active interfaces have a connector mounted in the labeled port. A blank panel means your unit doesn't have that interface capability.

5.2. OPERATING WITH EXTERNAL CONTROL INPUTS.

With the mode keyswitch set to OPERATE position, the Model 520 accepts externally generated inputs for program RUN, STOP, and RESET. Connect control inputs as follows.

Connect external RUN, STOP and RESET control signals at appropriate terminals of TB3 events/alarms interface on the Model 520 rear panel (Figure 5-1). (See Table 5-1 for terminal assignments.) Note that these are photo-coupled input lines, and the source voltage (TB3-18) must be connected to a +5V power supply. You may either use an external power supply to provide 5V to the photo-isolators, or use the Model 520's internal 5V, 50 mA supply (TB3-17).

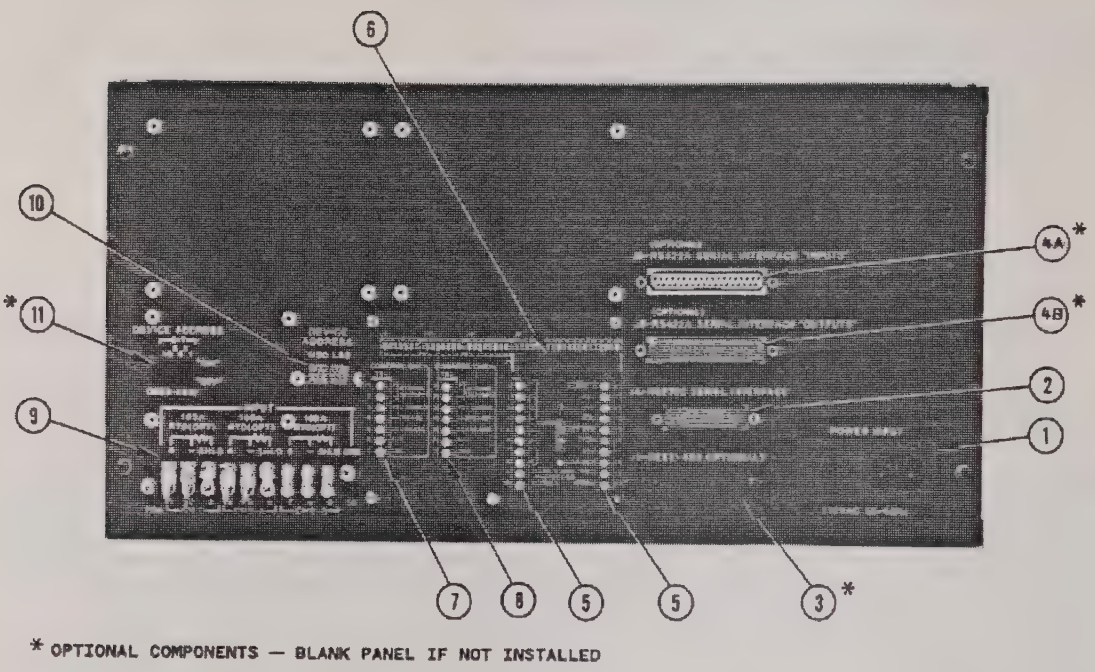

Figure 5-1: Rear Panel Terminals and Connectors.

Para. 5.2 (Cont.)

If the internal power supply is used, jumper TB3-17 to TB3-18 and connect TB3-14, -15, or -16 to TB3-13 momentarily to actuate the RUN, RESET, or STOP functions, respectively. There is no external isolation in this case.

If an external 5V power supply is used, connect its positive (+) output to TB3-18. The RUN, RESET, or STOP function is actuated by momentarily connecting TB3-14, -15, or -16 to the negative (-) output of the external power supply. No connection should be made to TB3-13 if external isolation is desired.

TABLE 5-1: EXTERNAL CONTROL SIGNAL CONNECTIONS.

NO.	FUNCTION
13	0 V DC (circuit common)
14	RUN
15	RESET to start of program
16	STOP
17	+ 5 V DC regulated internal logic power supply (50 mA max)
18	+ Isolated source voltage input

5.3. REMOTE COMPUTER INTERFACE VIA RS-232C SERIAL CONNECTION.

5.3.1. Configure Model 520 for RS-232C Communication.

1. If the IEEE-488 Interface Board is installed, install the Serial Mode Select Jumper on the 2-pin terminal board on the rear panel.
2. Connect a suitable cable from the remote computer to Model 520 RS-232C port J4, a 25-pin D subminiature connector. The fixed baud rate for this serial interface is 2400. Parity is not required, but odd parity is transmitted. The frame width is 7 bits plus parity plus 1 start bit and 1 stop bit. RS-232C voltage connections are via J4 as follows:

Transmit - Pin 2 Receive Data - Pin 3 Common - Pin 7

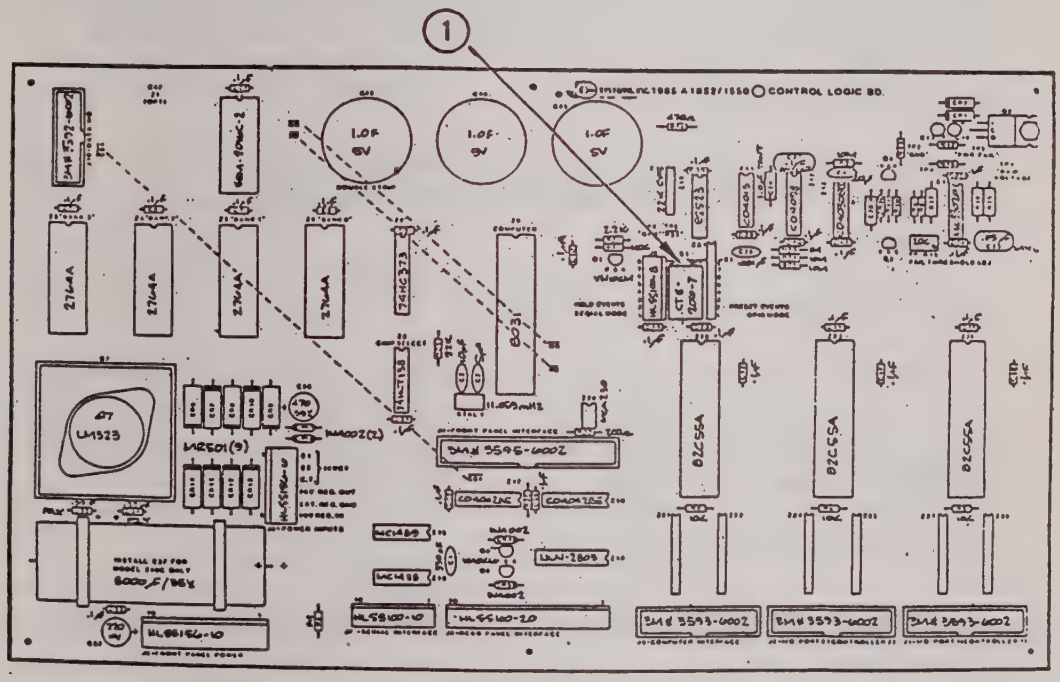

Figure 5-2: Control Logic Board A1852/1550.

5.3.2. Monitoring Model 520 Status via RS-232C Interface.

With the Model 520 MODE SELECT keyswitch in the OPERATE position and either the RUN or STOP mode selected, you can use the remote computer's RS-232C serial interface to monitor the current status of a program. (If you want to take complete control of the Model 520 from the remote computer, refer to Para. 5.3.3.)

To monitor current status, send an ASCII string command code selected from those shown in Table 5-2. For example, to read the current setpoint on Channel 1, send the ASCII string SP1. To then read the time remaining in the current step, send the ASCII string TIM. The 520 will transmit the requested data immediately upon receipt of the command code. The computer must read (input) the data into a string variable.

5.3.2.1. Parameter Response.

A parameter response shows the current setting in numeric form; for example, 75.0 for current setpoint. When a parameter has been cleared (for example, a setpoint for Channel 2 when that controller is not in use), the display will read "---.-". Parameter responses include the setpoints for Channels 1 and 2, as well as alarm limits.

5.3.2.2. Mode Response.

A mode response shows a 3-letter abbreviation for the mode; for example, RUN for running, STP for stopped, EOP for end of program, or DGN for diagnostics.

5.3.2.3. DIP Switch Position Response.

A DIP switch response shows the settings of switch positions (bits), reading from left to right as 1 through 8. If the bit is not selected, a 0 is shown; if it is selected, the bit position is shown. For example, a response of 02000000 shows that bit 2 is on and all others are off.

5.3.2.4. Alarm Condition Response.

The alarm condition response is an eight-character ASCII string as listed in Table 5-2.

5.3.3. Full Remote Computer Control via RS-232C Interface.

5.3.3.1. How It Works.

With the Model 520 SELECT MODE keyswitch in the OPERATE position, the remote computer can monitor the Model 520. To transfer full control of the Model 520, set the SELECT MODE keyswitch to the REMOTE COMPUTER ACTIVE position. In this mode, the Model 520 keypad is inactive; all Model 520 operations are controlled by commands from the interfaced computer. However, all displays and values are shown in the appropriate position on the Model 520 front panel when the 520 is stopped.

TABLE 5-2: COMMAND SET FOR OPERATE OR REMOTE MODE KEYSWITCH POSITION.

SP1	Read Channel 1 current setpoint value
SP2	Read Channel 2 current setpoint value
PR1	Read current actual Channel 1 process variable (such as temperature)
PR2	Read current actual Channel 2 process variable
TIM	Read time to go in current step
STN	Read current step number
CTG	Read number of cycles to go in current program (including current cycle)
LTG	Read number of loops to go in current nested loop
DIP	Read internal DIP switch 1 setting (Z33 on front panel)
SW1	Read internal DIP switch 1 (Z33)
SW2	Read internal DIP switch 2 (S1 on control logic board)
LCK	Read keyswitch position - returns operate (OPR), program (PRG), or remote (RMT)
ALM	Read alarm status. Response is "S1L1S2L2" if all alarms are active; "--" replaces code for inactive alarms L1 = Channel 1 limit exceeded L2 = Channel 2 limit exceeded S1 = Controller 1 failure S2 = Controller 2 Failure
CTL	Read controller modes as 6-character ASCII string (for Mod. 520). First 3 characters indicate status of Controller #1, second 3 indicate status of Controller #2. For example: MN1PG2 I I__ Controller #2 in PROGRAM mode I_____ Controller #1 in MANUAL mode
SST	Select Step Mode
SCY	Select Cycles/End of Program
SLP	Select Loops
SS1	Select Setpoint #1
SS2	Select Setpoint #2
SL1	Select Limit #1
SL2	Select Limit #2
STM	Select Time
SE1	Select stored events. Use EV1 command (below) to enter or change selected events.
EV1	Initiates events mode so that event outputs can be read or changed. Standard events line format is used.
RQN	Service request enable (IEEE-488 only)
RQD	Service request disable (IEEE-488 only)
MOD	Read Operating mode - returns run (RUN), stop (STP), end of program (EOP) or diagnostics (DGN)
?	Used during programming to read program parameters and advance program pointer. Reading the last step returns EOP. Also used to read event outputs after EV1 command.
!	Enter step number and advance pointer
ULD	Upload command - sends out total program data as stored in 520 programmer memory (2050 characters compressed in binary code) via computer interface with an ASCII Code ":" as the start-of-file character and a "/" as the end-of-file character.

CAUTION

Model 520 must be in STOP mode, and both controllers channels set to PROGRAM (PROGRAM LED on) whenever ULD or DLD commands are used, or data may be lost.

PRR	Reset command - resets current program to first step in program being reviewed

In addition to the mode commands for any switch position listed in Table 5-2, the operational commands listed in Table 5-3 are accepted by the Model 520 only in REMOTE COMPUTER ACTIVE mode. All commands in Table 5-3 except "!" require the keyswitch to be in the REMOTE COMPUTER ACTIVE position. "!" can be used to enter a step number under any circumstances. Other "!" entries require that 520 be stopped and in REMOTE COMPUTER ACTIVE.

TABLE 5-3: COMMAND SET FOR REMOTE COMPUTER ACTIVE KEYSWITCH POSITION.

RUN	Starts operation - same as pressing RUN button
STP	Stops operation - same as pressing STOP button
PRR	Reset to first step in present program - same as pressing RESET PRGM button
!	Enter command - enters data and advances pointer to next parameter -- same as pressing ENTER button
CLR	Clear command - clears data for parameter identified by program pointer -- same as pressing CLEAR button
MN1	Place Controller #1 into MANUAL mode
MN2	Place Controller #2 into MANUAL mode
PG1	Place Controller #1 into PROGRAM mode
PG2	Place Controller #2 into PROGRAM mode
DLD	Download command - accepts data in the same format that was produced as a result of the ULD (upload) command and loads 520 programmer memory with all information previously uploaded to the computer. Accepts 2050 characters; spaces ( ) and carriage returns <↵> are not counted in total.

CAUTION

Model 520 must be in STOP mode, and both controllers channels set to PROGRAM (PROGRAM LED on) whenever ULD or DLD commands are used, or data may be lost.

5.3.3.2. Select/Read Controller Modes.

The commands beginning with MN and PG and followed by the controller number make it possible to place the specified controller in manual or program mode, respectively. The 520 mode keyswitch also must be in the PROGRAM position whenever the unit is to be programmed.

The CTL command reads the controller modes, returning data in ASCII characters that indicates the controller status. These responses also begin with either MN or PG for manual or program mode, followed by the controller number.

For the single-controller Model 510, 3 characters are returned to indicate controller status. For the dual-controller Model 520, 6 characters are returned: the first 3 indicate Controller #1 status; the second 3 indicate Controller #2 status.

5.3.3.3. Select a Step.

There are three ways to access a desired step.

1. If you are currently on any step of a program, you can return to the first step of that program by sending the reset command, PRR.
2. If you know the step number you want, use the random access feature to select that step as follows:
   a. Send the Select Step command SST.
   b. Send the desired step number, followed by an exclamation mark (!). This is the same as pressing the ENTER button in direct manual operation.

5.3.3.4. Select a Parameter.

The command set used with full remote computer control of the Model 520 permits random access to a specific parameter (or the events) within a step. These commands -- SCY, SLP, SS1, SS2, SL1, SL2,STM, and SE1/EV1 -- are listed and defined in Table 5-2. For example, to change the time for a given step, proceed as follows.

1. Place both controllers in program mode (PROGRAM LED on).
2. Access the desired step per 5.3.3.3.
3. Send the Select Time command string STM.
4. Send the new time as explained in 5.3.3.5.

5.3.3.4. Enter a Parameter.

To enter a new or changed parameter from a remote computer, note that you must send the new entry, then press the exclamation mark (!). This transmits the data from the remote computer to the Model 520 programmer. You can send two or more parameters for a step as a single string as follows.

1. Send the first parameter to be programmed or changed followed by the !, which is the remote computer ENTER command.
2. Send the second and subsequent parameters *in the order they appear* (on the front panel display or the program worksheet), separating each by an !.

5.4. REMOTE COMPUTER INTERFACE VIA RS-422A SERIAL NETWORK OPTION.

5.4.1. Configuring Model 520 for RS-422A Communication.

A single master computer can communicate with up to 50 Model 520's that are equipped with the RS-422A option. However, care must be taken to correctly connect the Model 520's and the master computer. Several switch positions also must be selected based on system configuration. These requirements are detailed in the following paragraphs.

5.4.1.1. Voltage Connections.

Unless your computer is equipped with an RS-422A port, you will need to install an RS-232C/RS-422A level shifter (JC Systems Model A1740 or equivalent) between the RS-232C port of the master computer and the first Model 520 in the network.

RS-422A voltage-level connections from the computer to the first Model 520 on the party line are via RS-422A Port J6, a 37-pin "D" type miniature connector, as shown in Figure 5-3. (Pin assignments are given in Table 5-4.) Connector J5 on the first Model 520 then connects to J6 on the second Model 520. Subsequent Model 520's in the network connect in the same manner as the first pair.

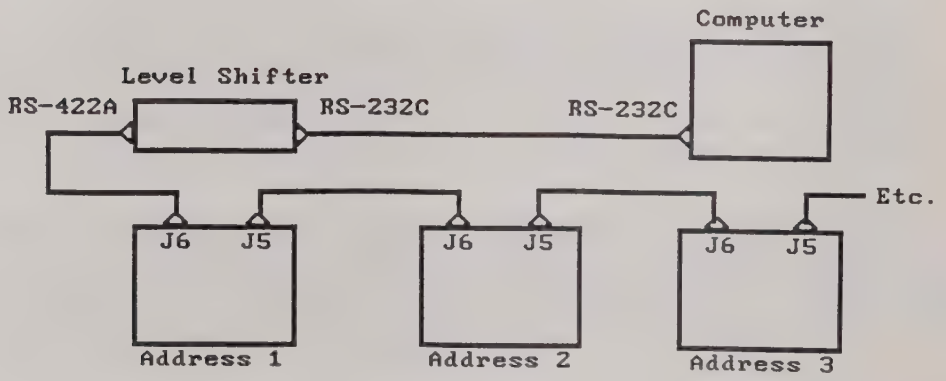

Figure 5-3: RS-422A Serial Communication Connections.

TABLE 5-4: RS-422A PORT PIN ASSIGNMENTS.

FUNCTION	SIGNAL	COMPUTER TO UNIT #1 J6 PIN NO.	UNIT #1 TO UNIT #2 J5 PIN NO.	UNIT #2 TO UNIT #3 J6 PIN NO.
Send Data (to Master Computer)	SD (A)	4	4	4
	SD (B)	22	22	22
Receive Data (from Master Computer)	RD (A')	6	6	6
	RD (B')	24	24	24
Signal Ground	SG	19	19	19

5.4.1.2. RS-422A Interface Switch Settings.

The following switches must be set as specified to ensure correct party-line serial operation. To gain access to internal switches, loosen camloc fasteners securing the top cover and remove the cover.

1. *Address Switch* on Model 520 rear panel -- this direct-reading rotary switch (Figure 5-1, Item 10) must be set to a different number (address) for each Model 520 connected to the system. When two or more Model 520's are used, the usable addresses are 1-99 inclusive.

NOTE

The user will need assigned addresses to communicate command and status information from the master computer to party-line Model 520's. Therefore, a hard-copy address chart posted near the computer showing the address and physical location of each Model 520 on the network might prove useful in some applications.

2. *RS-232C/RS-422A Select Switch S3* on photo-isolated A1566 Interface Board (Figure 5-4 Item 1) -- set to RS-422A (up) position for serial communications between a single computer and several programmers on a RS-422A network.

NOTE

An RS-232C/RS-422A Level Shifter (JC Systems Model A1740 or equivalent) must be used to convert RS-232C output from the computer for RS-422A network use.

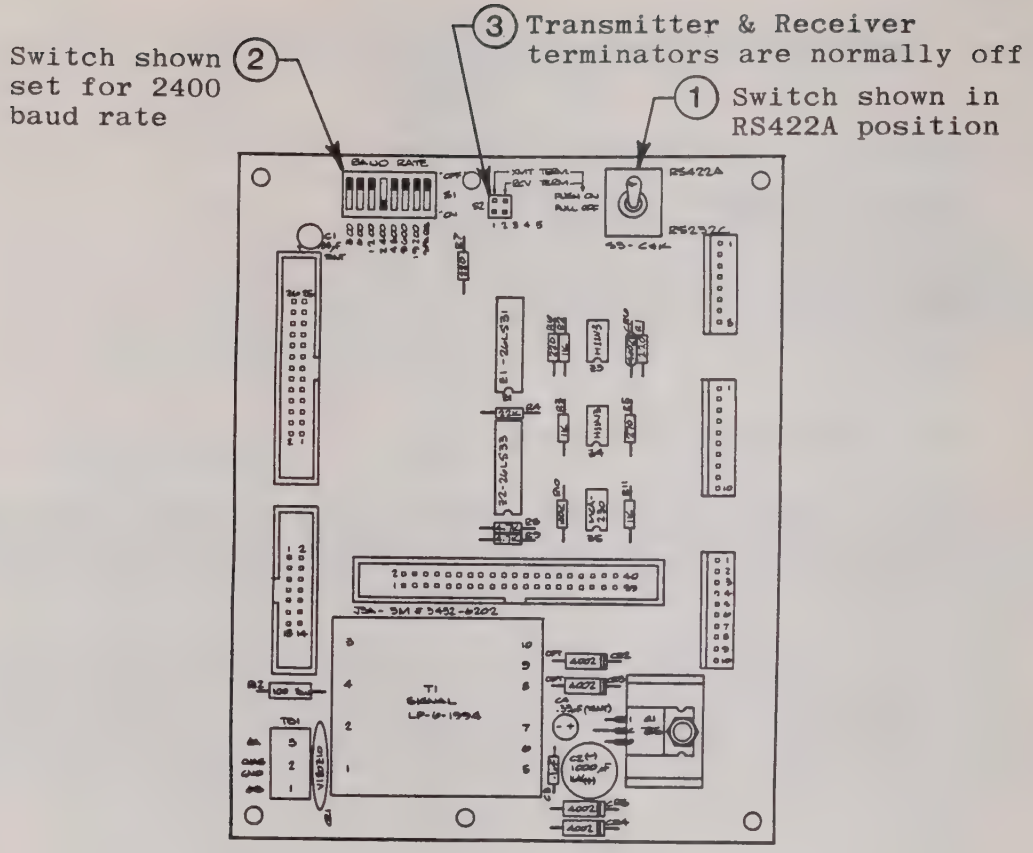

Figure 5-4: RS422A Programmer Interface Board A1566.

Para. 5.4.1.2 (Cont.)

3. *Baud Rate Dip Switch S1* on A1566 (Item 2) -- Select a baud rate of 300, 600, 1200, 2400, 4800, or 9600 by placing that switch in the ON (down) position. (9600 is the maximum baud rate for Model 520 communications.) All other baud switches must be in the OFF (up) position, and all Model 520's sharing party-line serial communications must be set to the same rate.

4. *Terminate Network A1566 Jumper* -- If only one Model 520 is connected to the computer, jumper pins 1 and 2 of the termination header (Figure 5-4, Item 3). If more than one Model 520 is connected, terminate the last unit only; leave the jumper off all other Model 520 termination headers.

5.4.2. Monitoring Model 520 Status via RS-422A Interface.

With the Model 520 MODE SELECT keyswitch in the OPERATE position, you can use a remote computer's serial interface to monitor the current status of a program. To monitor current status, send an ASCII string command code selected from those shown in Table 5-2. For example, to read the current setpoint on Channel 1, send the ASCII string SP1. To then read the time remaining in the current step, send the ASCII string TIM. The 520 will transmit the requested data immediately upon receipt of the command code. The computer must read (input) the data into a string variable.

5.4.3. Full Remote Computer Control via RS-422A Interface.

With Model 520 SELECT MODE keyswitch in the OPERATE position, the remote computer is used to read values already programmed into the Model 520. To transfer full control of the Model 520, set the SELECT MODE keyswitch in the REMOTE COMPUTER ACTIVE position. In this mode, the Model 520 front panel controls are inactive; all Model 520 operations are controlled by commands from the interfaced computer.

5.4.4. Format for Entering RS-422A Computer Commands.

You must send the address of the specific Model 520 you want to query before you send the command code string. To enter the address, send the disconnect command, a number symbol (#), followed by the address number assigned to the Model 520 (1-99). There must be a blank space between the address number and the command (see Figure 5-5).

The disconnect command (#) disconnects all addresses, clearing the network. The Model 520 address number connects the computer to the selected address *only*, and the computer remains connected to that address until another disconnect command is received. Therefore, you only need to transmit the address once, immediately after the disconnect command. The computer will continue to address the same Model 520 from that time until the next disconnect command is sent.

```
EXAMPLE:  #3 SP1
          ||| |
          ||| |__ Command (from Table 5-2 or 5-3)
          |||____ Blank space
          ||_____ Model 520 address number
          |______ Number symbol (disconnect command)
```

Figure 5-5: Format for Remote Computer Commands (more than one Model 520 on line).

5.5. REMOTE COMPUTER INTERFACE VIA IEEE-488 (GPIB) OPTION.

This optional interface provides a remote IEEE-488 controller or computer with the same command and communications capabilities as the RS-232C interface described in Para. 5.3. In addition, the IEEE-488 option includes the capability to generate service requests upon user-selected events.

5.5.1. Configure Model 520 for IEEE-488 Interface.

If the IEEE-488 computer interface option is installed, connect IEEE-488 system at Connector J3 on the rear panel (Figure 5-1 Item 3), make sure the Serial Mode Select Jumper is not installed on the two-pin terminal board on the rear panel, and set service request function and address switches as specified below.

5.5.1.1. Set Service Request DIP Switch.

The IEEE-488 option includes a service request feature which, when enabled, causes the Model 520 to generate a service request when a deviation alarm condition begins and/or ends. The user can also set switches on the SRQ board, which is mounted on the inside of the 520 rear panel, to generate a service request at selected events.

Service request DIP switch S1 positions on the SRQ and device address interface board A1848 (Figure 5-6) are marked YES/NO. You can select what conditions will (or will not) cause a service request by the switch positions. Selecting the YES position causes a service request to be generated when the specified condition exists; the NO position prevents the service request. Selecting the YES position for both the Event ON and Event OFF will generate a service request both when the event turns ON and when it turns OFF.

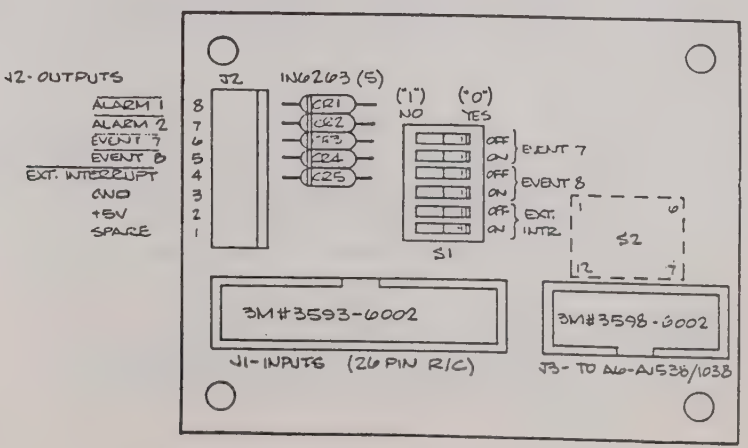

Figure 5-6: IEEE-488 SRQ and Device Address Board A1848.

Service request DIP switch positions and corresponding events are identified below.

1. Positions 1 and 2 control service requests when Event 7 turns OFF and ON, respectively.
2. Positions 3 and 4 control service requests when Event 8 turns OFF and ON, respectively.

NOTE

Event 8 and the External Interrupt (bit positions 5 and 6 on the DIP switch) share common access to the IEEE-488 interface, so do not select both at the same time.

3. Positions 5 and 6 allow the External Interrupt Input access to the IEEE-488 interface. Connecting TB3 Pin 19 (remote interrupt) to Pin 13 (ground) with an isolated set of contacts generates a service request if SRQ board switch S1 positions 5 and 6 are both set to YES.

5.5.1.2. Read Service Request (Serial Poll) Data.

All 520's on the buss are polled by the computer to identify the one that generated the service request and to determine what condition(s) caused the service request to be generated.

The serial poll response from the Model 520's is an 8-bit word in ASCII characters that gives the computer this information. The list below explains the significance of each bit setting. Note that Bits 0 and 1, for example, work together to show not only if a Channel 1 alarm is on or off (bit 0), but also if the alarm status has changed (bit 1) since the last service request. The other bits provide similar information. After a serial poll, all bits are automatically reset.

```
Bit 0 set -- Channel 1 Alarm is ON
Bit 1 set -- Channel 1 Alarm status change
Bit 2 set -- Channel 2 Alarm is ON
Bit 3 set -- Channel 2 Alarm status change
Bit 4 set -- Event 7 ON
Bit 5 set -- Event 8 ON
Bit 6 set -- When any condition causes a Service Request
Bit 7 set -- Programmer failure caused a Service Request
```

5.5.1.3. Set Device Address.

The IEEE-488 device address switch (S2 on the A1848 PCB, which is accessible on the Model 520 rear panel -- see Figure 5-1, Item 11) must be set to a different number (address) for each Model 520 connected to the network. The highest possible address is 31 (all bits set to ON); however, address 31 is normally reserved for UNTALK and UNLISTEN commands.

5.5.2. Remote Computer Operations via the IEEE-488 Interface.

5.5.2.1. Commands and Format.

Commands and command format for the IEEE-488 interface are the same as those previously described for the RS-422A interface (see Para. 5.4), except as follows:

1. The service request functions have been added as described below.
2. "#" (address) is not part of the transmitted command string as it is with the RS-422A.

5.5.2.2. Service Request Enable/Disable.

To enable the service request function, an RQN command must be transmitted by the computer. An RQD command disables the service request.

*RQN	Service Request Enable
*RQD	Service Request Disable

* Active only with IEEE-488 option. When installed as described in Para. 5.5.1, the service request capability can generate an interrupt whenever the alarm status for either channel changes. These commands turn that capability on and off.

NOTE

There is no memory of service request conditions that occur while the service request is disabled. Therefore, when the service request is enabled, a service request will not be generated for a condition that occurred while the service request was disabled.

6. Maintenance and Calibration.

6.1 PREVENTIVE MAINTENANCE.

6.1.1 Cleaning.

Regularly dust outside surfaces and keep the Model 520's interior free of dust and debris, especially pieces of wire that could cause shorts.

6.1.2 Other Preventive Maintenance.

1. Perform the calibration procedures described in this chapter at least once a year.
2. Replace the lithium battery every five years.

6.2 PERFORM CORRECTIVE MAINTENANCE.

The Model 520 is designed to be trouble-free, offering reliable service without extensive maintenance. The only corrective maintenance recommended consists of troubleshooting to the board level using procedures provided in this chapter, followed by removal and replacement of defective components if required.

6.3 RUN TURBO DIAGNOSTICS.

The Model 520's turbo-diagnostic capability allows quick, simple troubleshooting and verification of hardware operation. The tests described below can be used to check hardware functions. Each test operates a particular I/O device and the displays or switches associated with that device. Settings on various switches also may be displayed.

6.3.1 Using Diagnostics.

NOTE

Controller switch S5 bit 7 must be in the up position for the diagnostics to work. (This switch is factory sealed in place and should not be changed.)

1. Set keyswitch (Figure 6-1, Item 1) to PROGRAM.
2. Hold down the RESET PRGM button (2) while pressing the STOP button (3B). This automatically places you in turbo diagnostics at test code -591.6, the current HEAT proportional band setting, with the value displayed for each channel. If the diagnostic mode does not come up on test -591.6, the programmer is not equipped with turbo diagnostics. Proceed to Step 6.

NOTE

The display test is bypassed in turbo mode. If you want to conduct this test (code -594.0), select it using the individual entry method (see Step 6 below).

3. To switch from HEAT to COOL parameters, press the SELECT STEP button (8).
4. To select another test, simply press and hold down the applicable step slew button — STEP REV (7) or STEP FWD (9) — until that test number appears in the applicable channel setpoint display. When you release the slew button, the number in the process display (22 or 28) will change to the current HEAT parameter for the selected test.
5. The first value displayed will always be the HEAT parameter for the selected test. To check the COOL parameter, press the SELECT STEP button (8).
6. At any time during diagnostics, you can individually select a specific test as follows:

   Press SELECT SETPNT button (11 or 14) and input the diagnostic test code (-594.0, for example) using the keyboard (4), then press ENTER button (6) to start the selected test.

NOTE

The decimal must be entered when any code is used; for example, -590.4.

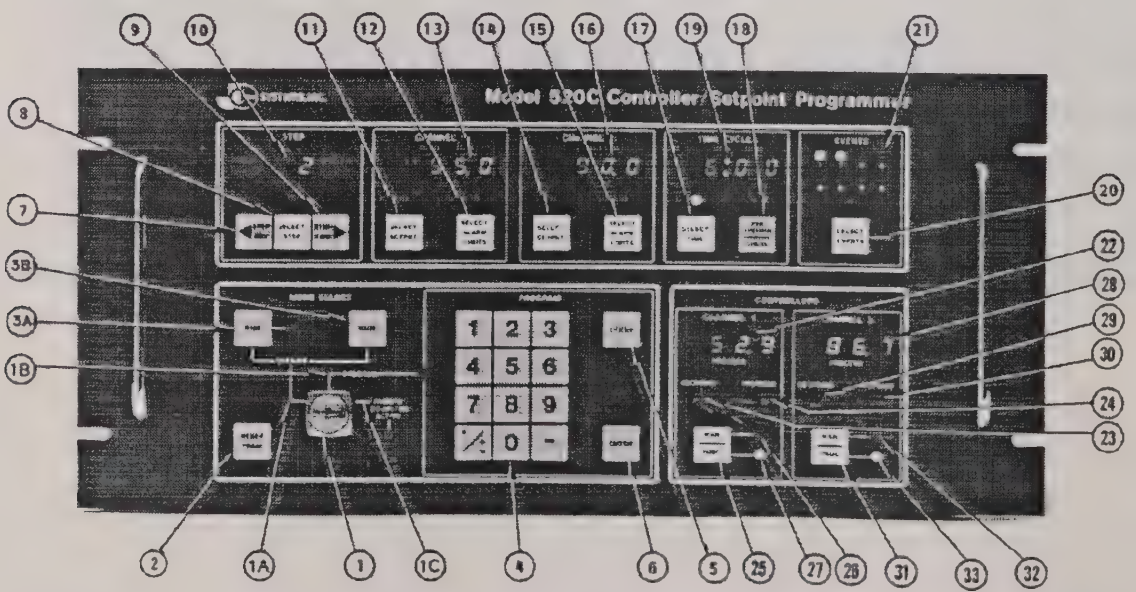

Figure 6-1. Front Panel Displays and Indicators.

7. To exit diagnostics, turn keyswitch (1) to either OPERATE or REMOTE COMPUTER ACTIVE mode. The programmer/controller will exit diagnostics and the controller PROCESS display will show an error message (---.-). The error message will be replaced when a valid setpoint is sent to the controller. This may be done either from a program (with controller in Program mode), or by front-panel setpoint entry (with controller in Manual mode).

6.3.2 Dual Parameters Display.

The Model 520DP permits display of both heating and cooling parameters during diagnostics. Codes for diagnostic test of cooling parameters are assigned the -58XX series of diagnostic test codes (use the same last two digits for the -58XX code as you would use for the corresponding -59XX test).

6.3.3 List of Diagnostic Tests.

Table 6-1 lists the heating parameter diagnostic test codes and their short titles with a brief description of each test. The tests are grouped by their intended use. Where more detailed descriptions of a test are provided in the text, the table references the applicable paragraph number.

NOTE

For ease of reference, decades of displays are identified as positions 1 thru 4, with position 1 equal to the least significant digit (at the extreme right of display) and 4 as the most significant digit (at the extreme left of the display). Decimal positions are not counted.

SUMMARY OF DIAGNOSTIC TESTS.

Test No.	Item Tested	Description	See Para.
		NOTE	
		Unless otherwise specified, displays appear on the corresponding process controller display(s).	
		Tests to Read Actual Switch Settings	
--	Address Switch (RS-422A Only)	Model 520 STEP display shows RS-422A party-line address. No STEP display for RS-232C or IEEE-488 mode.	
--	Baud Rate (RS-422A Only)	Pressing SELECT STEP button displays setting of RS-422A interface board baud rate switch in EVENTS display	
--	Programmer Switch Z33	Pressing SELECT TIME button turns on EVENTS LEDs corresponding to switch positions that are on (up) -- i.e., event 1 LED is on if switch Z33 bit position 1 is up	

Test No.	Item Tested	Description	See Para.
--	Control Logic Board Switch S1	Pressing the END PROGRAM/CYCLES button displays S1 settings in the same manner as described for Z33 -- if EVENTS LED 1 is on, switch S1 bit position 1 is on (to the left)	
--	Events	Pressing the SELECT EVENTS button turns on LEDs for event outputs that are currently on. The outputs can be manipulated and latched while in diagnostics by entering the event number(s) on the keypad and pressing the ENTER button; the SELECT EVENTS LED will turn off and event outputs will be latched.	
--	Enter Setpoint	Echoes back a changed setpoint value (or current output when current loop installed).	
-590.0	A/D Data Valid	Shows that the A/D converter is generating "data valid" strobe. High and low levels produced by the A/D converter show as alternating letters H and L on the display.	6.3.5.1
-590.1	A/D Data Display	A/D converter data output displayed in decimal form.	
-590.2	Computer Handshake and Current Loop Select	Displays the logic level of two computer handshake lines as either an H or L in display position 1 and 2, respectively; position 3 shows current loop present (L) or absent (H).	
-590.3	Mode Select Switch	An H or L shows the settings of individual bits on Switch 7. Status and bit positions correspond -- i.e., display position 1 is DIP switch S7-1.	6.3.5.2
-590.4	Cycle Time Switch (S1)	Displays the decimal value selected on DIP Switch S1.	
-590.5	Automatic Reset Switch (S2)	Displays the decimal equivalent of the binary value selected on DIP Switch S2 as determined by the settings on S2. The values can range from 0 (all bits LO) to 255 (all bits HI).	

Test No.	Item Tested	Description	See Para.
-590.6	Staging (Null Bandwidth) Switch (S3)	Displays the staging setting or null bandwidth in degrees expressed as the decimal equivalent of the binary value selected on switch S3. This value can range from 0 to 63, as only 6 bit positions of the switch are used.	
-590.7	Reset Windup Inhibit Switch (S4)	Displays the reset windup inhibit expressed as the decimal equivalent of the binary value selected on switch S4. The value, represented in units of percent of proportional band, can range from 0 to 127 (7 bit positions used).	
-590.8	Rate Switch (S5)	Displays the decimal equivalent of the value selected on the rate switch (S5). For dual-parameter boards, the value can range from 0 to 7 (3 bit positions used; bits 1-3 for heat parameters and bits 4-6 for cool parameters). (Bit 7 enables the controller diagnostics. It is factory sealed and must not be changed.) For single-PID boards, the value can range from 0 to 63 (6 bit positions used).	
-590.9	Proportional Gain Switch (S6)	Displays the decimal equivalent of the binary value selected on the proportional gain switch (S6). The value can range from 0, which is the on/off mode of operation, to 255, which is the maximum proportional gain setting for the controller.	
		Tests to Verify (Read) Parameter Settings	
-591.0	Cycle Time	Displays the selected cycle time. The value can range from 0 to 255 seconds. The cycle time must be set to 255 for the current loop to operate. If the current loop is connected and the cycle time switch is not set to 255, an error message ("LOOP") will be displayed.	
-591.1	Fractional Part of Automatic Reset Switch Setting	The automatic reset value can range from 000 to 255 x 10-2 REPEATS/MINUTE. The AUTOMATIC RESET setting is displayed in two segments. This test displays the fractional part (value to the right of the decimal point).	

Test No.	Item Tested	Description	See Para.
-591.2	Whole Number Part of Automatic Reset Switch	Used with -5911 to read the total value of the AUTOMATIC RESET. This test displays the whole number part (value to the left of the decimal point).	
-591.3	Rate Setting	Displays The RATE action, expressed in tenths of a minute, as a number between 0 and 6.3 minutes.	
-591.4	Proportional Gain	Displays the proportional gain, expressed in units, as a number between 0 and 255.	
-591.5	Span	Displays the span of the controller, expressed in degrees and tenths of a degree. (The span is the algebraic sum of the difference between the maximum and minimum setpoint.)	
-591.6	Proportional Band	Displays the proportional band (span divided by proportional gain) in degrees and tenths.	
-591.7	Reset Windup Inhibit Bandwidth	Displays the Reset Windup Inhibit (RWI) bandwidth in tenths of a degree.	
-591.8	Lower Setpoint Limit	Displays the lowest setpoint accepted by the controller. A lower setpoint causes dashes (---.-) to appear in the display and disables both the "heat" and "cool" outputs of the controller.	
-591.9	Upper Setpoint Limit	Displays the highest setpoint accepted by the controller. The same error message as described for the Lower Limit Setpoint will appear if this limit is exceeded.	
		Tests of System Operation.	
-592.0	Watchdog Timer Circuit Check	Verifies that the watchdog timer circuit timed out and reset the controller to its start condition.	
-594.0	Exercise Display and Outputs	Initiates display test; cycles all characters and indicators.	6.3.4.

6.3.4 Display Test.

This test verifies that each digit of the setpoint and process temperature displays for the applicable controller cycle through the entire character set (0-9,-,E,H,L,P).

EXCEPTION: The most significant digit will not display the numeral "0".

After cycling the displays, the diagnostic program will momentarily and in sequence turn on decimal point 1 (xxx.x); decimal points 3 (x.xxx) and 0 (xxxx.), followed by the HEAT, COOL, and NULL outputs. HEAT and COOL output will be indicated by the corresponding LED momentarily turning on and off; there is no indication for NULL output.

To expedite the display test, press the SELECT SETPNT button (8), then enter .1 in the least significant bit (LSB) position. To exit the test, press the SELECT SETPNT button (8), then enter .9 in the least significant bit (LSB) position.

6.3.5 Tests to Read Actual Switch Settings.

6.3.5.1 Enter Setpoint Test.

Enter a setpoint other than -59x.x. Observe that the corresponding process display echoes back the setpoint value (except for the numbers -59x.x, as that number series is used exclusively for diagnostic tests).

If the 4-20 mA current loop option is connected, test output by entering any number from 0000 (which outputs the minimum current) to 4095 (which outputs the maximum current). 50% current output would occur with a setpoint setting of 2047.

6.3.5.2 -590.2 Computer Handshake and Current Loop Select Test.

This test indicates the status of the computer interface handshake command inputs and the optional 4-20mA output. The two handshake lines involved are the READ TEMP Command (PIN 22) and the SETPT VALID Command (PIN 24) on the REMOTE PROGRAM connector (J5). The display shows the logic level of each as an "H" or "L" as shown in Figure 6-2. The READ TEMP (PIN 22) status appears in position 1 of the display, while the SETPT VALID (PIN 24) status appears in position 2.

Current loop select bit status is low when the current loop is plugged into connector J1 on the controller PCB; status is indicated by an H or L in Position 3.

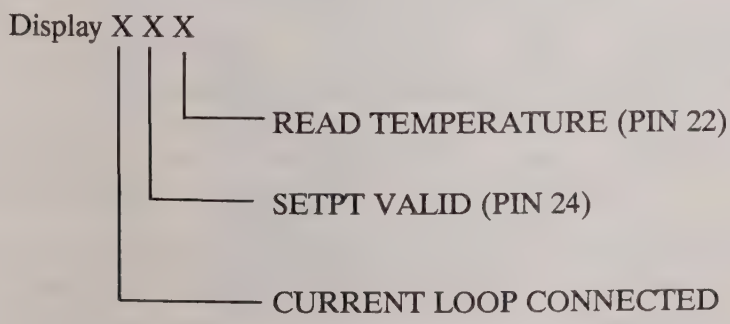

Figure 6-2. Display Positions for -590.2 Test.

6.3.6 -592.0 Watchdog Timer Circuit Check

The system's watchdog timer ensures that the controller will reset and restart upon sensing a brownout or transient on the power lines sufficient to disrupt the operation of the microcomputer. This function keeps the microcomputer from getting lost. Approximately 4 seconds after test 592.0 is selected, the controller will reset and the display will cycle through the digits. This activity verifies that the watchdog timer circuit timed out and reset the controller to its start condition.

6.4 CALIBRATE CONTROLLER.

The controller is calibrated before shipping from JC Systems. Calibration parameters used by JC Systems are shown on the Calibration Parameters Sheet included as the first page of this manual. Perform any subsequent calibration as specified below, using the values provided on the Calibration Parameters Sheet.

6.4.1 Calibrate for Thermocouple Input.

6.4.1.1 Equipment Required.

1. Thermocouple calibration standard (calibrator) such as Wahl Instruments Model C-65 or Biddle Model 720350.
2. Thermocouple extension wire of the required type for the unit being calibrated.
3. Temperature sensor to measure ambient temperature.

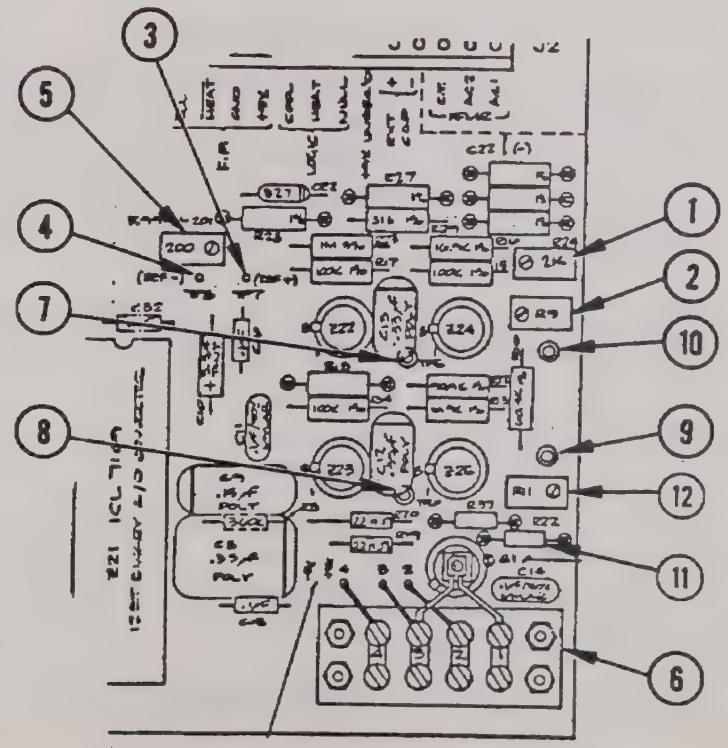

Figure 6-3. Controller Calibration Points.

6.4.1.2 Ambient Calibration.

1. Disconnect thermocouples.
2. Using the thermocouple extension wire, connect the calibrator to the temperature controller input.
3. Measure and record ambient temperature.
4. Turn on Model 520 using rocker switch on rear panel and set calibrator output to the ambient temperature as measured in Step 2.
5. Adjust ambient potentiometer R24 (Figure 6-3, Item 1) until the PROCESS display reading matches that of the calibrator.

6.4.1.3 Full-Scale Calibration.

1. Set the calibrator to the calibration temperature specified on the Calibration Parameters Sheet for the type of controller being calibrated.
2. Adjust slope potentiometer R9 (Item 3) until the PROCESS display reading matches that of the calibrator.

6.4.1.4 Final Calibration and Verification.

To verify calibration, set calibrator to various temperatures throughout the controller's range. Ensure that the temperature in the PROCESS display matches the calibrator setting to within ±.5°C, which is the accuracy specification for the controller. If accuracy is not within ±.5°C, repeat calibration.

6.4.2 Procedure for Linear Input Controller.

6.4.2.1 Equipment Required.

Millivolt or milliamp source (depending on linear input type).

6.4.2.2 Ambient Calibration.

1. Using standard copper wire, connect the current source to the temperature controller input.
2. Turn on Model 520 using rocker switch on rear panel and set current to the value specified on the Calibration Parameters Sheet.
3. Adjust ambient potentiometer R24 (Figure 6-3, Item 1) until the PROCESS display reading matches that of the current source.

6.4.2.3 Full-Scale Calibration.

1. Set the current source to the value specified on the Calibration Parameters Sheet.
2. Adjust slope potentiometer R9 (2) until the PROCESS display reading matches that of the current source.

6.4.2.4 Final Calibration and Verification.

Repeat ambient and full-scale calibration until there is no interaction between the ambient and slope potentiometers.

To verify calibration, set current source to various values throughout the controller's range. Ensure that the reading in the PROCESS display matches the current source setting.

6.5 ADJUST CONTROLLER REFERENCE VOLTAGE AND BALANCE.

The following adjustments are made at the factory and the associated poten tiometers are then sealed. Please be aware that JC Systems cannot be responsible for any unit that does not conform to calibration standards if the described adjustments have been changed without authorization from JC Systems.

6.5.1 Equipment Required.

Digital voltmeter capable of reading 0.001 V.

6.5.2 Gain Access to Internal Components.

1. Disconnect the power source to avoid electrical shock.
2. Remove both the bottom and top covers.
3. Note the positions of service loops in the ribbon cables, then remove and retain the bands securing excess cable length.
4. Remove the four screws securing the vertical PCB board bracket and raise the bracket so that its bottom holes align with the top holes in the side plate.
5. Install the four screws removed in Step 4 in the bottom of the vertical bracket to hold controllers in an accessible position.
6. When calibration is complete, reverse these procedures to restore the Model 520 to operational status.

6.5.3 Adjust Reference Voltage.

1. Connect the voltmeter to TP7 (positive) and TP8 (negative) on the controller PCB (Figure 6-3, Items 3 & 4).
2. Turn on Model 520 power (rocker switch on rear panel) to energize controller.
3. Adjust potentiometer R36 (Item 5) until the reference voltage matches that listed on the controller specification sheet.
4. Turn Model 520 power off and remove meter.

6.5.4 Adjust Balance.

1. Short the thermocouple input by placing a jumper across either TB1 (Figure 6-3 Item 6) pins 2 and 3 or TP5 and TP6 (Items 7 and 8) on the controller board.
2. Connect the voltmeter to TP2 (negative) and TP4 (positive) (Items 9 and 10).
3. Connect a 33k-ohm resistor across R22 (Item 11) (Z8 pin 3 and minus 5V).

CAUTION

Take care at these connection points to prevent shorting out the -5V or device input.

NOTE

One of the connections must be removed and replaced during the adjustment procedure.

4. Turn on Model 520 at rocker switch on rear panel to energize the controller.
5. Note the meter reading, then remove one side of the 33k-ohm resistor and note the meter reading again.

Para. 6.5.4 (Cont.)

6. Adjust balance potentiometer R11 (Item 12) to correct for the difference in the two readings.
7. Replace the 33k-ohm resistor in the circuit.
8. Repeat Steps 5 thru 7 until there is no voltage difference between the two readings.
9. Turn off Model 520 power.

6.6 FRONT PANEL SWITCH AND DISPLAY TESTS.

NOTE

Perform these tests after exiting diagnostic mode.

1. Set keyswitch to program mode and press SELECT STEP button (Figure 6-1, Item 8). SELECT STEP LED should light. If STEP display (10) doesn't show the number 1, press 1 on keypad (4), then ENTER button (6); STEP display should now show 1.
2. Press and hold down STEP FWD button (9). STEP display should slew (move rapidly) from 2 to 91. Verify that all step numbers light with uniform brightness.
3. Press and hold down STEP REV button (7). STEP display should slew from 91 back to 1. Press SELECT STEP button (8), then 1 on keypad (4), and finally ENTER button (6); program pointer LED should light above Channel 1 SELECT SETPNT button (11).
4. Press Channel 1 SELECT SETPNT button, then press numbers on keypad (1,2,3, etc.). Numbers on display should shift left from the decimal point. Press decimal point and numbers again; numbers should shift right from decimal point.
5. Press keypad #1 and hold for 1/2 second; key should not auto-repeat.
6. Repeat Steps 4 and 5 with each parameter button and display.
7. Press MAN/PROG button for controller Channels 1 and 2 several times. LED should indicate corresponding changes in mode.

Appendix A.
PID Parameters and Their Adjustment

A.1. INTRODUCTION.

All JC Systems controllers are three-mode controllers offering proportional, integral and differential control actions. These three control actions are independently derived, then summed to act upon the controller output. The following information provides a basic description of the three control actions and how they interact, followed by specific instructions for using Model 520 DIP switches to adjust PID parameters.

A.2. DEFINITIONS.

The following definitions will be more fully explained in the accompanying text. Some of these terms are also illustrated in Figure A-1.

Process Variable -- The variable (temperature, humidity, pressure), being directly controlled; its value is sensed to originate the feedback signal.

Process Value -- the instantaneous (real-time) measured value of the process variable.

Setpoint -- An inputted variable that specifies the desired value of the controlled variable.

Deviation -- The difference between the setpoint and the process value, also referred to as "error" or "droop".

Internal Setpoint -- A setpoint derived by a controller using reset action. The internal setpoint is the controller's automatic internal equivalent to a manual setpoint.

Proportional Bandwidth -- The bandwidth from zero deviation to the deviation from setpoint (in degrees) that will produce 100% output. Bandwidth is determined by the ratio of the span (in degrees) to the selected proportional gain. Bandwidth is selected by setting the proportional gain switch S6.

Span -- The range of possible setpoints for the controller: the algebraic difference between the lowest and highest possible setpoints. For example, if the lowest setpoint value is -100.0 and the highest is +315, the span is 415.0 [+315 - (-100) = +415].

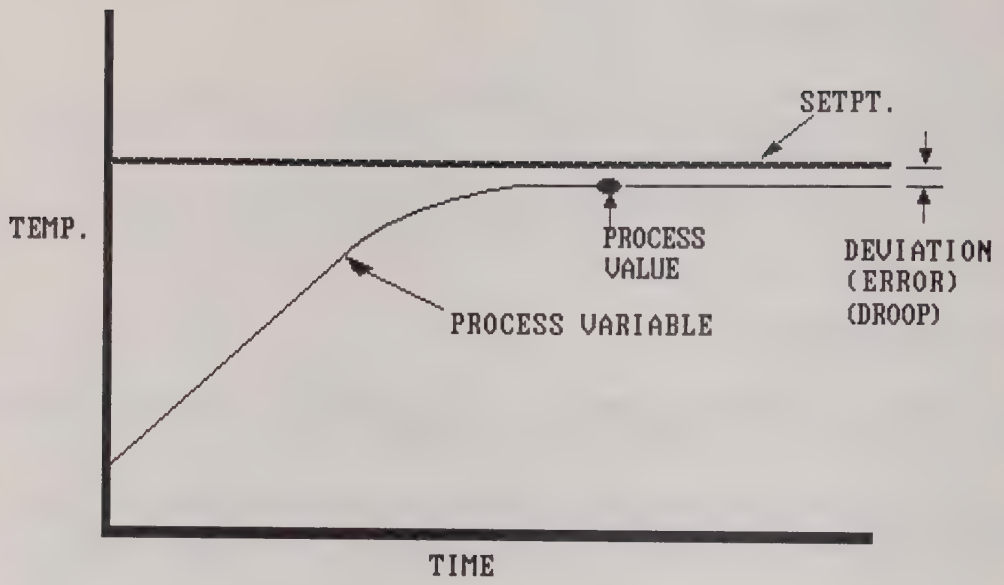

Figure A-1: Terms Used in Profile Charts.

A.3. DESCRIPTION OF CONTROL ELEMENTS.

A.3.1. Proportional Control.

A.3.1.1. Theory of Operation.

The first element, or control action, of a PID controller is P - the proportional factor. The action of the controller is proportional if the controller produces an output that is proportional to the deviation (setpoint - process value). In other words, the controller output (in percent) changes linearly as a function of the deviation.

As shown in Figure A-2, the digital process value PV is received from the monitoring equipment (thermometer in this case) and compared with the digital setpoint SP. The difference is the deviation DEV, which is the error between the desired setpoint and the actual process value. Because no other control actions are in effect, this deviation is used to calculate output power.

REVISIONS				
ZONE	LTR	DESCRIPTION	DATE	APPD

PROPORTIONAL ACTIONAL
CONTROLLER BLOCK DIAGRAM

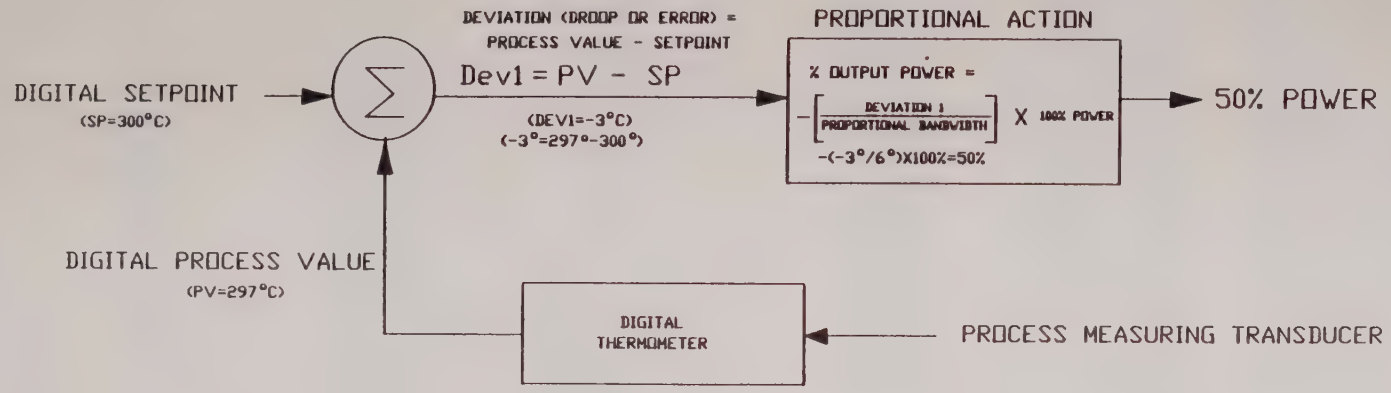

PROPRIETARY NOTICE
Information contained on this drawing is proprietary to JC Systems, Inc. and may not be copied, reproduced, nor parts made there from without written permission from JC Systems, Inc.

⚠ FINISH (IF APPLICABLE)

⚠ MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

DASH	QTY	NEXT ASSY	USED ON
APPLICATION			

SERIAL NO.	DATE EFF	DWG REV
EFFECTIVITY		

MATERIAL ⚠
FINISH ⚠

ENGINEERING ACTIVITY

DESIGN	
DRAFTED	
CHECKED	

JC SYSTEMS, INC.

TITLE: TEMP CONTROLLER BLOCK DIAGRAM "P" ONLY

Figure A 2: Proportional Control Action Diagram

5200486

The proportional bandwidth is expressed in degrees. Zero degrees (0°) corresponds to no deviation from setpoint and therefore no output. The total bandwidth in degrees corresponds to the deviation from setpoint that will produce 100% output. For example, a proportional bandwidth of 6° will result in 50% output when the deviation is 3° and 100% output when the deviation is 6°. As shown in Figures A-2 and A-3, a temperature chamber controller operating with proportional action only and a proportional bandwidth of 6° will apply 50% power to the heaters if the setpoint is 300° and the system temperature is 297° (deviation = 3°).

The proportional output value will always be a percentage of the total possible output. This is true whether using 4-20 mA power proportioning output or ON-OFF time proportioning output. For example, power proportioning output for a +50% error would be 12 mA in a 4-20 mA application. In time proportioning output for the same error, output would be ON 50% of the cycle time and OFF 50% of the cycle time.

Note that JC System controllers provide dual outputs to control both heating and cooling, so the proportional band would extend both above and below the chosen setpoint. For clarity, the cooling band has been omitted from the figures.

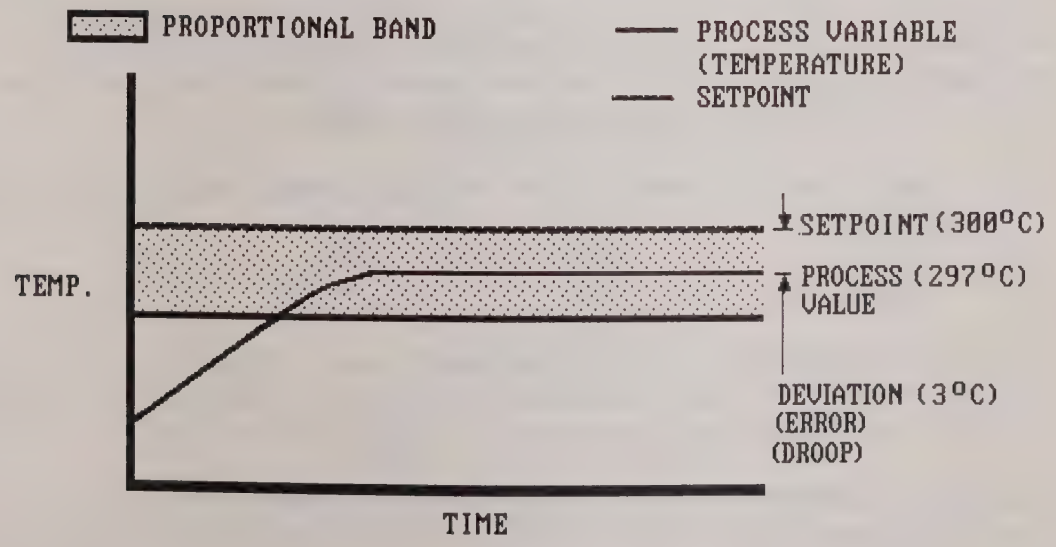

Figure A-3: Proportional Control Profile Chart.

A.3.1.2. Droop.

A condition known as droop (see Figure A-4) always occurs in a system that has a controller with only proportional action. This is because there must be some offset from the setpoint before proportional action can apply power to make up for system heat loss. In this sense, "droop" is a *specific* type of deviation or error, but the word is also sometimes used to refer to any error condition.

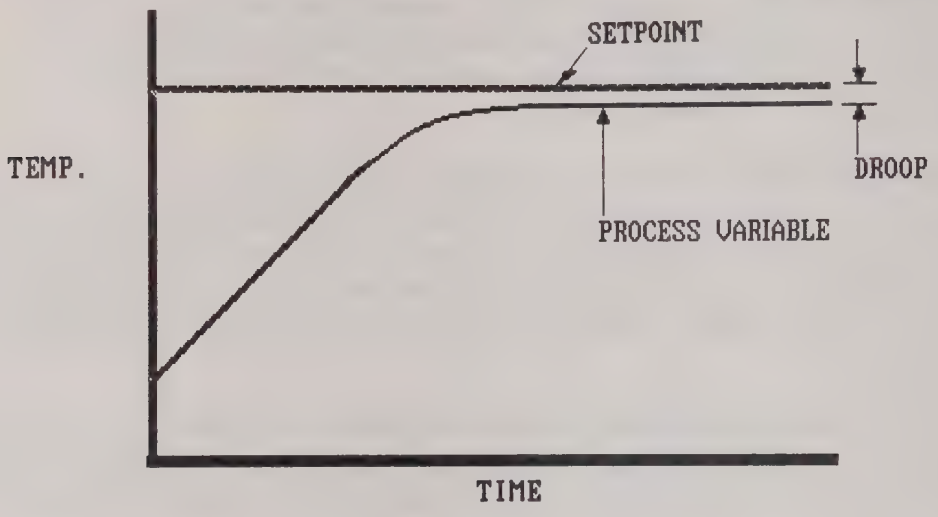

Figure A-4: Droop.

For example, suppose our temperature chamber has a maximum heater capacity of 1500 watts and its thermal characteristics require a power input of 750 watts to maintain 297°C with a constant ambient temperature of 25°C. With a typical proportional bandwidth of 6° and a setpoint of 300°, the system temperature would stabilize at 297°. Why? Because the 3° deviation from setpoint requires 50% proportional output, which is the same amount of power we already established as being required to maintain the system at 297°.

The two methods used to counteract this condition, manual and automatic reset, are described below.

A.3.1.3. Manual Reset.

Given the error described in A.3.1.2, you could manually reset the setpoint switch to 303°C. The higher temperature setting would demand the extra power required to increase the process value by 3°.

Many simple controllers with proportional action incorporate provisions for manually compensating the offset (in this case three degrees) for a fixed temperature. Obviously, this approach is inefficient when changes in the setpoint are desired. Also, any given offset can only work for a particular setpoint and constant heat load with no changes in ambient temperature. A more effective system utilizes integral control action as described in the following section.

A.3.2. Automatic Reset (Integral Control).

A.3.2.1. Theory of Operation.

The second control action of a PID controller is I - the integral factor, also commonly referred to as *reset*. This control action generates a correction factor by integrating (as a function of time) the deviation (error) between the setpoint and the process value. Integral action automatically and internally performs the same function as the manual reset. The setpoint is internally corrected (reset) to a value that will completely offset the deviation as shown in Figure A-5.

In other words, the integral action I correction factor is exactly the opposite of the deviation (error or droop). As shown in Figure A-6, this correction factor is added to the original setpoint to create a new, *internal* setpoint. The internal setpoint in turn is used to calculate an adjusted error derived by summing the correction factor and the setpoint, minus the process value. This adjusted error is used to calculated the output power that must be supplied to the system.

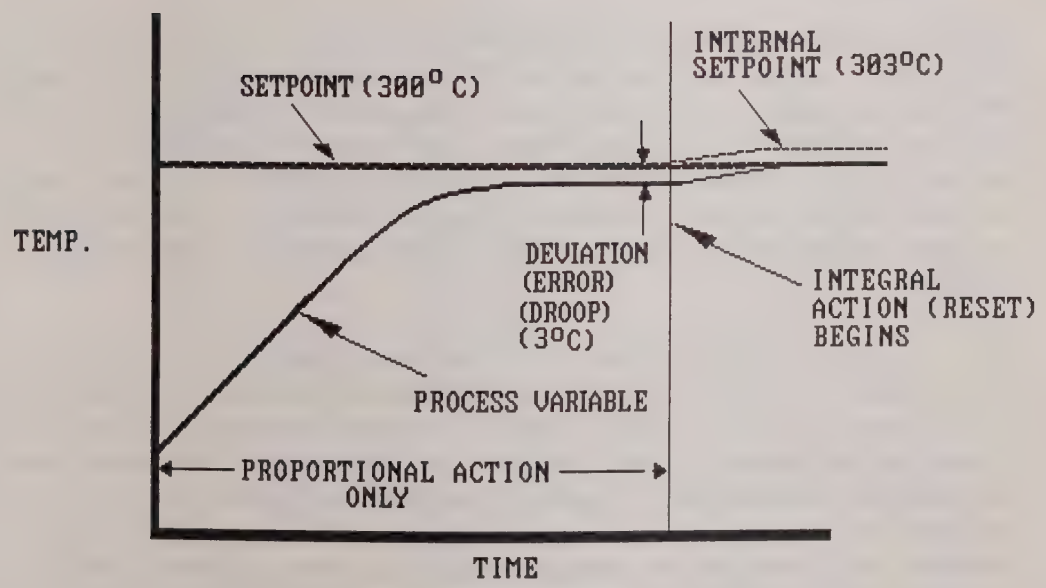

Figure A-5: Reset Used to Correct Droop.

Para. A.3.2.1 (Cont.)

For example, as previously shown (in Figure A-4) a setpoint of 300° and a process value of 297° results in a droop (error or deviation) of -3°. The correction factor (value required to offset the droop) is therefore +3°. As shown in Figure A-6, the new internal setpoint is therefore the setpoint (300°) plus the correction factor (3°), and the adjusted error is 300° minus 303° (the process value), or -3°. With a proportional bandwidth of 6°, this will result in 50% output power (3° ÷ 6° = 0.5 x 100% = 50%).

Automatic reset action repeats the correction factor X times per minute, causing a recalculation of the internal setpoint for each repeat. The value of X depends on the setting of DIP switch S2 (as described later). The switch allows you to select how fast the controller corrects for the deviation in terms of repeats per minute.

For example, if the switch were set for one repeat per minute *and the error remained constant*, the correction factor would be repeated once per minute, causing the internal setpoint to linearly ramp up. In other words, with a theoretical constant error of 3°, the internal setpoint would increase 15° in 5 minutes (5 minutes times 1 reset/minute = 5, or 5 resets times 3° = 15°). Of course, the error would not remain constant in an actual process, so this effect could not normally occur.

A.3.2.2. Reset Windup.

Reset windup is a problem that can result with most other PI controllers that don't offer features included in the JC Systems controllers. Most controllers with integral action will make a correction proportional to the magnitude of the deviation whenever a deviation exists. As shown in Figure A-7, when a process starts with an extremely large deviation, this large error will be integrated and the setpoint will be internally corrected on this basis. Reset action will continue as long as the error exists. This effectively "winds up" the internal setpoint.

By the time the process value finally reaches the original setpoint, the internally reset setpoint is much higher and a deviation still exists. The controller's proportional action (P factor) uses this deviation to regulate output, thereby causing an overshoot. As the process value approaches the internal setpoint, the controller detects that a *negative* deviation now exists between the internal setpoint and the original one. Integrating this error drives the internal setpoint, and therefore the process value, back down. Rather than providing a realistic reset factor, the integral action is now driving the process value up and down around the setpoint. This oscillation will continue for some time (depending on system response, integration value, and other factors) until the system finally stabilizes.

REVISIONS			
ZONE LTR	DESCRIPTION	DATE	APPD

PROPORTIONAL + INTEGRAL CONTROL ACTION
CONTROLLER BLOCK DIAGRAM

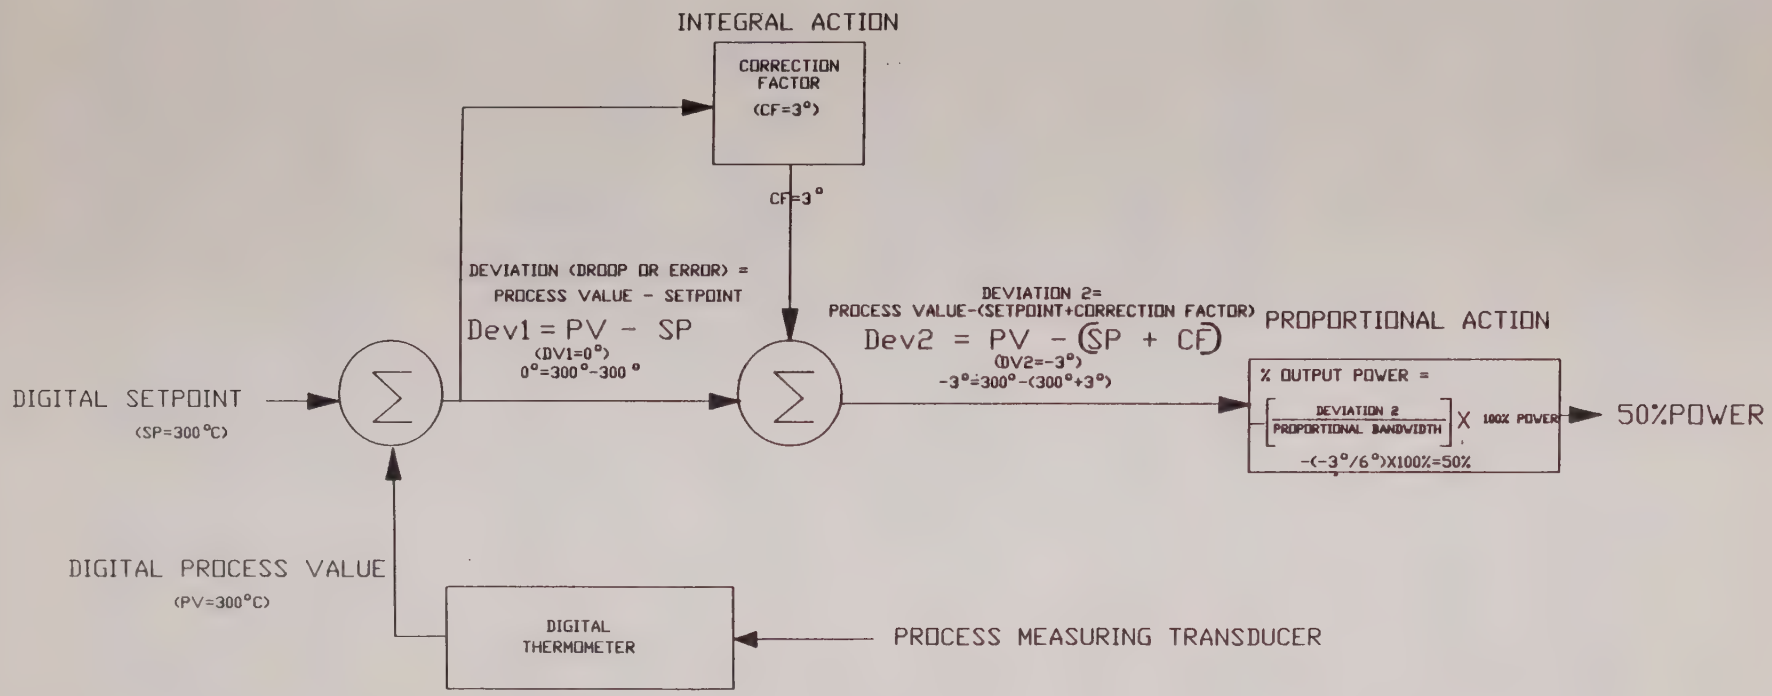

⚠ FINISH (IF APPLICABLE)

⚠ MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

DASH NO.	QTY	NEXT ASSY	USED ON
APPLICATION			

SERIAL NO.	DATE EFF	DWG REV
EFFECTIVITY		

ENGINEERING ACTIVITY

DESIGN	
DRAFTED	
CHECKED	

SYSTEMS, INC.

TITLE: TEMP CONTROLLER BLOCK DIAGRAM "PI" ONLY

Figure A-6: Diagram of Proportional Control with Integral Action.

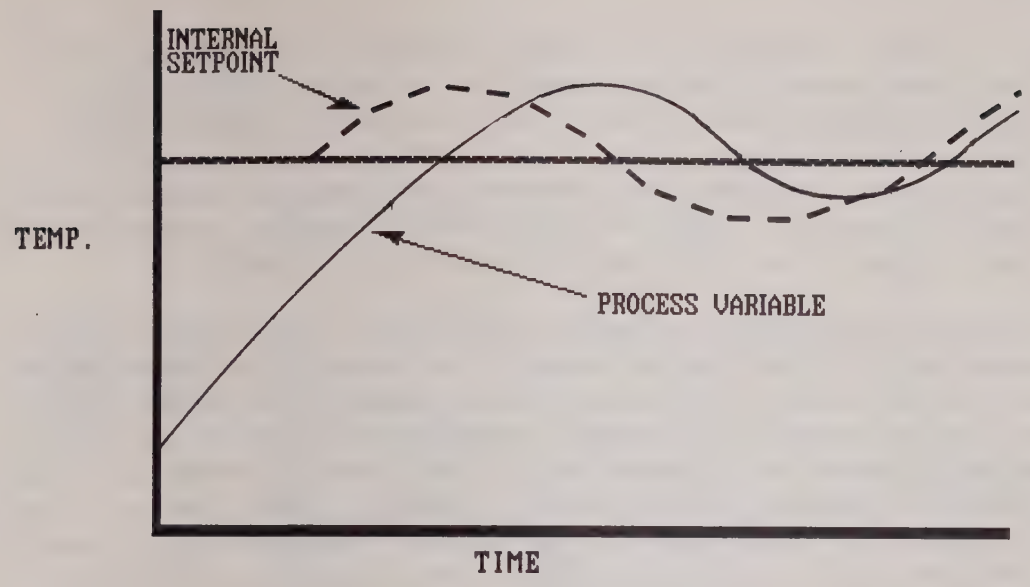

Figure A-7: Oscillations Due to Reset Windup.

A.3.2.3. Reset Windup Inhibit.

JC Systems controllers counteract reset windup in two ways. First, integral action does not correct for a deviation unless the process value is within the proportional bandwidth. In other words, with a bandwidth of 6°, integral action would occur only with a deviation of 6° or less.

Second, your JCS controller has a separate, switch-selectable parameter called Reset Windup Inhibit (RWI). This allows you to specify (as a percentage of the proportional bandwidth) the maximum error in degrees that the controller will integrate as a function of time to adjust the internal setpoint.

For example, with a bandwidth of 10° and an RWI setting of 10%, a deviation of any magnitude between 1 and 10 ° will be treated as a deviation of only 1° (10% of the 10° proportional bandwidth). Only when the actual error is less than 1° will the actual error be integrated. This allows much higher integration values without causing over-integration instability (oscillation).

A.3.3. Derivative Control.

The final control action of a PID controller is D - the derivative factor, sometimes called "rate action" or "pre-act" (because it anticipates changes). In most controllers, derivative control initiates corrective action whenever the deviation changes. (If there is no change, there is no derivative action.) The amplitude of the response (correction) is proportional to how fast the deviation (input) is changing. This approach can result in excess correction when the setpoint is changed -- the new setpoint represents a very fast change in deviation, and derivative action therefore dictates a large correction factor.

JCS controllers avoid such overreacting by using the rate of change of the *actual process value* as the basis (input) for calculating the correction. Changing the setpoint doesn't cause a derivative action response until the process variable begins to change. The net effect of this approach is a dynamic braking action -- the controller's derivative action opposes a change in the actual process value. In this way, overly rapid responses can be slowed and a delayed system can be kept from overshooting the setpoint.

The typical application of derivative control is for a system with lengthy thermal delay. By the time the controller can respond to the actual process value, too much heat energy is stored in the system. The process value will overshoot the setpoint, then oscillate around the setpoint before stabilizing. Figure A-8 shows how derivative action tends to dampen process value changes. Note that the amplitude of the derivative correction remains constant as long as the process value is changing at a constant rate. Also note that the amplitude of the derivative correction corresponds to the process value change rate.

Figure A-9 shows how the three factors — proportional, integral, and derivative — are independently derived, then summed to act upon controller output.

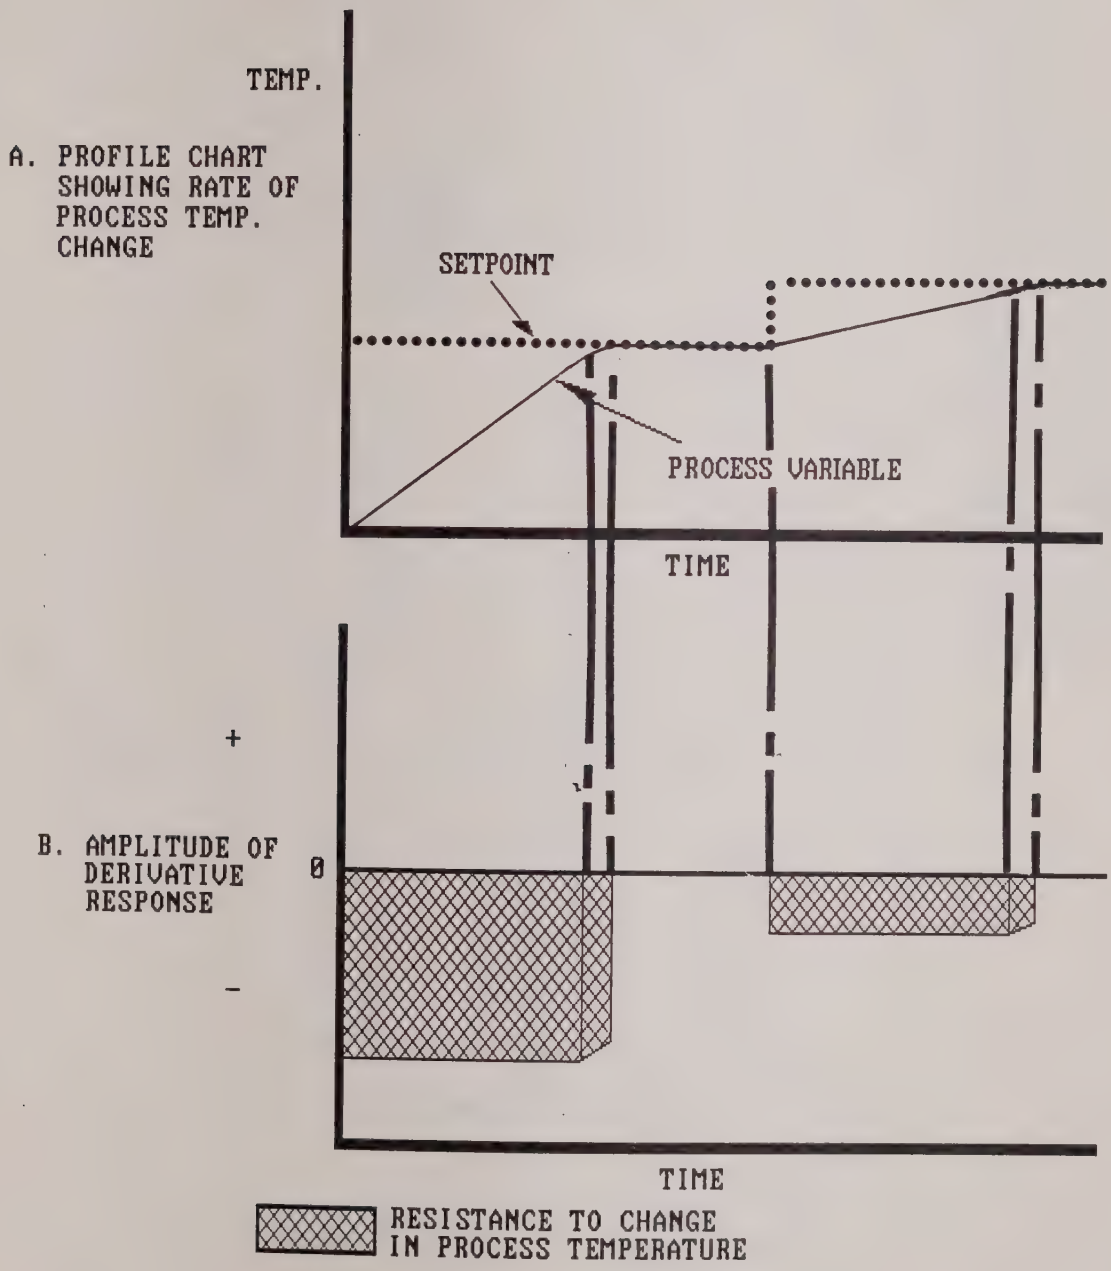

Figure A-8: Relation of Differential Action to Process Value Change.

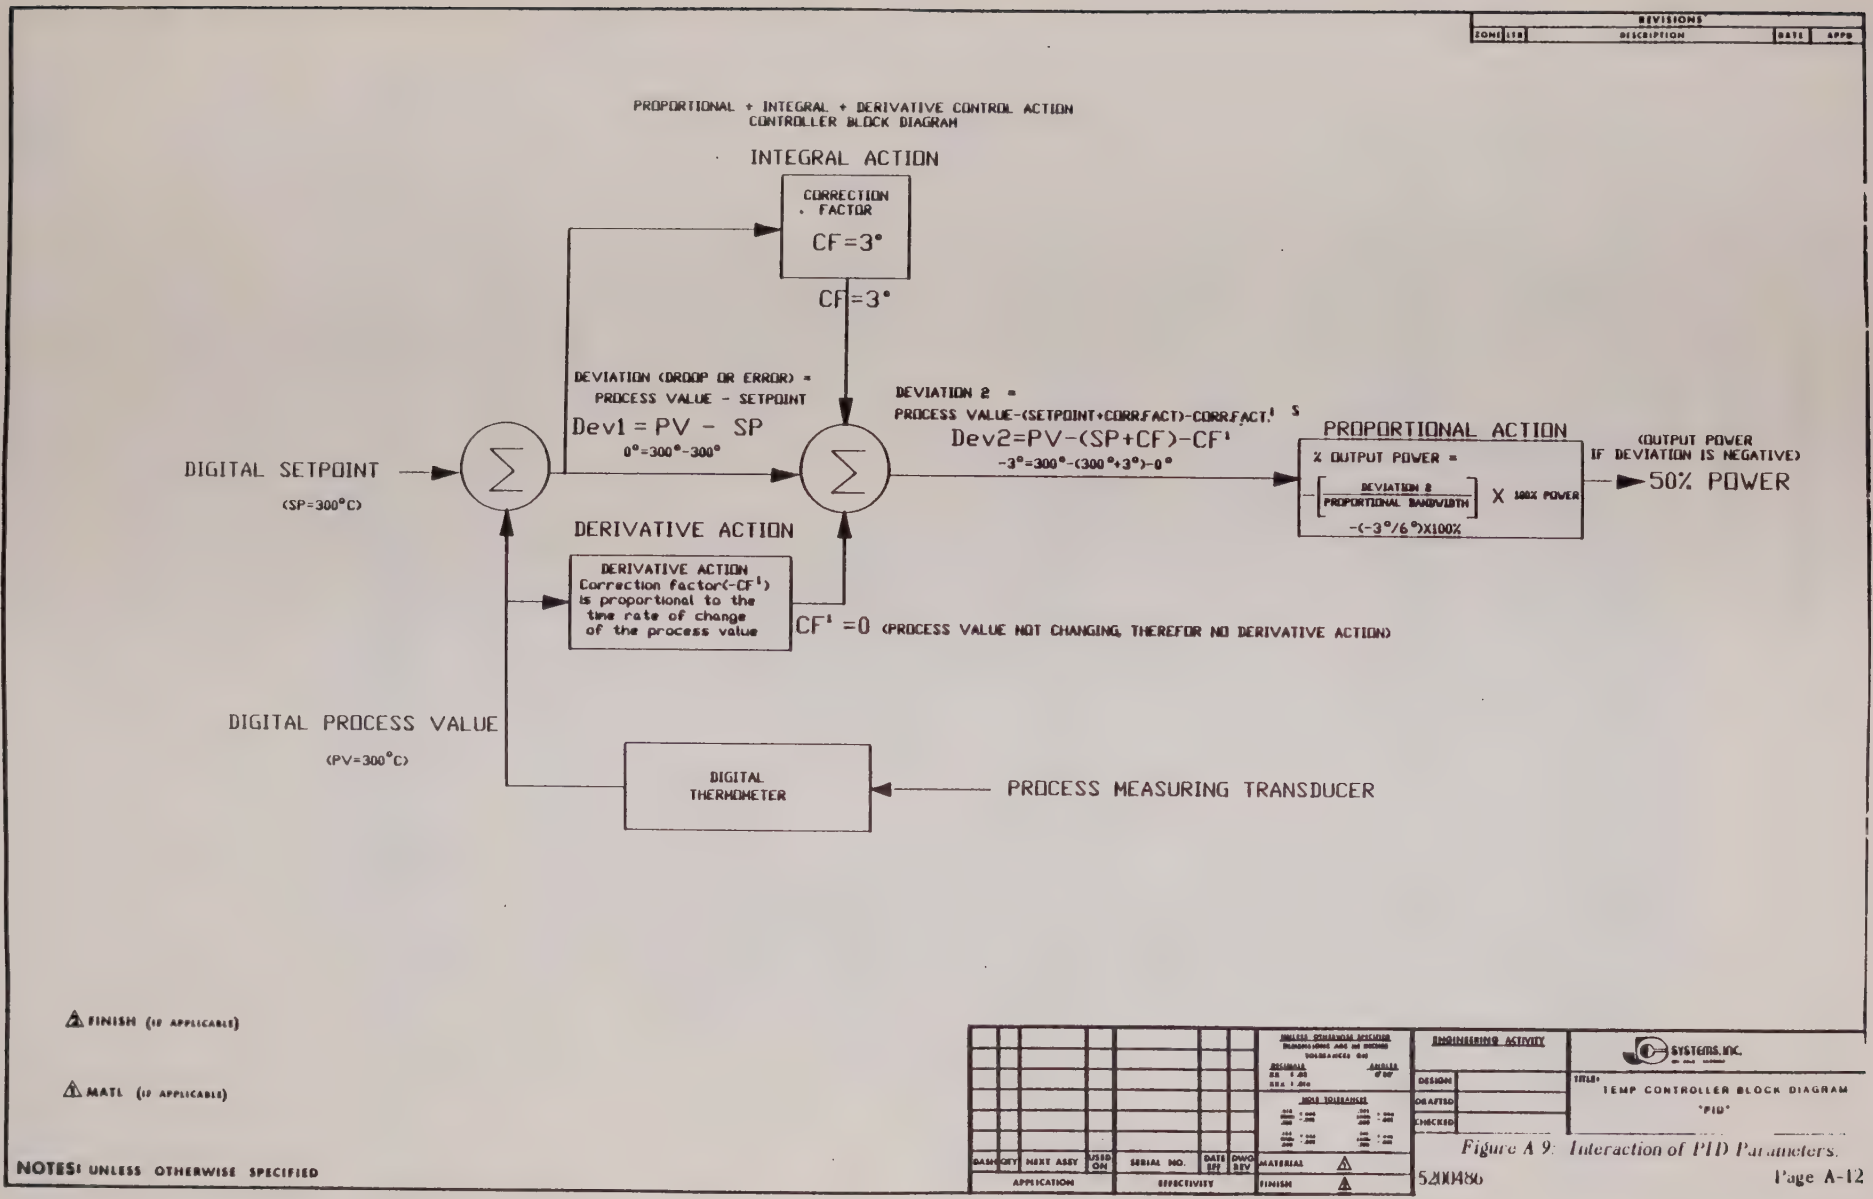

Figure A 9: Interaction of PID Parameters.

A.4. RESETTING CONTROLLER SWITCHES.

A.4.1. Switch and Display Locations.

The DIP switches involved are all located on the upper edge of the controller printed circuit board (PCB) as shown in Figure A-10. Figure A-11 shows the Model 520 display areas you will need to monitor while setting those switches. If you have a dual-channel Model 520, you will need to set the switches on both controller boards.

On a dual-parameter (dual adjust) board, you will need to set the PID parameters and reset windup inhibit for both heat and cool modes. When heat parameters are active, a red LED near DIP switch S1 lights; when cool parameters are active, the LED goes out.

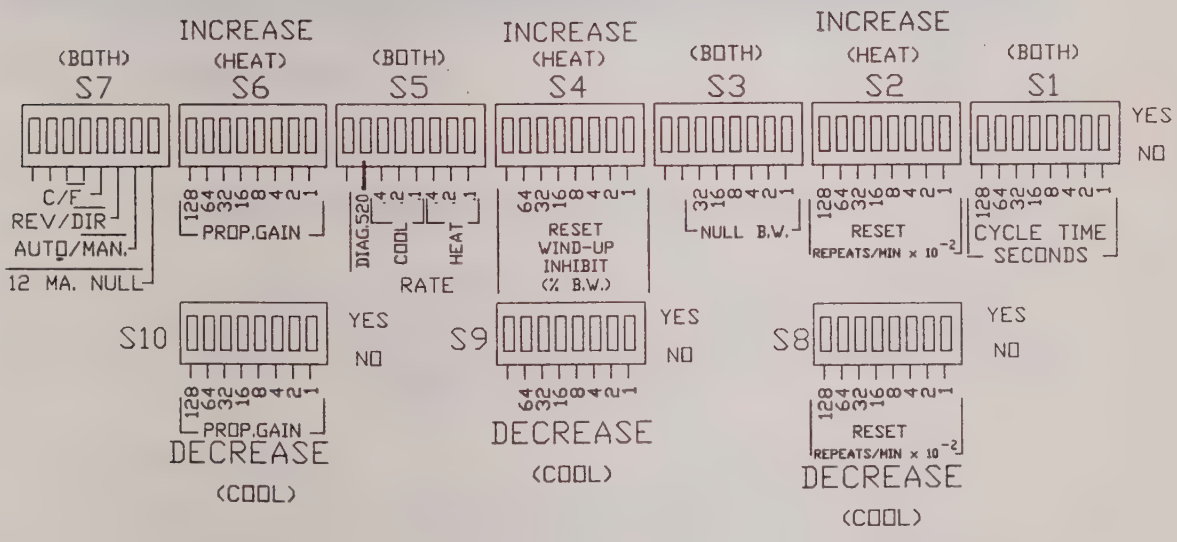

Figure A-10: Controller PCB DIP Switch Locations.

A.4.2. How to Set a DIP Switch.

Each DIP switch has eight slide elements (bits). Slide up towards the top (OPEN) to select a bit, or slide down towards the bottom (CLOSED) to zero it. Figure A-12 shows bit positions for a typical DIP switch set to a value of 18.

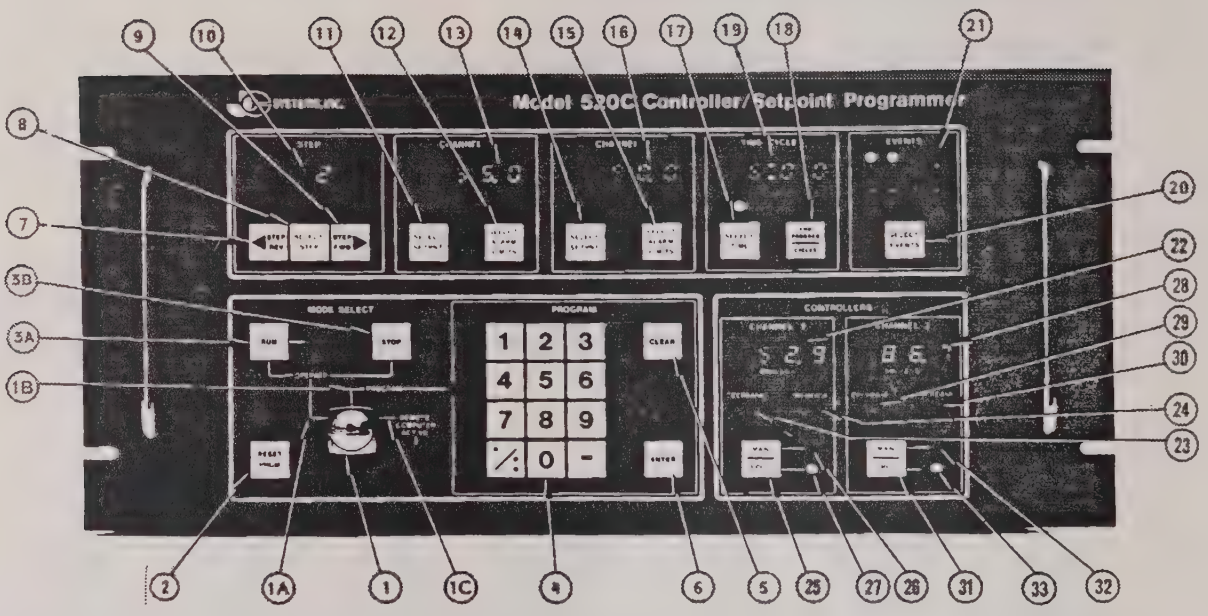

Figure A-11: Front Panel Displays and Switches.

```
Position Number:     8    7    6    5    4    3    2    1
          Value:   128   64   32   16    8    4    2    1
Position:          ************************************
        OPEN (1)   *  -    -    -    X    -    -    X    -  *
                   *                                       *
      CLOSED (0)   *  X    X    X    -    X    X    -    X  *      VALUE
                   ************************************      SELECTED
                        |    |    |    |    |    |    |    |_____    0
                        |    |    |    |    |    |    |__________    2
                        |    |    |    |    |    |_______________    0
                        |    |    |    |    |____________________    0
                        |    |    |    |_________________________   16
                        |    |    |______________________________    0
                        |    |___________________________________    0
                        |________________________________________    0
                                                                   -----
                                                    TOTAL VALUE      18
```

Figure A-12: Setting a Typical Dip Switch

A.4.3. Set Proportional Bandwidth.

A.4.3.1. Determine the Minimum Setting.

The setting of DIP switch S6 (S10 for cool) selects the proportional gain (sensitivity) and thereby determines the proportional bandwidth. The *higher* the proportional gain, the *tighter* the proportional bandwidth. Use the following formula to determine the proportional gain setting for your system's controller(s).

Proportional Gain Setting =
Controller Span (degrees) divided by Bandwidth (degrees)

Restating the equation to calculate bandwidth:

Proportional Bandwidth =
Controller Span (degrees) divided by Proportional Gain Setting

For example, if the Model 520 controller's span (see definitions) is 415°, to achieve a bandwidth of 6° (the factory setting) for this system, you must set S6 to 69. Expressed algebraically:

X = 415 divided by 6; X = 69

A.4.3.2. Considerations for Selecting Proportional Bandwidth.

The proportional bandwidth should be as small as possible without causing oscillation. With a bandwidth of 0, the proportional and integral actions of the Model 520 are disabled. The control action with 0 bandwidth is similar to the on/off control action of a bimetallic thermostat.

A.4.3.3. Setting the Switch.

To set proportional gain (Switch S6 for heat, S10 for cool) for the desired proportional bandwidth (see A.4.3.1 to calculate bandwidth if necessary), proceed as follows.

1. Enter diagnostics per Chapter 6 and select -591.6 for heat or -581.6 for cool. The selected proportional bandwidth will appear in the controller display.
2. Set all bits off (down) on switch S6 for heat or S10 for cool.
3. Switch on the left-most (most significant) bit (bit 8).
4. Observe the display. If the bandwidth displayed is *less than* the desired value, switch the bit off; otherwise, leave it on.
5. Switch on the next most significant bit (to the right) and repeat Step 4.
6. Repeat Step 5 for each bit in descending order until the desired value is displayed, or until the last bit has been checked and the value is within ±0.3 units of that desired.

A.4.4. Set Integral Control.

The Reset (repeats/min) switch (S2 for heat, S8 for cool) regulates the I (integral) portion of PID control. The setting of S2 (or S8) determines the factor the controller uses to correct for deviation. If the reset value is too high, the derived (internal) setpoint overcorrects for the deviation and causes the process value to oscillate around the setpoint; if the reset value is too low, it will take too long for the process temperature to reach the setpoint. (See the discussion in Para. A.3.2.)

When using Figure A-12 as a guide to reset S2, substitute the values below for the bit positions. (Values for this switch are multiplied by 10^{-2}. The standard S2 factory setting is 1.28 resets per minute -- position 8 is up.

Position Number:	8	7	6	5	4	3	2	1
Value (Repeats/Min):	1.28	.64	.32	.16	.08	.04	.02	.01

A.4.5. Set Reset Windup Inhibit.

This switch (S4 for heat, S9 for cool) works with the Reset switch (S2 or S8) to limit the maximum error integrated and reduce instability around the setpoint. Use S4 or S9 to select a reset windup inhibit (RWI) percentage (of bandwidth) from 1 to 100%. (A setting of 0 defaults to 100%.) This setting determines the maximum error in degrees that the controller will integrate as a function of time.

A.4.6. Set Derivative Control

Set S5 to regulate the amplitude of the controller's derivative action response to changes in process temperature. Bits 1-3 set the rate for heat and 4-6 set the rate for cool. (Bit 7 is the factory-sealed diagnostics select.)

When using Figure A-12 as a guide to reset S5, substitute the values below for the bit positions. The standard S5 factory setting is 0 -- all positions are down.

FOR DUAL PARAMETER (HEAT AND COOL) BOARDS

Position Number:	8	7	6	5	4	3	2	1
Value (Minutes):	Not Used	Fact. Seal	.4	.2	.1	.4	.2	.1
			⌙	COOL	⌙⌙	HEAT		⌙

FOR SINGLE PARAMETER (HEAT ONLY) BOARDS

Position Number:	8	7	6	5	4	3	2	1
Value (Minutes):	Not Used	Fact. Seal	3.2	1.6	.8	.4	.2	.1

A.4.7. Set Cycle Time (S1).

A.4.7.1. For Time Proportioning Output.

The Model 520 regulates average power to heaters by turning the heaters on and off. Cycle time may be set from 1 to 255 seconds. The longest possible cycle time that produces a stable, controlled output should be used. Long cycle times extend the life of electromechanical devices such as relays and solenoids.

The cycle time includes both time off and on, and is regulated by proportional control (see Para. A.3.1). For example, with a deviation of 3°, a bandwidth of 6°, and a cycle time of 2 seconds (the factory setting), the output will be on for 50% of the time, or 1 second, and off for the remaining 50% of the time (1 second).

A.4.7.2. For Power Proportioning Output.

Set controller switch S1 to 255 whenever the power proportioning output (current loop option) is connected. Setting any other value will cause the process variable display (Figure A-9 Item 22 or 28) to display the word "LOOP" until the S1 setting is corrected or the current loop board is disconnected.

A.4.8. Set Staging or Null Bandwidth (Switch-Selectable Deviation, S3).

Switch S3 can be used to control staging or select a null bandwidth from 0 to 63, which in turn regulates the controller's auxiliary output(s). The default setting is 1. Note that switch three has only 6 active bit positions, 1-6 (values of 1-32).

The controller auxiliary output(s) are TB1-6 for single-channel controllers and both TB1-6 and TB2-6 for dual-channel controllers. The output remains active as long as the process variable deviation is no greater than the value selected on S3. The output goes inactive as soon as the process variable deviation becomes greater than the S3 value.

This function is used to control staged heating and cooling when a Model A1890 Heat/Cool Debang Board or a Model A1921 Staged Heat/Cool Board is is incorporated. The staging or boost is active only when the process variable deviates more than the S3 setting.

A.5. Determining and Selecting a Proportional Gain Setting.

This procedure may be used if you wish to empirically develop a proportional gain setting. Begin by setting controller switches to the positions shown in Table A-1 (reset if necessary) before setting proportional gain as described below. If you have a dual-channel Model 520, you will need to set the switches on both controller boards. If you have a dual-parameter Model 520, you will need to repeat the heating parameters procedure below for cooling parameters. (This requires changing the parameters switch to COOL position and setting switches S8-10, as well as bits 4-6 of S5.)

TABLE A-1: CONTROLLER SWITCH POSITIONS FOR PROPORTIONAL GAIN SELECTION.

SWITCH NUMBER	DESCRIPTION	SETTING
S1	Cycle Time	2 seconds (bit 2 up)
S2	Automatic Reset	Off (0 -- all bits down)
S3	Null Bandwidth	Don't care
S4	Reset Windup Inhibit	Off (0 -- all bits down)
S5	Rate (Derivative)	Off (0 -- all bits down)
S7	Miscellaneous Functions	On (1 -- see Para. 2.9)

A.4.8.4. Determine Thermal Overshoot.

Refer to Chapter 2 for manual operating procedures and perform the following test to determine the amount of thermal overshoot when the system goes from 100% power to 0% power.

1. Select a setpoint temperature 10° higher that the point at which you want to determine thermal overshoot. For example, if you want to determine overshoot at 100°C, then the initial setpoint will be 110°C. The selected test temperature should to be high enough to allow heaters to store as much heat as they can (worse case).
2. When the temperature reaches the selected test temperature (100°), change the setpoint to a new value at least 20° lower. (This turns off all power to the heaters, allowing the system temperature to rise due to stored heat energy.)
3. Carefully monitor the PROCESS temperature display (Figure A-9, Item 22 or 28), which shows the actual temperature the sensor is recording, to determine the temperature at which overshoot peaks.
4. Multiply the overshoot (the difference between the peak temperature observed in Step 3 and the test temperature) by 2. If the result is more than 5, use that figure in degrees for the bandwidth. If the result is less than 5, use a bandwidth of 5°.
5. Adjust the proportional gain setting as described in Para. A.4.3.3 to achieve the desired bandwidth.

6. After resetting S6, select a new setpoint about 100° above ambient (or any other setpoint typical for your process) and monitor the PROCESS display (22 or 28). Look for steady-state action (oscillation) around the setpoint; don't be overly concerned with overshoot at this time.
7. If Step 6 shows continued oscillation or slow reaction (sluggish system), increase the RATE switch (S5) value one unit (0.1 minute) (see Para. A.4.6 for procedure) and repeat Step 6. If oscillation persists, add the next bit (position 2, value 0.2), increasing the value to 0.3.
8. If the rate adjustments of Step 7 don't stop the oscillations, the proportional bandwidth is too narrow. Reset the RATE switch (S5) to zero and repeat Steps 1 thru 7, except increase the Step 4 overshoot multiplier by 1 each time you repeat the test until the steady-state oscillations disappear.

A.4.8.5. Reset Related Switches.

After the proportional bandwidth is correctly adjusted, reset related switches RATE (S5), RWI (S4), and RESET (S2) as follows.

1. Set S2 at 1.28 and S4 at 10 (same as initial settings of Table A-1).
2. Using the same setpoint as in Para. A.4.8.4 Step 6 above, try the system in operation. Observe action of the system as it settles into operation and the process temperature approaches the setpoint.
3. If action is sluggish, note the amount of time required outside the RWI band (RWI setting times bandwidth -- in our example, 10% times 6° = 0.6°).
4. If most of the delay is at temperatures outside the RWI band (0.6° in the example), increase the RWI switch setting (try doubling it to 20, bits 3 and 5 up) and retest.
5. If most of the delay is at temperatures within the RWI band, increase the AUTOMATIC RESET rate (try increasing by increments of 10) and retest.

APPENDIX B. PROGRAM WORKSHEET

JC SYSTEMS INC. PROGRAM NO. _____ DATE: _____

STEP NO.	CHANNEL 1 SETPNT	CHANNEL 1 ALM LMT	CHANNEL 2 SETPNT	CHANNEL 2 ALM LMT	TIME/ CYCLES	EVENTS 1	2	3	4	5	6	7	8
1													
2													
3													
4													
5													
6													
7													
8													
9													
10													
11													
12													
13													
14													
15													
16													
17													
18													
19													
20													
21													
22													
23													
24													
25													
26													
27													
28													
29													
30													

NOTES:
1. Each separate program must be terminated with an END OF PROGRAM (EOP) step to separate it from the ones before and after.
2. Multiple programs can be stored and individually executed -- select first step of desired program

APPENDIX B. PROGRAM WORKSHEET (Cont.)

JC SYSTEMS INC. PROGRAM NO. _____ DATE: _____

STEP	CHANNEL 1		CHANNEL 2		TIME/	EVENTS							
NO.	SETPNT	ALM LMT	SETPNT	ALM LMT	CYCLES	1	2	3	4	5	6	7	8
31													
32													
33													
34													
35													
36													
37													
38													
39													
40													
41													
42													
43													
44													
45													
46													
47													
48													
49													
50													
51													
52													
53													
54													
55													
56													
57													
58													
59													
60													

NOTES:
1. Each separate program must be terminated with an END OF PROGRAM (EOP) step to separate it from the ones before and after.
2. Multiple programs can be stored and individually executed -- select first step of desired program

APPENDIX B. PROGRAM WORKSHEET (Cont.)

JC SYSTEMS INC. PROGRAM NO. _____ DATE: _____

STEP	CHANNEL 1		CHANNEL 2		TIME/	EVENTS							
NO.	SETPNT	ALM LMT	SETPNT	ALM LMT	CYCLES	1	2	3	4	5	6	7	8
61													
62													
63													
64													
65													
66													
67													
68													
69													
70													
71													
72													
73													
74													
75													
76													
77													
78													
79													
80													
81													
82													
83													
84													
85													
86													
87													
88													
89													
90													
91													

NOTES:
1. Each separate program must be terminated with an END OF PROGRAM (EOP) step to separate it from the ones before and after.
2. Multiple programs can be stored and individually executed -- select first step of desired program

APPENDIX C. REFERENCE DRAWINGS.

The following drawings are provided for reference. The drawings appear in the sequence shown in the first list; the second list is a part number cross-reference list.

NOTE

Sheet 2 of Drawings 1969 and 1970 is the same for all configurations (TC, TH & RTD) and is therefore provided only with the basic (TC) configuration.

TABLE C-1. LIST OF MODEL 510/520 REFERENCE DRAWINGS.

DWG NO.	DESCRIPTION	PAGE NO.
1969/1269-TC, Sheet 1	PCB Schematic, Temperature Controller Model A1970/1270 - Thermocouple Input	C-4
1969/1269-TC, Sheet 2	PCB Schematic, Temperature Controller Model A1970/1270 - Thermocouple Input	C-5
1970/1270-TC	PCB Assembly, Temperature Controller Model A1970/1270 - Thermocouple Input	C-6
1969/1269-TH, Sheet 1	PCB Schematic, Temperature Controller Model A1970/1270 - Linear (TH)	C-7
1970/1270-TH	PCB Assembly, Temperature Controller Model A1970/1270 - Linear (TH)	C-8
1969/1269-RTD, Sheet 1	PCB Schematic, Temperature Controller Model A1970/1270 - RTD Input	C-9
1970/1270-RTD	PCB Assembly, Temperature Controller Model A1970/1270 - RTD Input	C-10
1033	PCB Schematic, 4-20 mA Output Interface Model A1034	C-11
1034	PCB Assembly, 4-20 mA Output Interface Model A1034	C-12
1851, Sheet 1	PCB Schematic, Control Logic Board Model A1852/1550	C-13
1851, Sheet 2	PCB Schematic, Control Logic Board Model A1852/1550	C-14
1852	PCB Assembly, Control Logic Board Model A1852/1550	C-15
1839, Sheet 1	PCB Schematic, Front Panel Display Board Model A1840	C-16
1839, Sheet 2	PCB Schematic, Front Panel Display Board Model A1840	C-17
1835	PCB Schematic, Front Panel Switch Board Model A1836	C-18
1840	PCB Assembly, Front Panel Display Board Model A1840	C-19
1843	PCB Schematic, Controller/Event Terminal Board, Model A1844	C-20
1844	PCB Assembly, Event/Alarm & Controller Output, Model A1844	C-21
1537/1037	PCB Schematic, IEEE-488 4 Decade BCD Interface, Model A1538/1038	C-22
1538/1038	PCB Assembly, IEEE-488 4 Decade BCD Interface, Model A1538/1038	C-23

TABLE C-1 (Cont.)

DWG NO.	DESCRIPTION	PAGE NO.
1847	PCB Schematic, SRQ & Device Adress Interface, Model A1848	C-24
1848	PCB Assembly, SRQ & Device Adress Interface, Model A1848	C-25
1565	PCB Schematic, RS422A Programmer Interface, Model A1566	C-26
1566	PCB Assembly, RS422A Programmer Interface, Model A1566	C-27
1932	Model 520 Wiring Diagram	C-28
1931	Model 520 w/IEEE Option Wiring Diagram	C-29
1930	Model 520 w/RS422A Wiring Diagram	C-30
1933	Model 520 A/C Wiring Diagram	C-31
1936	Model 510 Wiring Diagram	C-32
1935	Model 510 w/IEEE Option Wiring Diagram	C-33
1934	Model 510 w/RS422A Wiring Diagram	C-34
1937	Model 510 A/C Wiring Diagram	C-35
1960	Model A1740 RS422A Interface Pictorial	C-36

TABLE C-2. NUMERICAL INDEX OF MODEL 510/520 REFERENCE DRAWINGS.

DWG. NO.	PAGE	DWG. NO.	PAGE
1033	C-11	1930	C-30
1034	C-12	1931	C-29
1537/1037	C-22	1932	C-28
1538/1038	C-23	1933	C-31
1565	C-26	1934	C-34
1566	C-27	1935	C-33
1835	C-18	1936	C-32
1839, Sheet 1	C-16	1937	C-35
1839, Sheet 2	C-17	1960	C-36
1840	C-19	1969/1269-RTD, Sheet 1	C-9
1843	C-20	1969/1269-TC, Sheet 1	C-4
1844	C-21	1969/1269-TC, Sheet 2	C-5
1847	C-24	1969/1269-TH, Sheet 1	C-7
1848	C-25	1970/1270-RTD	C-10
1851, Sheet 1	C-13	1970/1270-TC	C-6
1851, Sheet 2	C-14	1970/1270-TH	C-8
1852	C-15		

REVISIONS			
ZONE	LTR	DESCRIPTION	DATE	APPD

SEE SHT 2 OF 2

"LATCH" Z9-74HC373 — "MEMORY" Z14-2732A — Z2 CD4030BE — Z3 CD4098BE — Z18 8035 — Z21 ICL7109 — Z22 Z23 Z24 Z25 µA714 — TB1 — Q1 AD590K

20mA INTERFACE - J1 (365 BIT)

Z7 8243 — Z8 8243 — Z10 8243

Z19-22K SIP — Z28-22K SIP — Z30 — Z29 — Z32 — Z31 — S5 S6 S7 S8 S9 S10 — S1 S2 S3 S4

CR57 CR44 CR23 CR82 CR59 CR37 — IN914

NEXT REF. DESIG. USED:
34 Z10 XTAL 1
Z00 TP8 RB
Z7 Z32
TB1

NOT USED:
R3, R5, R40, R41, R42, R21, R35
CR7, CR43

NOTES: UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
Information contained on this drawing is proprietary to JC Systems, Inc. and may not be copied, reproduced, nor parts made there from without written permission from JC Systems, Inc.

DASH	QTY	NEXT ASSY	USED ON	SERIAL NO.	DATE EFF	DWG REV	UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ON FRACTIONS ANGLES .XX ±.03 .XXX ±.010 HOLE TOLERANCES	ENGINEERING ACTIVITY		JC SYSTEMS, INC.	
APPLICATION				EFFECTIVITY			MATERIAL ⚠ FINISH ⚠	DESIGN	JC SYSTEMS INC.		
								DRAFTED	" 21 FEB 1986	TITLE: PRINTED CIRCUIT BD. SCH — DUAL ADJUST TEMP. CONTROLLER MODEL A1970/1270-THERMOCOUPLE IN	
								CHECKED			
								APPROV		SIZE D	CODE IDENT
							DO NOT SCALE DWG	RELEASE		SCALE N.A.	19609/12609-TC
											SHEET 1 OF 2

REVISIONS				
ZONE	LTR	DESCRIPTION	DATE	APPD

SETPOINT BCD SW INTERFACE J4

TENTHS
UNITS
TENS
HUNDREDS
SIGN "J"
GND

Z5 22K SIP
Z6 - 22K SIP
Z4 8243
C4 .1μF
+5V
GND

1*3592-6002 (20PIN R/C) J4

"PRODUCTWARD INTERFACE" - J6

-5V
GND
+5V

PINOUT (.100) 4-PIN J6

CD4030BE
CD4049BE
CD4011BE

"DISPLAY INTERFACE" J3

+5V
D0
D1
D2
D3
DECREASE LED — J2-1
D4
D5
D6
D7
INCREASE LED — J2-2
LOW NIBBLE DEC. PT.
HIGH NIBBLE DEC. PT.
DIGIT PAIR 2 STROBE
DIGIT PAIR 1 STROBE
GND

Z1 8243
C1 .1μF
Z1-1 (SHT 1)
Z18-36 (P2-5) (SHT 1)
"F"
SN74126N
R234 10K
R235 10K
R236 22K

3592-6002 (20 PIN R/C) - J3

"LOCAL/REMOTE" - J7

GND
SPARE
LCL/REMT

PINOUT (.100) - J7

CUT STRAP WHEN USED W/ FRONT PANEL LOCAL/REMOTE SW.

"G"

(P2-4) Z18-35 (SHT 1) "HEAT MODE"
S5-7 (SHT 1)
CR200 ED1502

SHT 1 { S2,S4,S5,S6 (HEAT) / S5,S8,S9,S10 (COOL)

Z16 22K SIP
Z17 - 22K SIP
Z15 8243
C30 .1μF

P2-0
P2-1
P2-2
P2-3
PROG

J5 - "REMOTE TEMP PROGRAM"

TENTHS
UNITS
TENS
HUNDREDS
SIGN "J" = +
GND
NULL "J" = AT TEMP
READ TEMP
REMOTE CONTROL
SETPOINT VALID
N.C.
+5V

SHT 1 (T Φ) Z18-1
SHT 1 (INT) Z18-6

J5 - 3M# 3593-6002 (26 PIN R/C)

J2 - "INPUT/OUTPUT"

(+) C22 EXT. CAP
+5V UNREG
AC-1
AC-2
XFMR
C.T.
(-) C22 EXT CAP
+5V (D)

HEAT SINK
μA7805C
μA7905C
Q2
Q3
CR3 (OPT) IN5392(4)
CR4 (OPT)
CR5
CR6
R232 43Ω 2W
C20 220 10V
C18 .33 100V
C22 8000 15V (OPT)
C17 .33μF 100V
C21 220 10V
C23 220 25V
C19 .33μF 100V
+5V(A) Z21-40
+5V(D)
GND(A) Z21-33
GND(D)
Z21-28
-5V(A)

CD4049BE
CD4011BE
Q1
Q8
Q5
Q6
Q4
VN10KM(2)
VN10KM(3)
R238 22K
R239 22K
R231 220
R230 220

HEAT LOGIC
COOL LOGIC
NULL LOGIC
GND
HEAT
COOL
F.P. LEDS
MODE (OPT)

J3-13
J3-5

J2 - MOLEX (.156)

⚠3 FOR 510/520 OPERATION - REMOVE: Z4, Z10, CR3, CR4, C22. INSTALL: JUMPERS "F" & "G"

⚠2 FINISH (IF APPLICABLE)

⚠1 MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

DASH	QTY	NEXT ASSY	USED ON
		APPLICATION	

SERIAL NO.	DATE EFF	DWG REV
EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES ON
DECIMALS .XX ± .03 .XXX ± .010
ANGLES 0° 30'
HOLE TOLERANCES
.093 +.005 −.000 THRU .500 ±.005
.201 +.005 −.000 THRU .500 ±.005
.234 +.010 −.000 THRU .500 ±.005
.375 +.010 −.000 THRU .500 ±.005
MATERIAL ⚠1
FINISH ⚠2

ENGINEERING ACTIVITY	
DESIGN	VC SYSTEMS INC.
DRAFTED	" 21 FEB 1980
CHECKED	
APPROV	
RELEASE	
DO NOT SCALE DWG	

VC SYSTEMS, INC.

TITLE: PRINTED CIRCUIT BD. SCH — DUAL ADJUST TEMP. CONTROLLER MODEL A1770/1270-THERMOCOUPLE IN

SIZE	CODE IDENT	
D		1969/1269-TC

SCALE N.A. SHEET 2 OF 2

REVISIONS			
ZONE LTR	DESCRIPTION	DATE	APPD
	SEE SCH 1969 SHT 2		

Z26 - Z32 22K SIP (7)
43102-101-223

CRT- CR63 ARE IN914 (54) STAND-UP

* NOTE: DO NOT DIP CLEAN (SUBMERGE)
BOARDS WITH DIP SWITCHES INSTALLED
(S1-S10) — DO NOT INSTALL SOCKETS

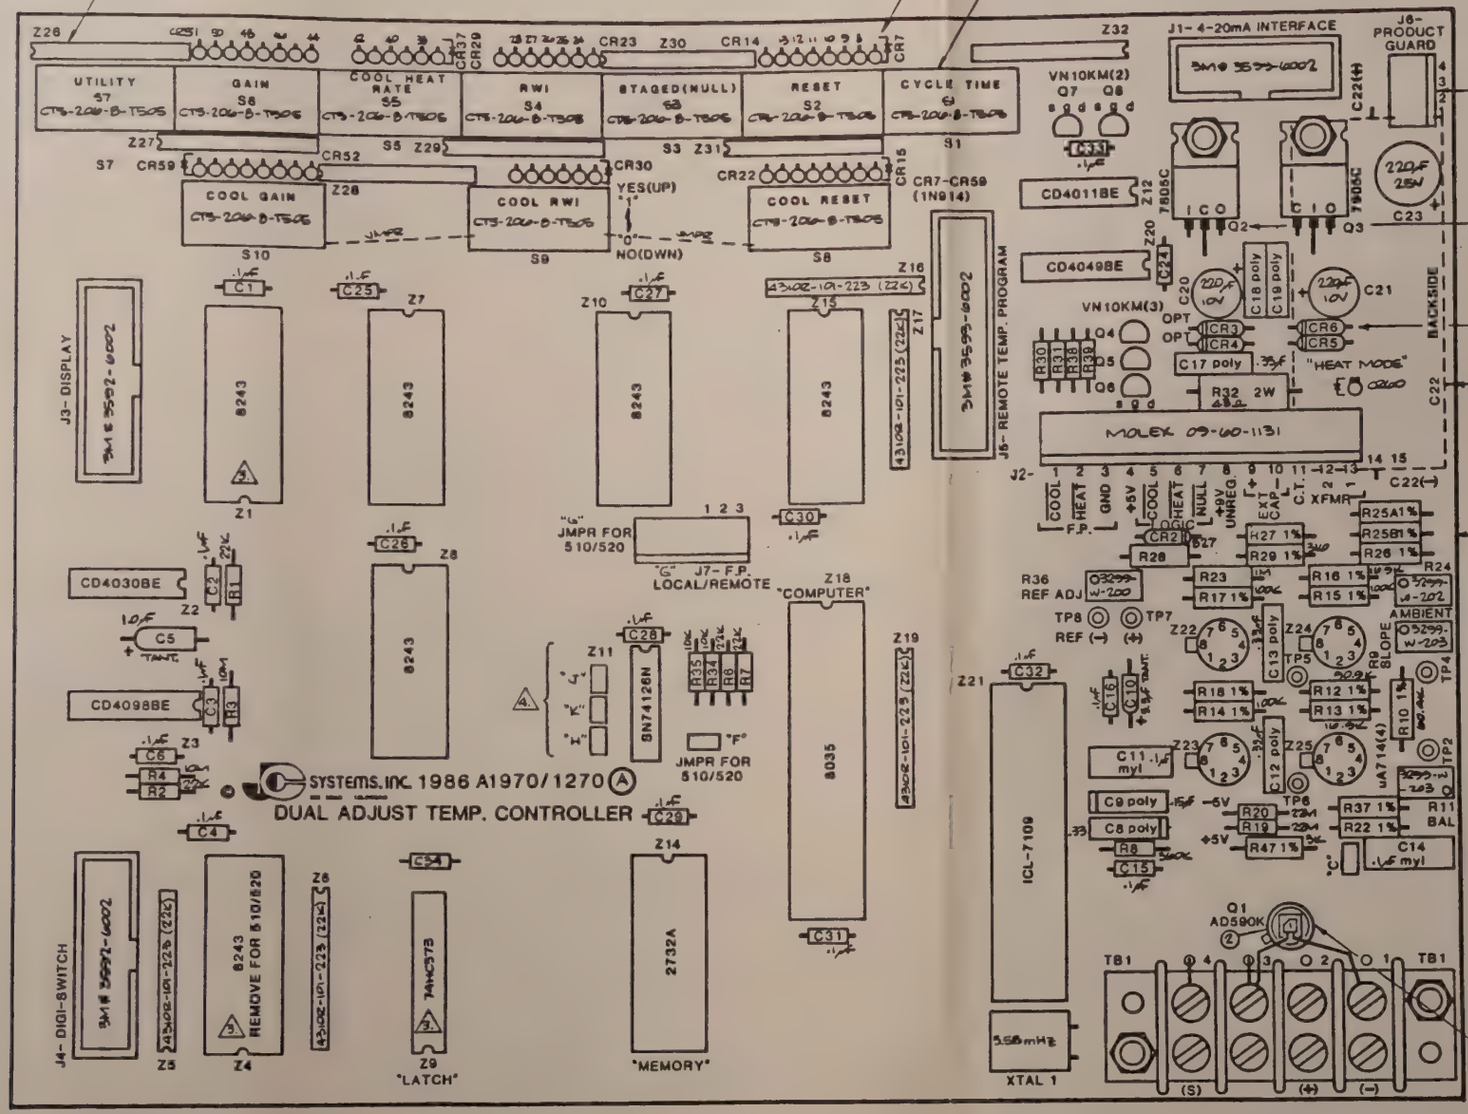

J6- PANDUIT (100) HLS6100-4 (HDR)

Q2- MTG THERMALLOY HEAT SINK 60705. 60718

CR3- CR6 ARE IN5392 (CR3 & CR4 ARE OPTIONAL)

INSTALL C22 FOR MODEL 210 ONLY OR SPECIAL APPLICATIONS (J2-9 & J2-10) EXT.

SEE "RESISTOR SELECT CHART" IN REF. MANUAL FOR VALUES OF: R18, R25B, R22, R20, R27, R28, R37

"SLOPE" TP4

"BALANCE" TP2

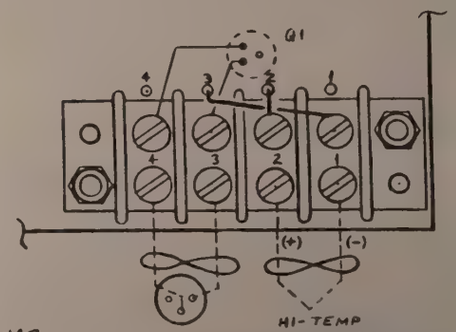

HI-TEMP
EXTERNAL DEVICE (MOUNTED IN REAR TERMINAL BLOCK - SEE DWG. 2117 FOR DETAILED ASSY.)

TB1- CINCH 4-140

SEE "RESISTOR SELECT CHART"
① THERMOCOUPLE TYPE "J" } BOND W/S MIN. EPOXY
② Q1-AD590K OR AD592A

REMOVE FOR 510/520 (DO NOT INSTALL) J4, Z4, Z5, Z6 & C4
INSTALL JMPRS "F" & "G"

⚠ FINISH (IF APPLICABLE)

⚠ MATL (IF APPLICABLE)

⚠ FOR SERIAL INTERFACE SOFTWARE: REMOVE Z11 & INSTALL JMPRS "H", "J" & "K".

⚠ NOTE: ORIENTATION OF THESE PARTS ARE REVERSED FROM THE OTHERS (Z1, Z4 & Z9)

NOTES: UNLESS OTHERWISE SPECIFIED

DASH	QTY	NEXT ASSY	USED ON	SERIAL NO.	DATE EFF	DWG REV
APPLICATION				EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES
TOLERANCES ON
DECIMALS .XX ± .05 .XXX ± .010
ANGLES 0°30'
HOLE TOLERANCES
.005 +.005 -.000 .005 +.005 -.000
.004 +.003 -.000 .004 +.003 -.000
MATERIAL ⚠
FINISH ⚠

ENGINEERING ACTIVITY	
DESIGN	M.W.TYLER
DRAFTED	" 06 APRIL 1987
CHECKED	
APPROV	
RELEASE	
DO NOT SCALE DWG	

SYSTEMS, INC.

TITLE: PRINTED CIRCUIT BD. ASSY- DUAL ADJUST TEMP. CONTROLLER MODEL A1970/1270-THERMOCOUPLE IN

SIZE	CODE IDENT		
D		1970/1270-TC	A
SCALE 2:1			SHEET 1 OF 1

5200506

REVISIONS			
ZONE	LTR	DESCRIPTION	DATE	APPD

SEE SHT 2 OF 2

"LATCH" Z9-74HC373 — "MEMORY" Z14-2732A — Z2 CD4030BE — Z3 CD4098BE — Z18 8035 — Z21 ICL7109 — Z19 22K SIP — Z28 22K SIP — Z7 8243 — Z8 8243 — Z10 8243 — Z30 22K SIP — Z31 22K SIP — Z32 22K SIP

-5V GUARD PLANE (A)

TYP µAT14 PWR

TBI-1 TBI-2 TBI-3 REF

4-20mA INTERFACE - J1

LAST REF. DESIG. USED:

C34	S10	XTAL 1
CR60	TP5	Z6
J7	Z32	
R47	TB1	

REF. DESIG. NOT USED:

R13, R5, R240, R41, R42, R21, R35
C7, C243

NOTES: UNLESS OTHERWISE SPECIFIED

DASH	QTY	NEXT ASSY	USED ON	SERIAL NO.	DATE EFF	DWG REV
APPLICATION				EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES
TOLERANCES ON
DECIMALS .XX ± .03 .XXX ± .010
ANGLES 0°30'
HOLE TOLERANCES

MATERIAL ⚠1
FINISH ⚠2

ENGINEERING ACTIVITY

DESIGN	VC SYSTEMS INC.
DRAFTED	" 21 FEB 1986
CHECKED	
APPROV	
RELEASE	

DO NOT SCALE DWG

SYSTEMS, INC.

TITLE: PRINTED CIRCUIT BD. SCH — DUAL ADJUST TEMP. CONTROLLER MODEL AP370/1270-LINEAR (TH)

SIZE D | CODE IDENT | 1969/1269-TH | SCALE N.A. | SHEET 1 OF 2

REVISIONS				
ZONE	LTR	DESCRIPTION	DATE	APPD
		SEE SCH 1969 SHT 2		

Z26 - Z32 22K SIP (7)
43102-101-223

CR7-CR59 ARE IN914(54) STAND-UP

* NOTE: DO NOT DIP CLEAN (SUBMERGE) BOARDS WITH DIP SWITCHES INSTALLED (S1-S10) — DO NOT INSTALL SOCKETS

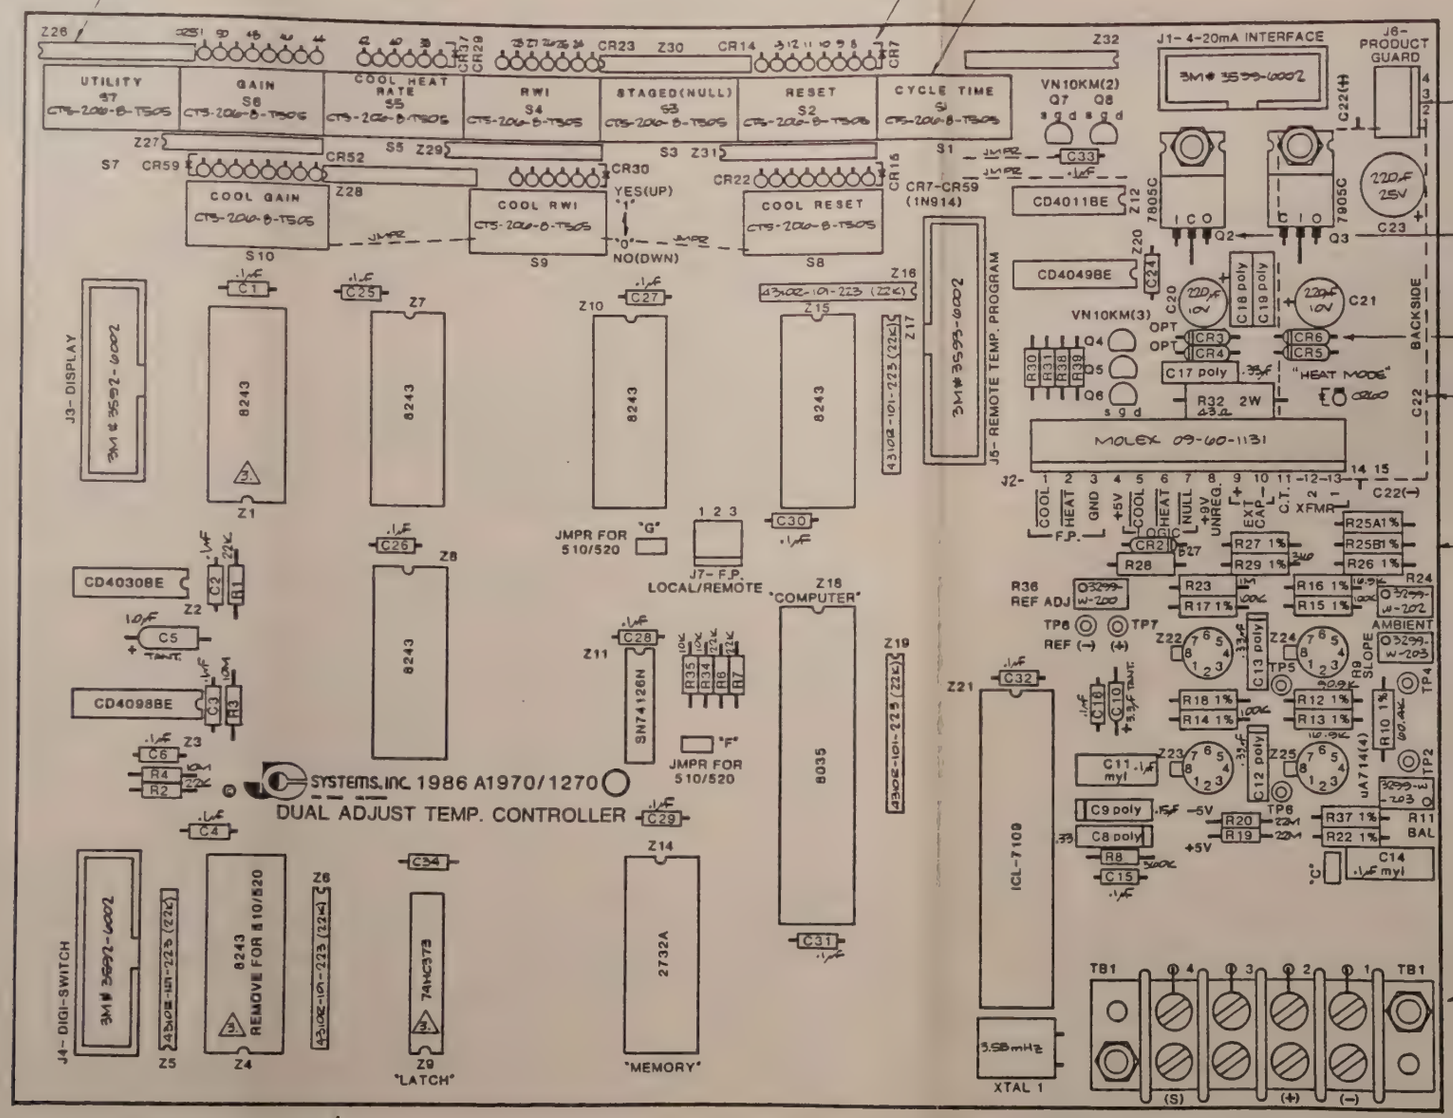

REMOVE FOR 510/520 (DO NOT INSTALL) J4, 24, 25, 26 & C4
INSTALL JMPRS "F" & "G"

J6- PAYOUT (.100) HL68120-4 (HDR)

Q2- MTG. THERMALLOY HEAT SINKS 60705, 60715

CR3- CR6 ARE IN5392 (CR3 & CR4 ARE OPTIONAL)

INSTALL C22 FOR MODEL 210 CULT OR SPECIAL APPLICATIONS (J2-9 & J2-10) EXT.

SEE "RESISTOR SELECT CHART" IN REF. MANUAL FOR VALUES OF: R18, R25B, R22, R26, R27, R28, R37

TB1- CINCH 4-140

⚠ FINISH (IF APPLICABLE)

⚠ MATL (IF APPLICABLE)

⚠ NOTE: ORIENTATION OF THESE PARTS ARE REVERSED FROM THE OTHERS (Z1, Z4 & Z9)

NOTES: UNLESS OTHERWISE SPECIFIED

DASH	QTY	NEXT ASSY	USED ON	SERIAL NO.	DATE EFF	DWG REV
APPLICATION				EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ON DECIMALS .XX ± .03 .XXX ± .010 ANGLES 0° 30' HOLE TOLERANCES

MATERIAL ⚠
FINISH ⚠

ENGINEERING ACTIVITY	
DESIGN	JC SYSTEMS INC.
DRAFTED	" 21 FEB 1986
CHECKED	
APPROV	
RELEASE	
DO NOT SCALE DWG	

SYSTEMS, INC.

TITLE: PRINTED CIRCUIT BD. ASSY- DUAL ADJUST TEMP. CONTROLLER MODEL A1970/1270-LINEAR (TH)

SIZE	CODE IDENT	
D		1970/1270-TH

SCALE 2/1 SHEET 1 OF 1

REVISIONS			
ZONE	LTR	DESCRIPTION	DATE	APPD

SEE ASSY A1862/1550

"SERIAL INTERFACE" J7

(10 PIN) J7

SELECT JUMPER

RS232 RCV / XMT / COM

JMPR FOR RS232C

MC1489 MC1488 C1 330pF +5V -5V

MINUS 1 / MINUS 2 / COLON / ALARM 1 / ALARM 2 / INHIBIT RAM / ACHECK Ø / ACHECK 1

PWR FAIL / TO Z13-4 / STOP / WR / RD

Z9 8051 — XTAL 1 11.0592MHZ, C3 10pF, C2 5pF, R1 100K, R2 2.2K, C11 .1µF, Q1 W160M, RST, GND, TPS

Z7 74HC373 — C10 .1µF

C9 .1µF — C8 .1µF — C7 .1µF — C6 .1µF — C5 .1µF

Z6 2764A EPROM BANK Ø (Ø-1FFF) — Z5 2764A EPROM BANK 1 (2000-3FFF) — Z4 2764A EPROM BANK 2 (4000-5FFF) — Z3 2764A EPROM BANK 3 (6000-7FFF)

SHT 2

R3 10M, CA .001µF, R4 1M, CD4030BE, Z24-10K RES SIP

SPARE CD4030BE, C41 .1µF

Z27-10K RES SIP

"I/O PORT 1" (CONTROL #1) J1

SETPOINT / PROCESS: 1 2 4 8 10 20 40 80 / 100 200 400 800 1000 2000 4000 NEGATIVE

Z28-10K RES SIP

GND, NULL, INTERROGATE, REMOTE, SETPT. VALID, (OPT) +5V

MC3302P Z14 +2.5V, R5 10K

Z26 82C55A — C16 .1µF

(26 PIN RIBBON CABLE) J1

⚠ FINISH (IF APPLICABLE)

⚠ MATL (IF APPLICABLE)

Z31 22K SIP

S1 CTS-206-7: EXPAND EVENTS, SINGLE STEP, ALL EVENTS ON, PRESET EVENTS, SERIAL MODE* (SWITCH CLOSED); ALL EVENTS OFF, HOLD EVENTS; "GPIB MODE" (SWITCH OPEN)

J9 — RS232 MODE SW. (SETS 2400 BAUD & ADD TO 40)

J9 - FAN (.100) 7 PIN

"I/O PORT 2" (CONTROL #2) J2

Z25-10K RES SIP

SETPOINT / PROCESS: 100 200 400 800 1000 2000 4000 NEGATIVE

GND, NULL, INTERROGATE, REMOTE, SETPT. VALID, (OPT) +5V

MC3302P Z14 +2.5V, R6 10K

Z23 82C55A — C14 .1µF

(26 PIN RIBBON CABLE) J2

Z21-10K RES SIP

J3 "COMPUTER INTERFACE"

DATA: 100 200 400 800 1000 2000 4000 8000/NEG.

GND, ACKNOWLEDGE / SRQ, INTERROGATE, REMOTE, DATA VALID, +5V (OPT)

Z22-10K RES SIP

Z20 82C55A — C12 .1µF, C13 .1µF, R7 10K

J3 (26 PIN RIBBON CABLE)

PROPRIETARY NOTICE
Information contained on this drawing is proprietary to JC Systems, Inc. and may not be copied, reproduced, nor parts made there from without written permission from JC Systems, Inc.

NOTES: UNLESS OTHERWISE SPECIFIED

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ON DECIMALS .XX ± .03 .XXX ± .010 ANGLES 0°30' HOLE TOLERANCES

DASH	QTY	NEXT ASSY	USED ON	SERIAL NO.	DATE EFF	DWG REV
APPLICATION				EFFECTIVITY		

MATERIAL ⚠ FINISH ⚠

ENGINEERING ACTIVITY

DESIGN	JC SYSTEMS INC.
DRAFTED	"
CHECKED	
APPROV	
RELEASE	

DO NOT SCALE DWG

JC SYSTEMS, INC. CUSTOMER COPY

TITLE: PRINTED CIRCUIT BD SCH — CONTROL LOGIC BD MODEL A1852/1550

SIZE D | CODE IDENT | 1851 | A

SCALE N.A.

SHEET 1 OF 2

5200586

REVISIONS				
ZONE	LTR	DESCRIPTION	DATE	APPD

LAST REF. DESIG. USED

R20
C44
CR18
TP4
J10
Z29
Q7
S1
BAT 1
XTAL 1

PROPRIETARY NOTICE
Information contained on this drawing is proprietary to JC Systems, Inc. and may not be copied, reproduced, nor parts made there from without written permission from JC Systems, Inc.

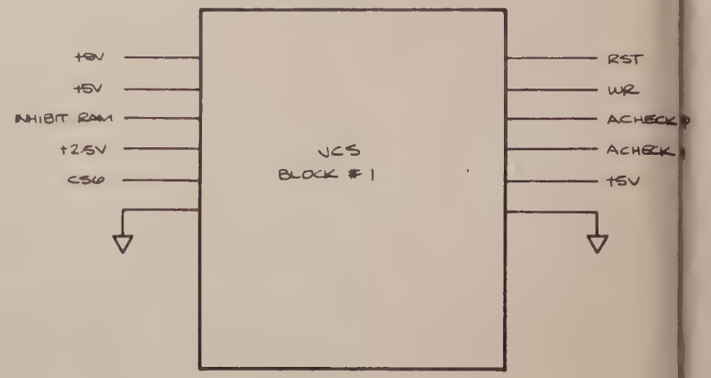

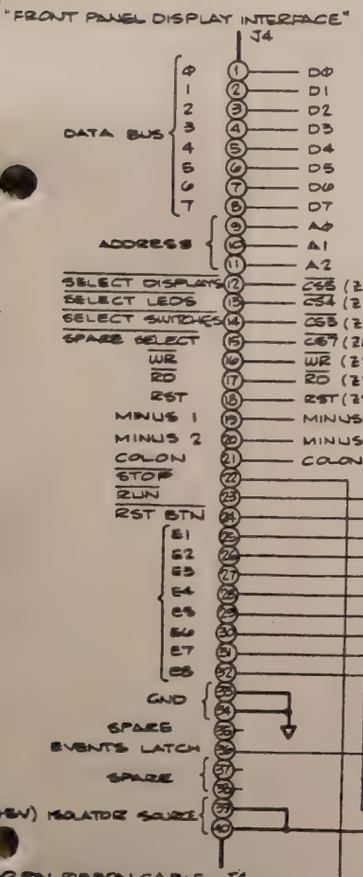

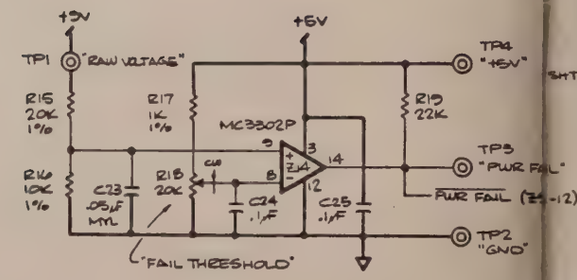

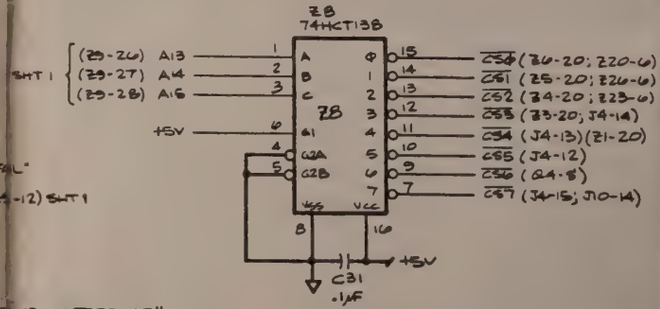

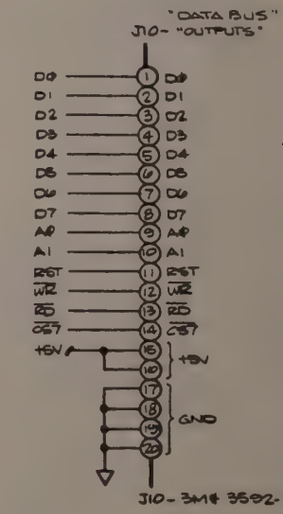

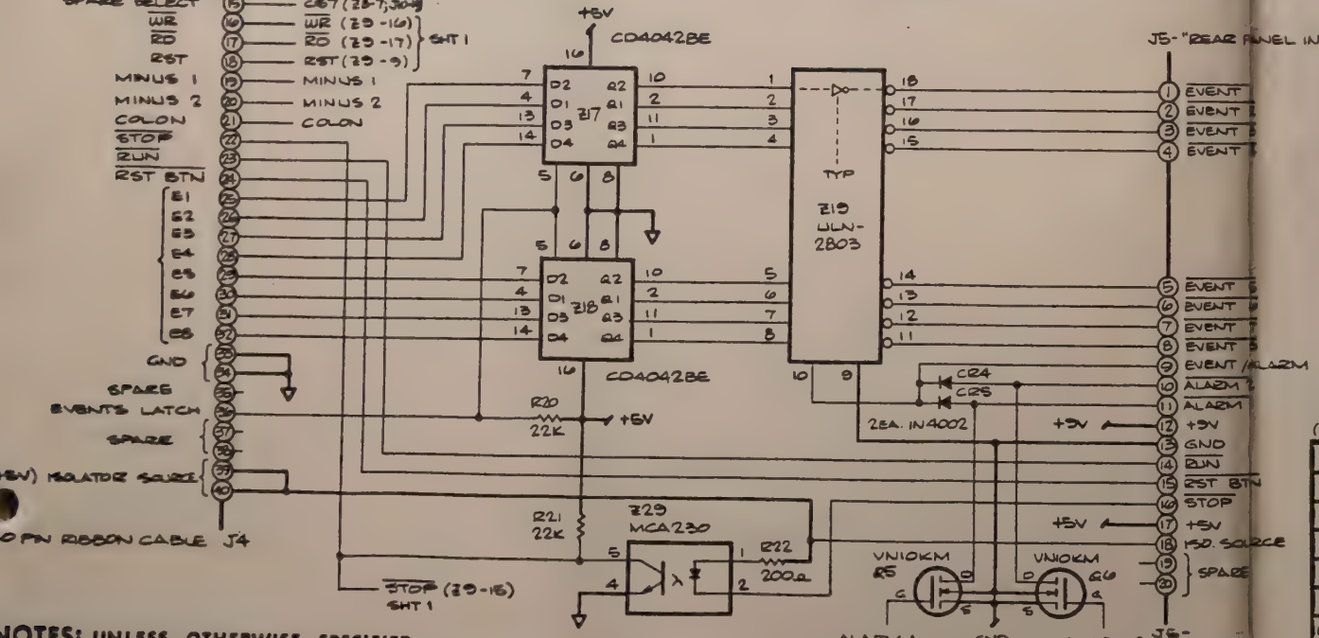

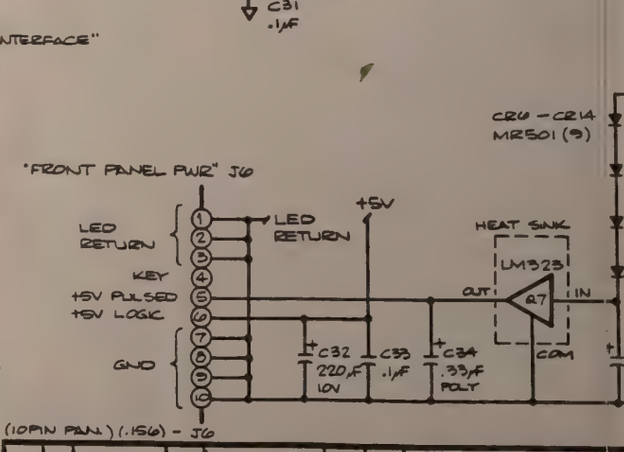

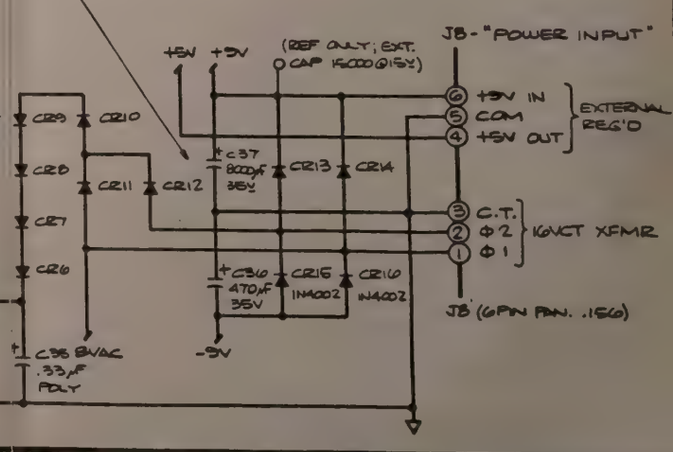

NOTES: UNLESS OTHERWISE SPECIFIED

DASH	QTY	NEXT ASSY	USED ON	SERIAL NO.	DATE EFF	DWG REV
APPLICATION				EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ON
DECIMALS .XX ± .03 .XXX ± .010
ANGLES 0°30'
HOLE TOLERANCES .010 +.005 -.000 .005 +.005 -.000 .000 .004 +.000 -.005 .005 +.005 -.000 .000 .004 +.000 -.005

MATERIAL ⚠
FINISH ⚠

ENGINEERING ACTIVITY

DESIGN	JC SYSTEMS INC
DRAFTED	"
CHECKED	
APPROV	
RELEASE	

DO NOT SCALE DWG

JC SYSTEMS, INC. CUSTOMER COPY

TITLE: PRINTED CIRCUIT BD SCH - CONTROL LOGIC BD. MODEL A1852/1550

SIZE	CODE IDENT		
D		1851	A

SCALE N.A. SHEET 2 OF 2

LTR	DESCRIPTION	DATE	APPD
H	CHANGED CR6 FROM IN768 TO IN5249B	8-25-86	T.J.C.

REVISIONS

ZONE	LTR	DESCRIPTION	DATE	APPD
	A	R1 WAS 7.41; R4 WAS VN10AM; R7 WAS 5.49K 1%; ADDED: C7 .001 CAP; J2-19 TO GND, R11 20K POT CR7 & CR8 WAS OPTIONAL; ADDED HEADER JUMPER (2 PIN)	1-31-80	
	B	C6 WAS .1μF; ADDED C8 & C9 .33μF @ 35V TANT C7 IS NO LONGER OPTIONAL	7-1-81	
	D	ADDED P1-A (16 PIN HDR CONN) & P1-B (26 PIN)	9-15-82	
	E	CHANGED R1 - LEAD SPACING	12-16-82	
	E1	CHANGED R2 FROM 100 TO 200Ω	6-20-84	MJC
	F	ADDED C10 10μF @ 35V	12-7-84	
	G	ADDED CR9 V180ZA10	4-26-86	

TB1
F1 1A
SIGNAL PCA0-110
CR1 IN4002
CR2 IN4002
CR3 IN4002
CR4 IN4002
Q1 7824
Q2 7915
+24V
+28V
-28V
-15V
R1 750 1%
R2 200
R11 20K
"SLOPE ADJUST"
"4mA OUT ADJUST"
R3 200 1%
C6 .33μF 35V (TANT)
C1 470μF 50V
C2 470μF 50V
C8 .33μF (TANT) 35V
C9 .33μF 35V (TANT)
C10 10μF 35V
C7 - .001μF
CR10 IN5249B (19V)
Q3 VN10KM
R12 220
CR6 TIL220
"CURRENT"
+Ic OUT
-Ic RETURN
4-20mA
POWER INPUT 115VAC
SΦH
SΦN
GND
+5V
F1 B12001
CR9 V180-ZA10
40V C.T.
C3 .01μF 100V
C4 .1μF
C5 22μF tant
R4 20
R5 24K 1%
R6 24K 1%
ANSLET 609-2627
P1-B (26 PIN)
NOT USED
P1-A
(LS BIT) B12 B11 GND GND +5V +5V B10 B9 B8 B7 B6 B5 B4 B3 B2 B1 (MS BIT)
ANSLET 609-1627 (16 PIN) P1-A P1-B
Z2 Am6012 "D/A CONVERTER"
VREF(-) VREF(+) COMP GND VLC V- V+ LSB MSB IL
P2 INSTALLED FOR 4-20mA OPERATION
P2 REMOVED FOR 0-16mA OPERATION
P2
Q4 2N4401
R10 10K
R9 5.1K
R7 7.15K 1%
CR7 IN914
CR8 IN914
R8 5K
(TRIM ADJUST)
"4mA CUT ADJUST"

DASH	QTY	NEXT ASSY	USED ON	SERIAL NO.	DATE EFF	DWG REV
	1	A1034		1420		H/C
APPLICATION				EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES
TOLERANCES ON
DECIMALS .XX ± .03 .XXX ± .010
ANGLES 0°30'
HOLE TOLERANCES

MATERIAL ⚠1
FINISH ⚠2
⚠1 FINISH (IF APPLICABLE)
⚠2 MATL (IF APPLICABLE)
NOTES: UNLESS OTHERWISE SPECIFIED

ENGINEERING ACTIVITY		
DESIGN	JC SYSTEMS INC.	
DRAFTED	" 04 OCT 1979	
CHECKED		
APPROV		
RELEASE		
DO NOT SCALE DWG		

JC ENTERPRISES
SAN DIEGO, CALIFORNIA

TITLE: PRINTED CIRCUIT BD SCH - 4-20mA OUTPUT INTERFACE MODEL A1034

SIZE	CODE IDENT		
C		1033	H
SCALE N.A.			SHEET 1 OF 1

200586

Page C-11

REVISIONS			
ZONE	LTR	DESCRIPTION	DATE	APPD

SEE SCH C1023

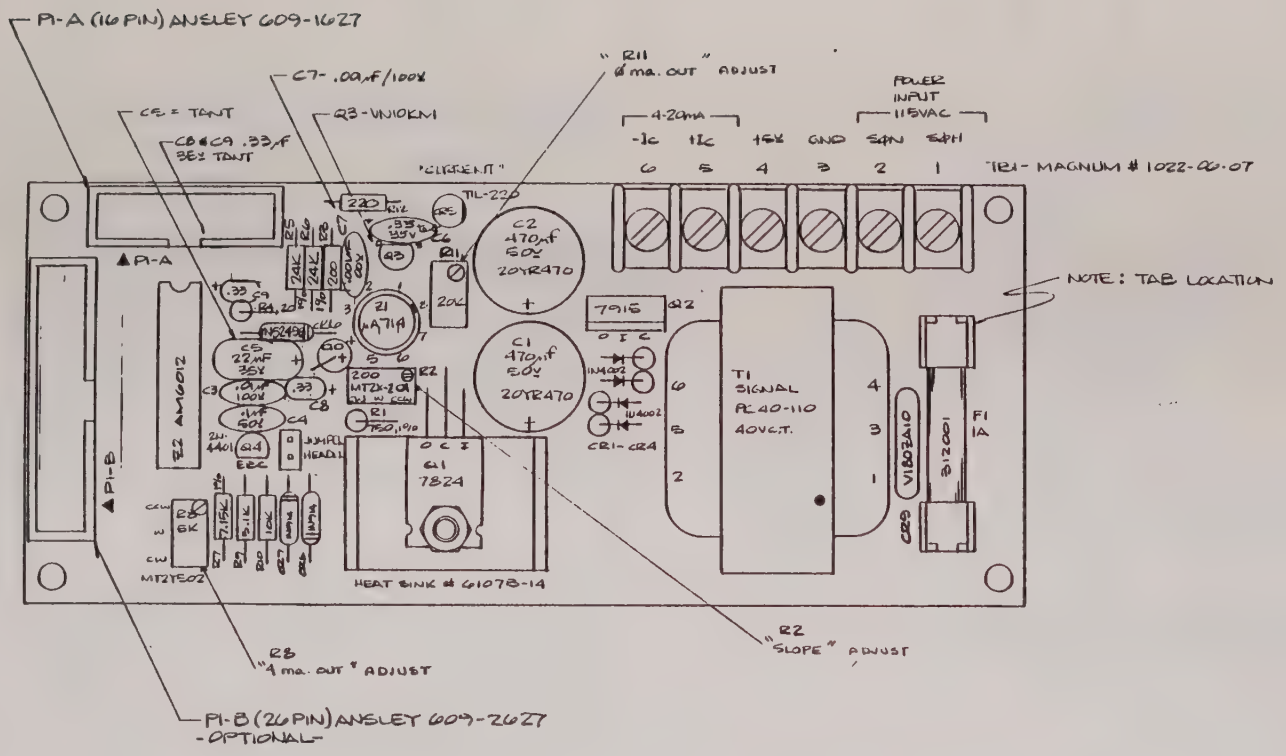

	1	EID ITEM		1490		11C
DASH	QTY	NEXT ASSY	USED ON	SERIAL NO.	DATE EFF	DWG REV
APPLICATION				EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES
TOLERANCES ON
DECIMALS: .XX ± .03, .XXX ± .010
ANGLES: 0°30'
HOLE TOLERANCES

MATERIAL ⚠
FINISH ⚠

ENGINEERING ACTIVITY

DESIGN	K SYSTEMS INC.
DRAFTED	04 OCT 1979
CHECKED	
APPROV	
RELEASE	

DO NOT SCALE DWG

C ENTERPRISES

TITLE: PRINTED CIRCUIT BD ASST
4-20ma OUTPUT INTERFACE
MODEL A1034

SIZE	CODE IDENT		
C		1034	H

SCALE 2:1 SHEET 1 OF 1

⚠ FINISH (IF APPLICABLE)

⚠ MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

REVISIONS			
ZONE	LTR	DESCRIPTION	DATE	APPD
		SER ASST A1862/1550		

"SERIAL INTERFACE" J7

+5V
-9V
SELECT JUMPER
RCV
XMT
COM
RS232
JMPR FOR RS232C
(10 PIN) J7
MC1489
MC1488
C1 330pF
MINUS 1
MINUS 2
COLON
ALARM 1
ALARM 2
INHIBIT RAM
ACHECK Ø
ACHECK 1
PWR FAIL
TO Z13 - 4
STOP
WR
RD
INTØ
INT1
TØ
T1
RXD
TXD
ALE
PSEN
RST
XTAL1
XTAL2
EA
Z9 8031
R1 100K
R2 2.2K
Q1 VN10KM
TP5
TP6
C11 .1µF
C2 5pF
C3 10pF
XTAL 1 11.0592MHZ
A8 A9 A10 A11 A12
A13 (Z8-1)
A14 (Z8-2)
A15 (Z8-3)
SHT 2
Z7 74HC373
C10 .1µF
C9 .1µF
C8 .1µF
C7 .1µF
C6 .1µF
C5 .1µF
Z6 2764A EPROM BANK Ø (Ø - 1FFF)
Z5 2764A EPROM BANK 1 (2000 - 3FFF)
Z4 2764A EPROM BANK 2 (4000 - 5FFF)
Z3 2764A EPROM BANK 3 (6000 - 7FFF)
(Z8-6) CE Ø
CS1
CS2
CS3
R3 10M
C4 .001µF
CD4030BE
R4 1M
BVAC
SPARE CD4030BE
C41 .1µF

PROPRIETARY NOTICE
Information contained on this drawing is proprietary to JC Systems, Inc. and may not be copied, reproduced, nor parts made there from without written permission from JC Systems, Inc.

"I/O PORT 1" ("CONTROL #1") J1
Z27 - 10K RES SIP
Z28 - 10K RES SIP
SETPOINT / PROCESS
100 200 400 800 1000 2000 4000 NEGATIVE
GND
NULL
INTERROGATE
REMOTE
SETPT. VALID
(OPT) +5V
MC3302P
Z14
+2.5V
R5 10K
Z26 82C55A
PA PB PC
D Ø D1 D2 D3 D4 D5 D6 D7
A Ø A1 RD WR RST CS
C16 .1µF
C17 .1µF
Vcc Vss
(26 PIN RIBBON CABLE) J1
⚠ FINISH (IF APPLICABLE)
⚠ MATL (IF APPLICABLE)
Z31 22K SIP
Z31-10
J9 - PAN (.100) 7 PIN
J9-15 J9-16 J9-17 J9-10
S1 CTS-206-7
"ON" S1 "OFF"
EXPAND EVENTS
SINGLE STEP
ALL EVENTS ON
PRESET EVENTS
SERIAL MODE* (SWITCH CLOSED)
ALL EVENTS OFF
HOLD EVENTS
"GPIB MODE" (SWITCH OPEN)

"I/O PORT 2" (CONTROL #2) J2
Z24 - 10K RES SIP
Z26 - 10K RES SIP
SETPOINT / PROCESS
100 200 400 800 1000 2000 4000 NEGATIVE
GND
NULL
INTERROGATE
REMOTE
SETPT. VALID
(OPT) +5V
MC3302P
Z14
+2.5V
R6 10K
Z23 82C55A
PA PB PC
D Ø D1 D2 D3 D4 D5 D6 D7
A Ø A1 RD WR RST CS
C14 .1µF
C15 .1µF
Vcc Vss
(26 PIN RIBBON CABLE) J2
R5232 MODE SW. (SETS 2400 BAUD & ADD TO Ø4Ø)

Z21 - 10K RES SIP
J3 "COMPUTER INTERFACE"
DATA
100 200 400 800 1000 2000 4000 8000/NEG.
GND
ACKNOWLEDGE / SRQ
INTERROGATE
REMOTE
DATA VALID
+5V (OPT)
Z22 - 10K RES SIP
Z20 82C55A
PA PB PC
D Ø D1 D2 D3 D4 D5 D6 D7
A Ø A1 RD WR RST CS
C12 .1µF
C13 .1µF
R7 10K
Z31-10
Z9-13
CD4030BE
J3 (26 PIN RIBBON CABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

DASH	QTY	NEXT ASSY	USED ON	SERIAL NO.	DATE EFF	DWG REV
APPLICATION				EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES ON
DECIMALS .XX ± .03 .XXX ± .010
ANGLES 0°30'
HOLE TOLERANCES
.013 THRU .250 +.004 -.005
.251 THRU .500 +.005 -.005
.501 THRU .750 +.005 -.005
MATERIAL ⚠
FINISH ⚠

ENGINEERING ACTIVITY	
DESIGN	JC SYSTEMS INC
DRAFTED	"
CHECKED	
APPROV	
RELEASE	

DO NOT SCALE DWG

SYSTEMS, INC. CUSTOMER COPY

TITLE: PRINTED CIRCUIT BD SCH — CONTROL LOGIC BD MODEL A1852/1550

SIZE	CODE IDENT		
D		1851	A

SCALE N.A.

SHEET 1 OF 2

5200586

REVISIONS				
ZONE	LTR	DESCRIPTION	DATE	APPD
	A	REMVD: C44, C45; ADDED: CR17, CR18, BAT 1, R26 RELOCATED: R10, R11, R12, R13, R22, R23, R24, C18, C19, C20; R13 WAS 22K; CR2 WAS IN4002; C21 WAS .1μF; R24 WAS 470Ω; S1 WAS CS3-206-7	11-8-85	

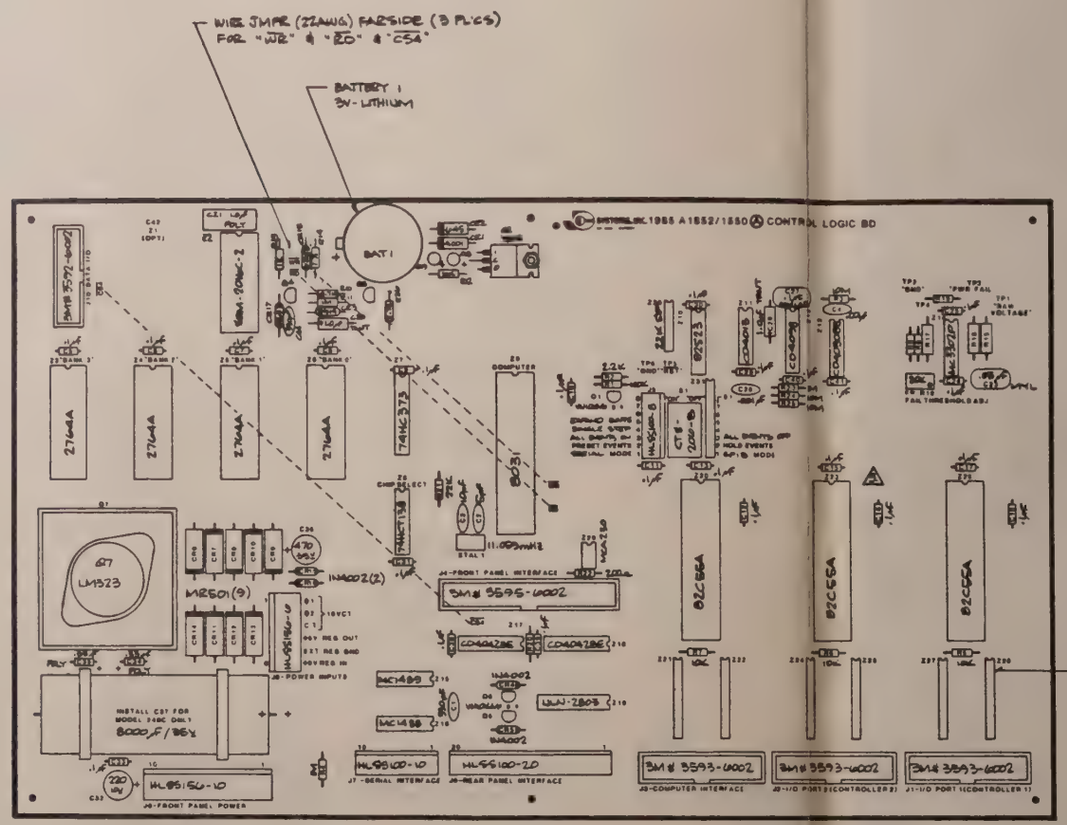

R14 2.7K	R26 2.7K
R8 22K	R17 1K 1%
R9 12K	R18 20K POT
R10 4.7K	R19 22K
R11 1M	C24 .1μF
R12 10K	C26 .1μF
R13 1K	C23 .05μF MYLAR
R15 20K 1%	Q2 7805
R16 10K 1%	Q3 2N4401
CR1 IN4002	Q4 VN01
CR2 IN4148	C44 330pF
CR3 IN914	CR17, CR18 IN6263
C18 & C19 .33μF TANT	
R31 22K RES SIP	
C21 1.0μF POLY	

221, 222, 224, 225, 227, 228 ARE 10K SIP CSC10A01-1036 (6)

SYSTEMS, INC.	NO 1853	A
	DATE 08/14/85	
SILKSCREEN	SHT 4 OF 4	

PROPRIETARY NOTICE
Information contained on this drawing is proprietary to JC Systems, Inc. and may not be copied, reproduced, nor parts made there from without written permission from JC Systems, Inc.

⚠ FINISH (IF APPLICABLE)

⚠ MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

DASH	QTY	NEXT ASSY	USED ON	SERIAL NO.	DATE EFF	DWG REV
APPLICATION				EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES ON
DECIMALS .XX ± .03, .XXX ± .010
ANGLES 0° 30'
MOLT TOLERANCES
.093 THRU .333 +.004 -.001
.334 THRU .500 +.005 -.001
.501 THRU .999 +.006 -.001
1.000 THRU 2.000 +.008 -.001

MATERIAL ⚠
FINISH ⚠
DO NOT SCALE DWG

ENGINEERING ACTIVITY		
DESIGN	JC SYSTEMS INC	
DRAFTED	" 16 SEPT 1985	
CHECKED		
APPROV		
RELEASE		

JC SYSTEMS, INC. CUSTOMER COPY

TITLE: PRINTED CIRCUIT BD. ASSY- CONTROL LOGIC BD. MODEL A1852/1550

SIZE	CODE IDENT		
D		1852	A

SCALE FULL SHEET 1 OF 1

REVISIONS			
ZONE	LTR	DESCRIPTION	DATE	APPD

STEP — CHANNEL 1 — CHANNEL 2 — TIME / CYCLES

+5V PULSED

Z28-TIL312 … Z15-TIL312 (ANODE, A B C D E F G)

Z14 … Z1 9374

LED RETURN

"FRONT PANEL INTERFACE" (A1836 F.P. SW. BD.)

TO SWITCHES (SEE SCH. 1836)

RESET · RUN · STOP

S1 = SKT-036G (OPERATE / PROGRAM / REMOTE)

MODE SELECT (F.P.)

Z32 8255A

Z43, 22K SIP

Z34 - 22K DIP

Z39 DIP SW.

Z44 - MCA230

Z45 MCA230

Z46 22K SIP

C1 … C7 .1µF

LOGIC PULSED +5V

LEDS: CYCLES, EVENTS, TIME, ALARM 2, SET PT. 2, ALARM 1, SET PT. 1, STEP, CH1 MAN, CH1 PROG, CH2 MAN, CH2 PROG, PROGRAM RUN

180Ω RES DIP

Z38 … Z42 ULN2803

Z37 & Z39 CD4049BE (2)

Z36 8255A

Z39 & Z41 CD4049BE

BZ1 BUZZER FIELD ALARM

SN74S138 — Z31

J1 (40 PIN)

EVENTS LATCH (1's TO ENABLE)

Q1 … Q3 VN0604

MINUS 1 · MINUS 2 · COLON

J2-1,2,3,7,8,9,10 LED RETURN

J1 — EVENTS

J2 (10 PIN) — GND · LOGIC +5V · PULSED +5V · KEY · GND

Z19-Z22; Z5-Z8; R5, R4, CR2, CR15, CR14 NOT USED FOR MODEL 510 (REF CH. 2)

FINISH (IF APPLICABLE)

MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
Information contained on this drawing is proprietary to JC Systems, Inc. and may not be copied, reproduced, nor parts made there from without written permission from JC Systems, Inc.

ENGINEERING ACTIVITY	JC SYSTEMS INC.
DESIGN	
DRAFTED	" 17 JULY 1986
CHECKED	
APPROV	
RELEASE	
DO NOT SCALE DWG	

JC SYSTEMS, INC.

TITLE: PRINTED CIRCUIT BD. SCH — FRONT PANEL DISPLAY BD. MODEL A1840

SIZE	CODE IDENT		
D		1839	A
SCALE N.A.		SHEET 1 OF 2	

REVISIONS				
ZONE	LTR	DESCRIPTION	DATE	APPD

CHANNEL 1 CONTROLLER ⚠3

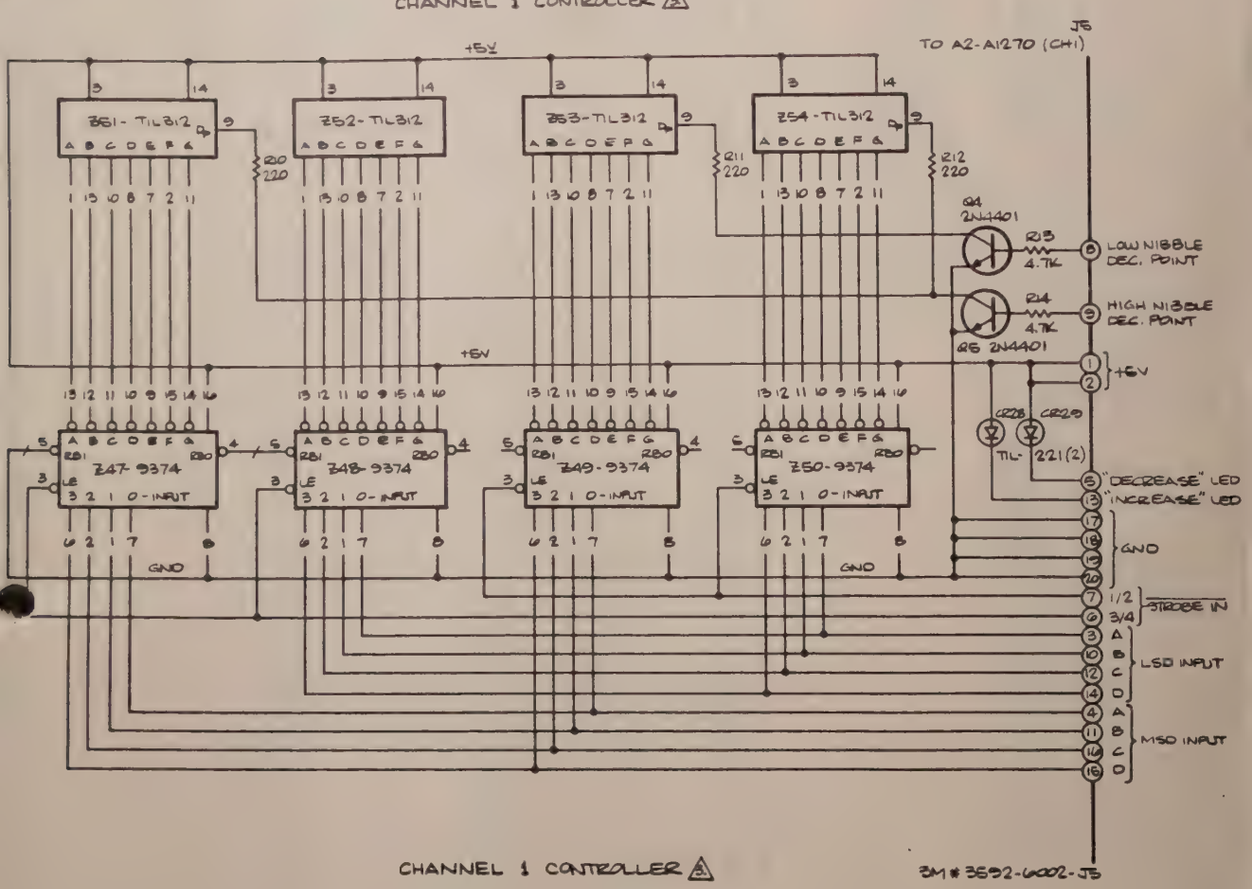

CHANNEL 1 CONTROLLER ⚠3

3M#3592-6002-J5

CHANNEL 2 CONTROLLER

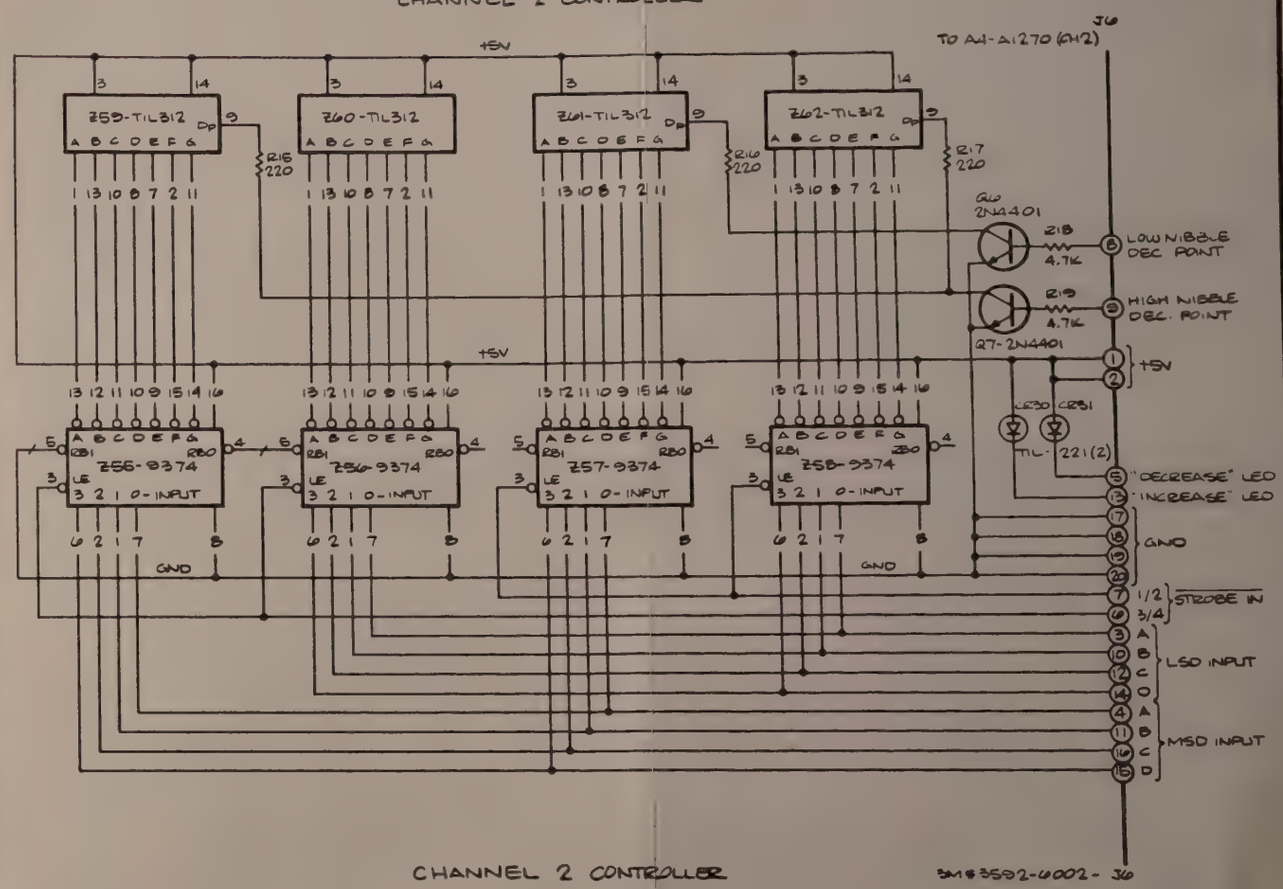

CHANNEL 2 CONTROLLER

3M#3592-6002-J6

LAST REF DESIG USED
C9
CR31
B31
J6
Q7
R19
Z62

⚠ FINISH (IF APPLICABLE)

⚠3 Z47-Z54; R10-R4; Q4, Q5, CR28, CR29, J5 NOT USED IN MODEL 510 (REF DWG. 1)

⚠ MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
Information contained on this drawing is proprietary to JC Systems, Inc. and may not be copied, reproduced, nor parts made there from without written permission from JC Systems, Inc.

DASH	QTY	NEXT ASSY	USED ON
		APPLICATION	

SERIAL NO. | DATE EFF | DWG REV
EFFECTIVITY

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ON
DECIMALS .XX ±.06 .XXX ±.010
ANGLES 0°30'
HOLE TOLERANCES

MATERIAL ⚠
FINISH ⚠

ENGINEERING ACTIVITY

DESIGN	JC SYSTEMS INC
DRAFTED	" 17 JULY 1985
CHECKED	
APPROV	
RELEASE	

DO NOT SCALE DWG

JC SYSTEMS, INC.

TITLE: PRINTED CIRCUIT BD. SCH- FRONT PANEL DISPLAY BD. MODEL A1840

SIZE	CODE IDENT		
D		1839	A

SCALE N.A. SHEET 2 OF 2

REVISIONS				
ZONE	LTR	DESCRIPTION	DATE	APPD

KV DENVER DOME SW.
#SAS-50 (TYP 25)



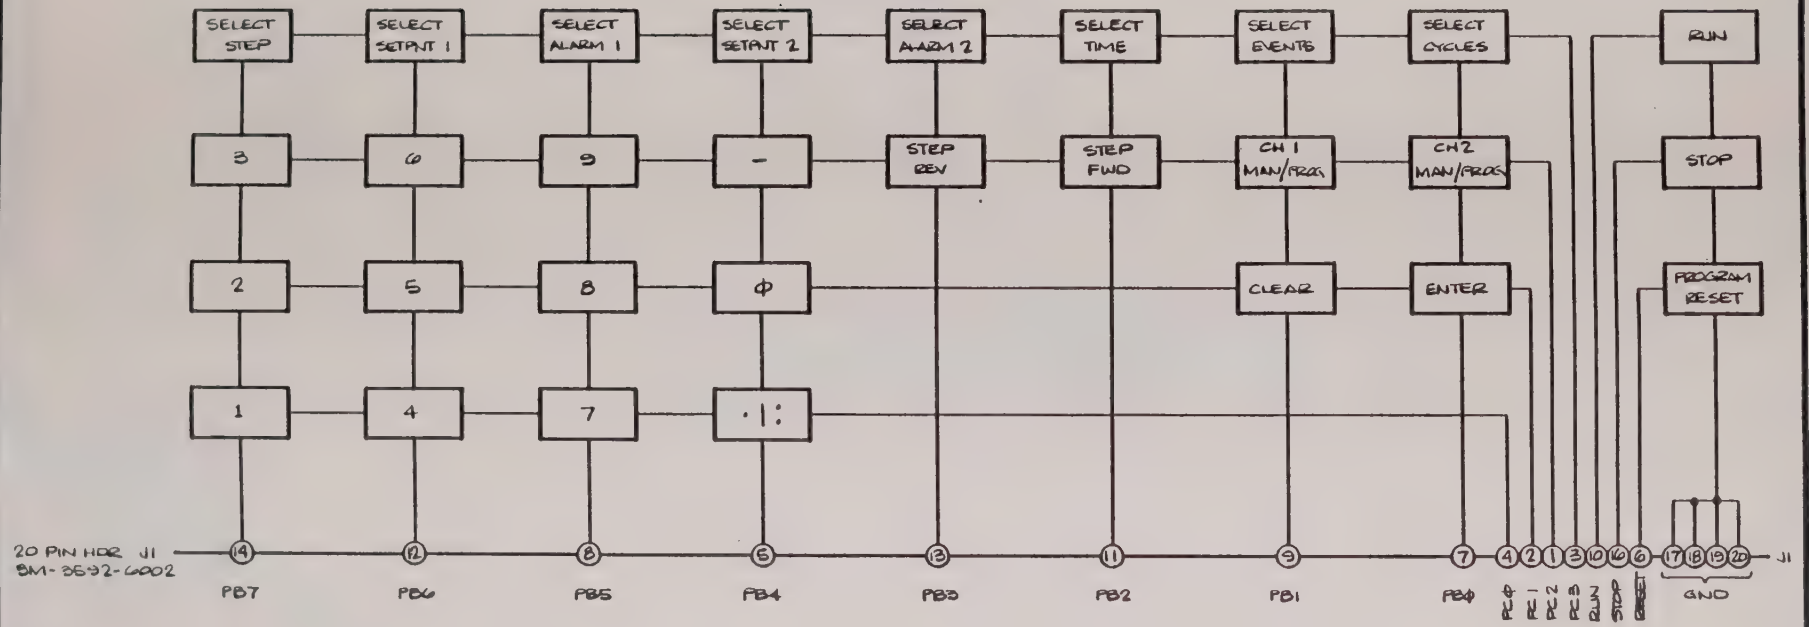

PROPRIETARY NOTICE
Information contained on this drawing is proprietary to JC Systems, Inc. and may not be copied, reproduced, nor parts made there from without written permission from JC Systems, Inc.

DASH	QTY	NEXT ASSY	USED ON	SERIAL NO.	DATE EFF	DWG REV
APPLICATION				EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES
TOLERANCES ON
DECIMALS .XX ± .03 .XXX ± .010
ANGLES ± 30'
HOLE TOLERANCES

MATERIAL ⚠
FINISH ⚠

⚠ FINISH (IF APPLICABLE)
⚠ MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

ENGINEERING ACTIVITY	
DESIGN	JC SYSTEMS INC
DRAFTED	08 JULY 1985
CHECKED	
APPROV	
RELEASE	
DO NOT SCALE DWG	

JC SYSTEMS, INC.

TITLE: PRINTED CIRCUIT BD. SCH — FRONT PANEL SWITCH BD. MODEL A1836

SIZE	CODE IDENT	
C		1835

SCALE N.A. SHEET 1 OF 1

5200586

REVISIONS				
ZONE	LTR	DESCRIPTION	DATE	APPD
	A	ADDED: 2ER MTG HOLES	11-8-95	

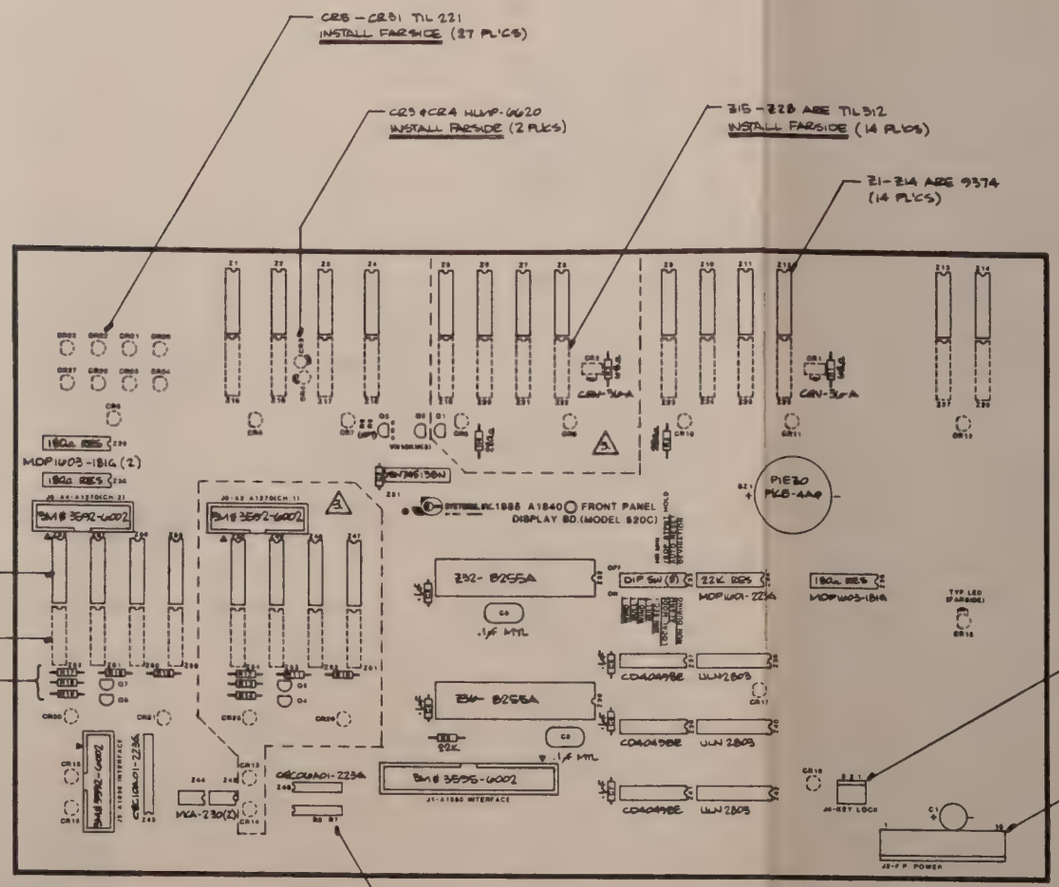

JC SYSTEMS, INC.	NO	1841
	DATE	07/17/86
SILKSCREEN	SHT	4 OF 4

⚠5 Z5-Z8, Z13-Z22, CR3, CR20, CR2, R3, R4, R1
Z47-Z64, R10-R14, R4, R6, CR3, CR4, CR28, CR29
& J5 NOT USED FOR MODEL 50

⚠4 FINISH (IF APPLICABLE)

⚠1 MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
Information contained on this drawing is proprietary to JC Systems, Inc. and may not be copied, reproduced, nor parts made there from without written permission from JC Systems, Inc.

DASH	QTY	NEXT ASSY	USED ON
APPLICATION			

SERIAL NO.	DATE EFF	DWG REV
EFFECTIVITY		

MATERIAL ⚠1
FINISH ⚠4

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES ON
DECIMALS: .XX ± .03, .XXX ± .010
ANGLES: 0° 30'

MOST TOLERANCES

ENGINEERING ACTIVITY

DESIGN	JC SYSTEMS INC
DRAFTED	14 AUG 1986
CHECKED	
APPROV	
RELEASE	

DO NOT SCALE DWG

JC SYSTEMS, INC.

TITLE: PRINTED CIRCUIT BD. ASSY – FRONT PANEL DISPLAY BD. MODEL A1840

SIZE	CODE IDENT		
D		1840	A
SCALE FULL		SHEET 1 OF 1	

REVISIONS				
ZONE	LTR	DESCRIPTION	DATE	APPD

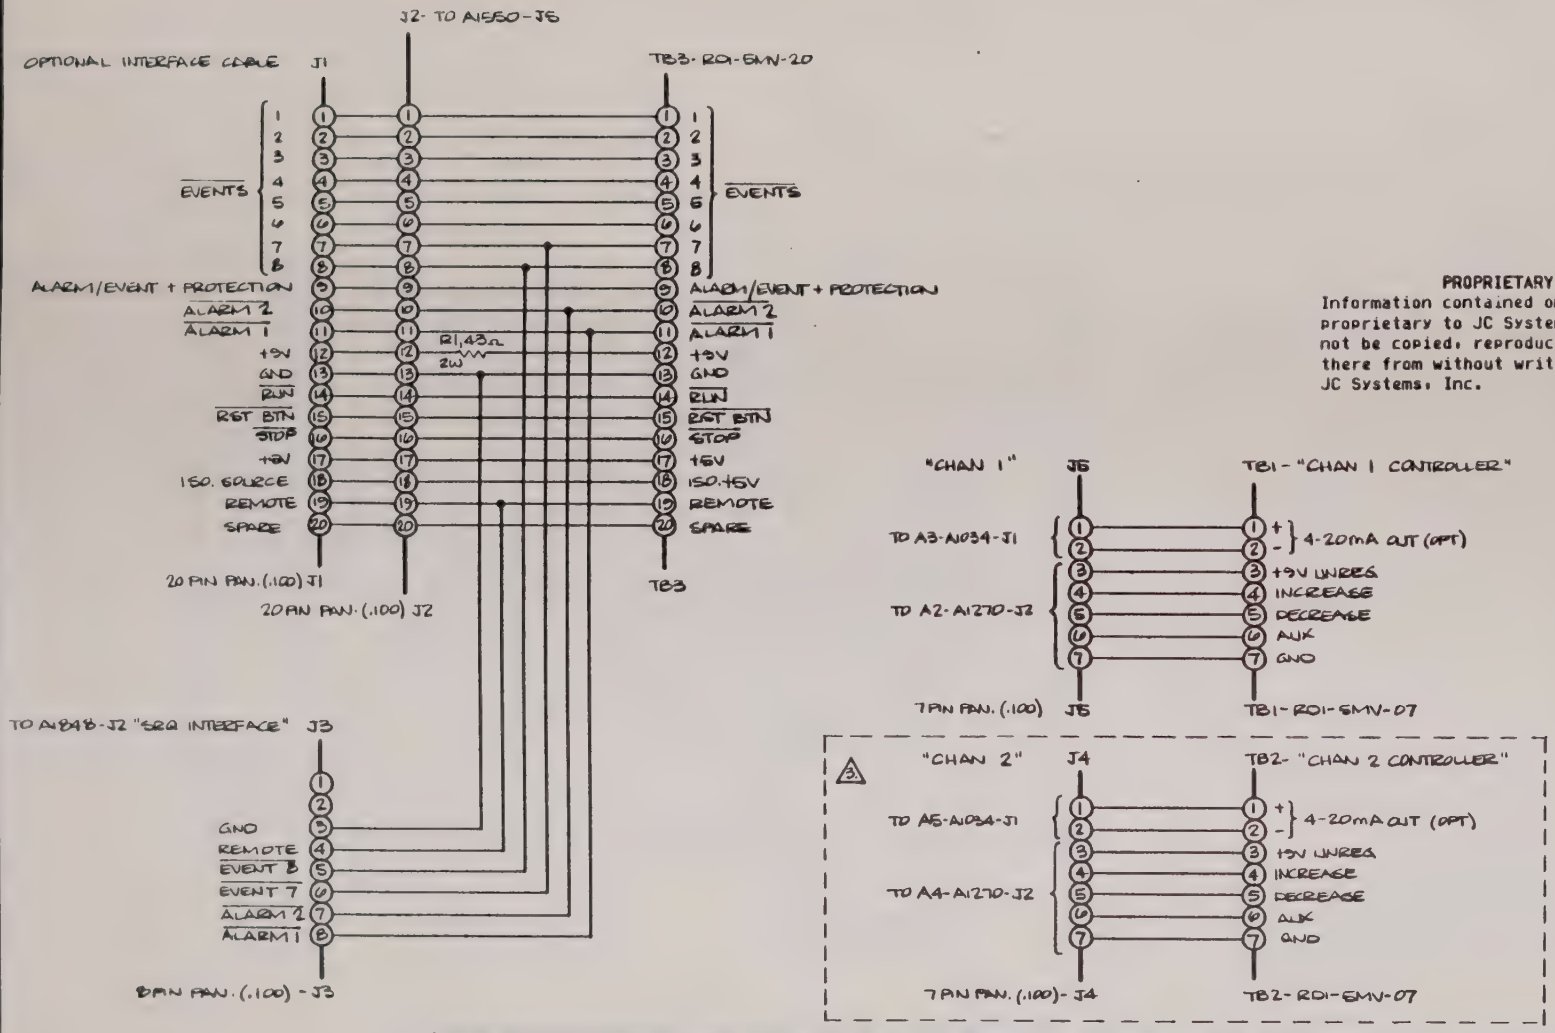

PROPRIETARY NOTICE

Information contained on this drawing is proprietary to JC Systems, Inc. and may not be copied, reproduced, nor parts made there from without written permission from JC Systems, Inc.

⚠3 J4 & TB2 NOT USED FOR MODEL 610

⚠ FINISH (IF APPLICABLE)

⚠ MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

DASH	QTY	NEXT ASSY	USED ON	SERIAL NO.	DATE EFF	DWG REV
APPLICATION				EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES
TOLERANCES: ON DECIMALS .XX ± .03, .XXX ± .010; ANGLES 0°30'

HOLE TOLERANCES

MATERIAL ⚠1

FINISH ⚠2

ENGINEERING ACTIVITY		
DESIGN	JC SYSTEMS INC	
DRAFTED	" 24 JULY 1985	
CHECKED		
APPROV		
RELEASE		

DO NOT SCALE DWG

JC SYSTEMS, INC.

TITLE: PRINTED CIRCUIT BD. SCH— CONTROLLER/EVENT TERMINAL BD. MODEL A1844

SIZE	CODE IDENT	
C		1843

SCALE N.A. SHEET 1 OF 1

5200586

REVISIONS				
ZONE	LTR	DESCRIPTION	DATE	APPD

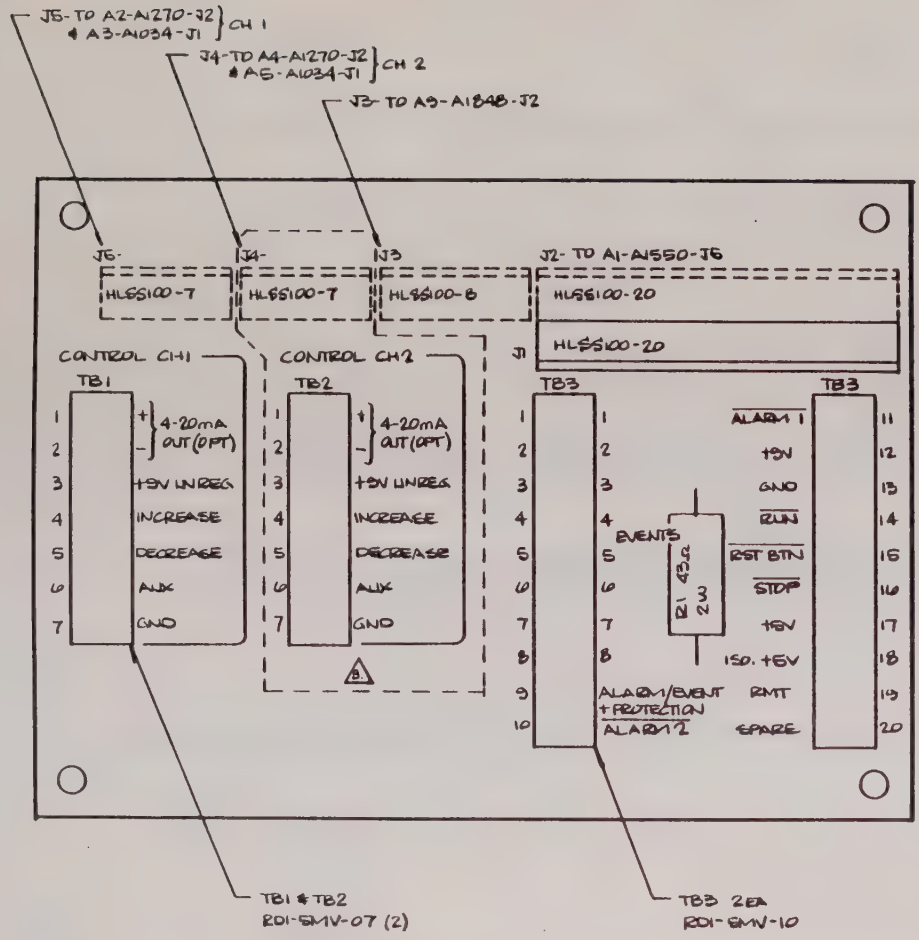

PROPRIETARY NOTICE
Information contained on this drawing is proprietary to JC Systems, Inc. and may not be copied, reproduced, nor parts made there from without written permission from JC Systems, Inc.

5200586

⚠2 J4 & TB2 NOT USED FOR MODEL 510

⚠ FINISH (IF APPLICABLE)

⚠ MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

DASH	QTY	NEXT ASSY	USED ON	SERIAL NO.	DATE EFF	DWG REV
APPLICATION				EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES ON
DECIMALS .XX ± .03 .XXX ± .010
ANGLES 0°30'
HOLE TOLERANCES

MATERIAL ⚠1
FINISH ⚠2

ENGINEERING ACTIVITY

DESIGN	JC SYSTEMS INC
DRAFTED	" 23 JULY 1985
CHECKED	
APPROV	
RELEASE	

DO NOT SCALE DWG

JC SYSTEMS, INC.
SAN DIEGO, CALIFORNIA

TITLE: PRINTED CIRCUIT BD. ASSY— EVENTS/ALARM & CONTROLLER OUTPUT—MODEL A1844

SIZE	CODE IDENT	
C		1844

SCALE 2:1 SHEET 1 OF 1

REVISIONS			
ZONE LTR	DESCRIPTION	DATE	APPD

P1- ANSLEY 609-2627 P1

ANSLEY 609-24F (R.P.)

DIO1 DIO2 DIO3 NRFD DIO4 DIO5 DIO6 NDAC GND DIO7 DIO8 DAV EOI GND ATN IFC REN SRQ CHASSIS GND

R2 100Ω

"IEEE-488" REAR PANEL P1

MC3448 Z12 Z11 Z9 Z16

Z4 SN74LS04N

+5V

Z13 INTEL 8291A

T/R1 T/R2 DIO7 DIO8 DAV EOI RS2 RS1 RS4 ATN IFC REN SRQ

Z10-8282 "ADDR LATCH"

Z8 - 2732A/2716

2732A (F1) 2716

Z1 8035

Z1 8036

PSEN PROG XTAL 1 XTAL 2 RESET EA T1 INT

XTAL 1 GE42 3.579546 MHz C5 20pF C6 20pF C7 1.0μF R4 22K R3 22K R5 22K

Q2-VN10KM Q3-VN10KM Q4 VN10KM

S2-1 THRU 4 SHOWN IN "1" OR FALSE STATE

N.C. "S1 BUS ADDYS" DIP SWITCH (SHOWN IN "0" STATE)

Z4-43102-101-223 22K RES SIP

Z3-43102-101-223 22K RES SIP

Z7-43102-101-223 22K RES SIP

Z6-43102-10-223 22K RES SIP

Z2 INTEL 8243 "I/O#2"

Z6 INTEL 8243 "I/O#1"

P3- ANSLEY 609-2627

SETPOINT I/O #2 TEMP

.1 .2 .4 .8 1 2 4 8 10 20 40 80 100 200 400 NEG GND

TEMP INTERROGATE REMOTE SETPOINT VALID (+5V) P3

P2- ANSLEY 609-2627

SETPOINT I/O #1 TEMP

.1 .2 .4 .8 1 2 4 8 10 20 40 80 100 200 400 NEG GND NULL TEMP INTERROGATE REMOTE SETPOINT VALID +5V P2

T1 PC 12-800 12.6V C.T. (800mA)

TB1 MAGNUM 1022-06

SOH SON SPARE PWR ON LED GND GND

VR1 CR1 IN4001 CR2 IN4001 CR4 IN4002

HEAT SINK A7805C R1 OUT COM

C1 800μF 16V C2 .33μF C3 .1μF C4 220μF 10V

⚠ FINISH (IF APPLICABLE)

⚠ MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
Information contained on this drawing is proprietary to JC Systems, Inc. and may not be copied, reproduced, nor parts made there from without written permission from JC Systems, Inc.

DASH QTY	NEXT ASSY	USED ON
APPLICATION		

SERIAL NO.	DATE EFF	DWG REV
EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ON DECIMALS .XX ± .05 .XXX ± .010 ANGLES ± 0° 30' HOLE TOLERANCES

MATERIAL ⚠ FINISH ⚠

ENGINEERING ACTIVITY

DESIGN	JC SYSTEMS INC
DRAFTED	" 19 JAN 1983
CHECKED	
APPROV	
RELEASE	

DO NOT SCALE DWG

JC SYSTEMS, INC.

TITLE: PRINTED CIRCUIT BD SCH- IEEE-488 4 DECADE BCD INTERFACE MODEL A1538/1038

SIZE	CODE IDENT		
D		1537/1037	B
SCALE N.A.		SHEET 1 OF 1	

REVISIONS			
ZONE LTR	DESCRIPTION	DATE	APPD
A	MOVED R1 (1/4") TOWARD BD EDGE. ADDED R2, R2, R3, R4 & R5 & PROTO CORRECTIONS	9-21-83	
B	INSTALL JUMPER "F" FOR 2732A PART NO.	1-24-84	

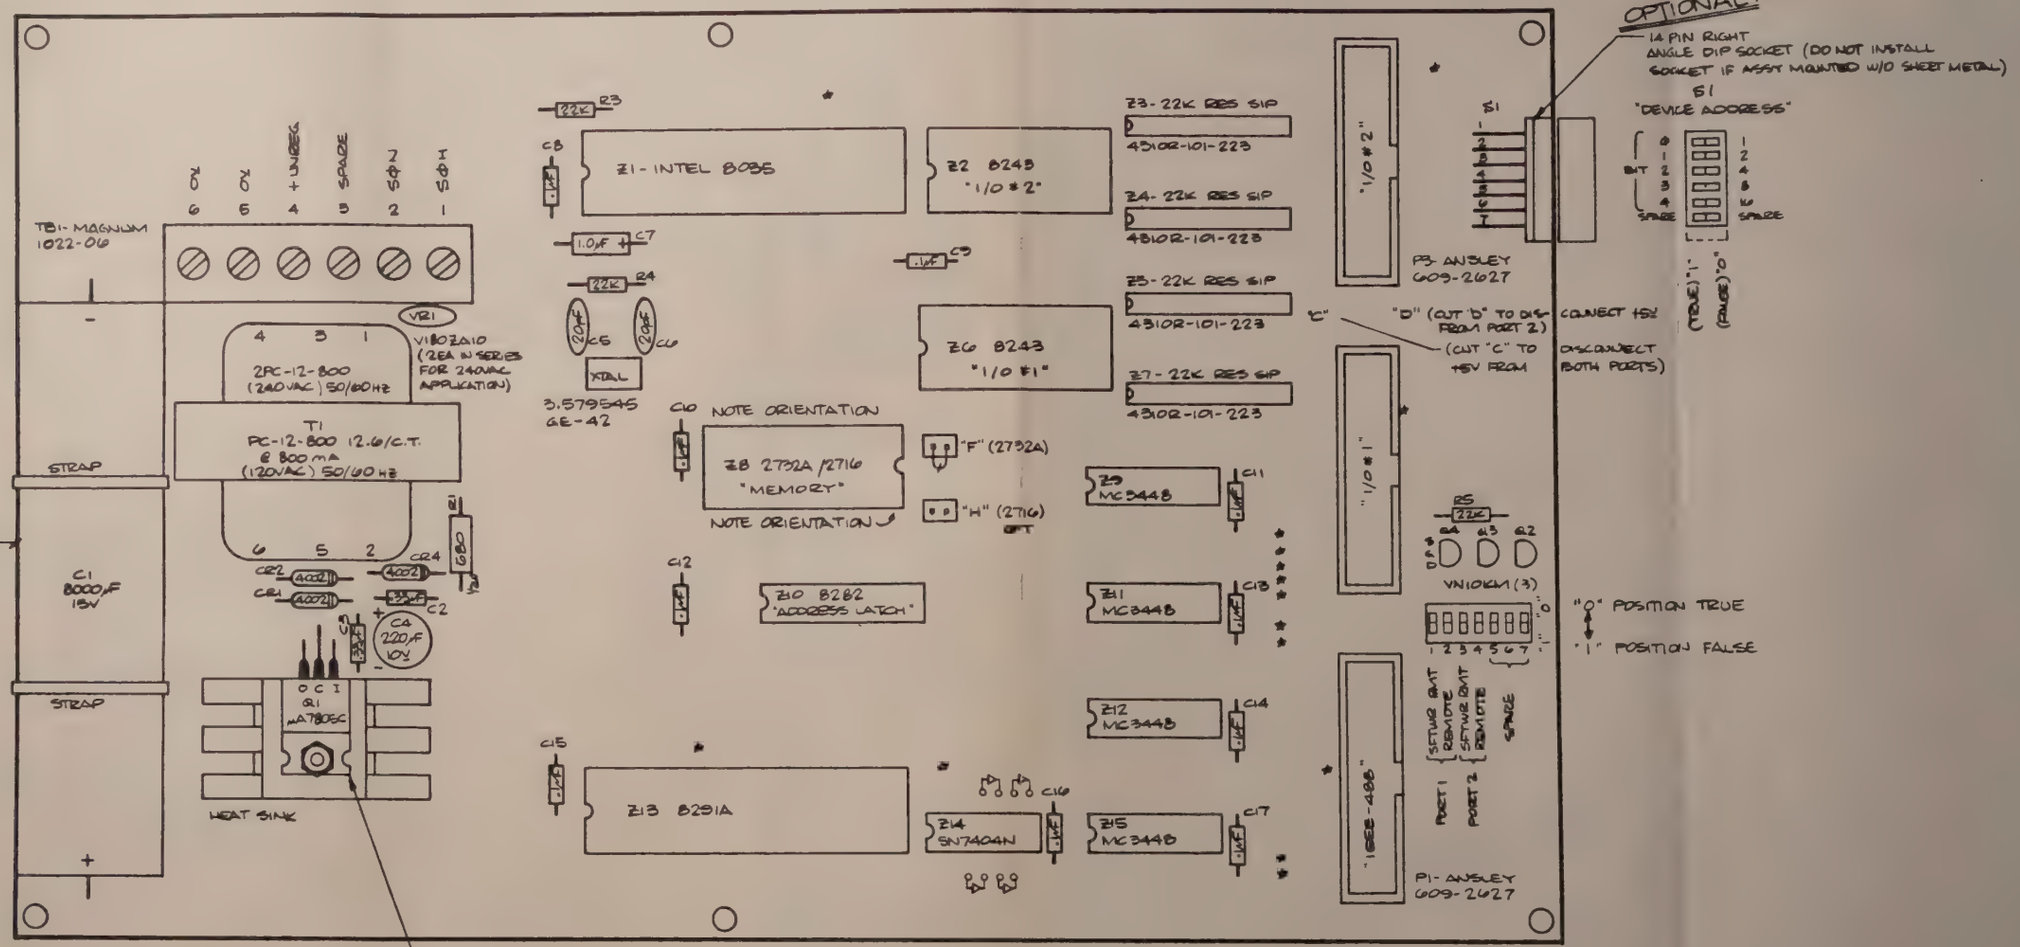

⚠3 INSTALL JUMPER 'E' FOR 8748 AND OMITT 8282 (Z10) & 2716/2732A (Z8).

⚠2 FINISH (IF APPLICABLE)

⚠1 MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
Information contained on this drawing is proprietary to JC Systems, Inc. and may not be copied, reproduced, nor parts made there from without written permission from JC Systems, Inc.

DASH	QTY	NEXT ASSY	USED ON	SERIAL NO.	DATE EFF	DWG REV
APPLICATION				EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES
TOLERANCES ON
DECIMALS .XX ± .03 .XXX ± .010
ANGLES 0° 30'
HOLE TOLERANCES
.013 THRU .250 +.004 −.001
.251 THRU .500 +.005 −.001
.250 THRU .500 +.005 −.001
.501 THRU .750 +.005 −.001

MATERIAL ⚠1
FINISH ⚠2

ENGINEERING ACTIVITY	
DESIGN	JC SYSTEMS INC
DRAFTED	26 JAN 1983
CHECKED	
APPROV	
RELEASE	
DO NOT SCALE DWG	

JC SYSTEMS, INC.

TITLE: PRINTED CIRCUIT BD ASSY- IEEE-488 & DECADE BCD INTERFACE MODEL A1538/1038

SIZE	CODE IDENT		
D		1538/1038	B

SCALE 2:1 SHEET 1 OF 1

ZONE	LTR	DESCRIPTION	DATE	APPD

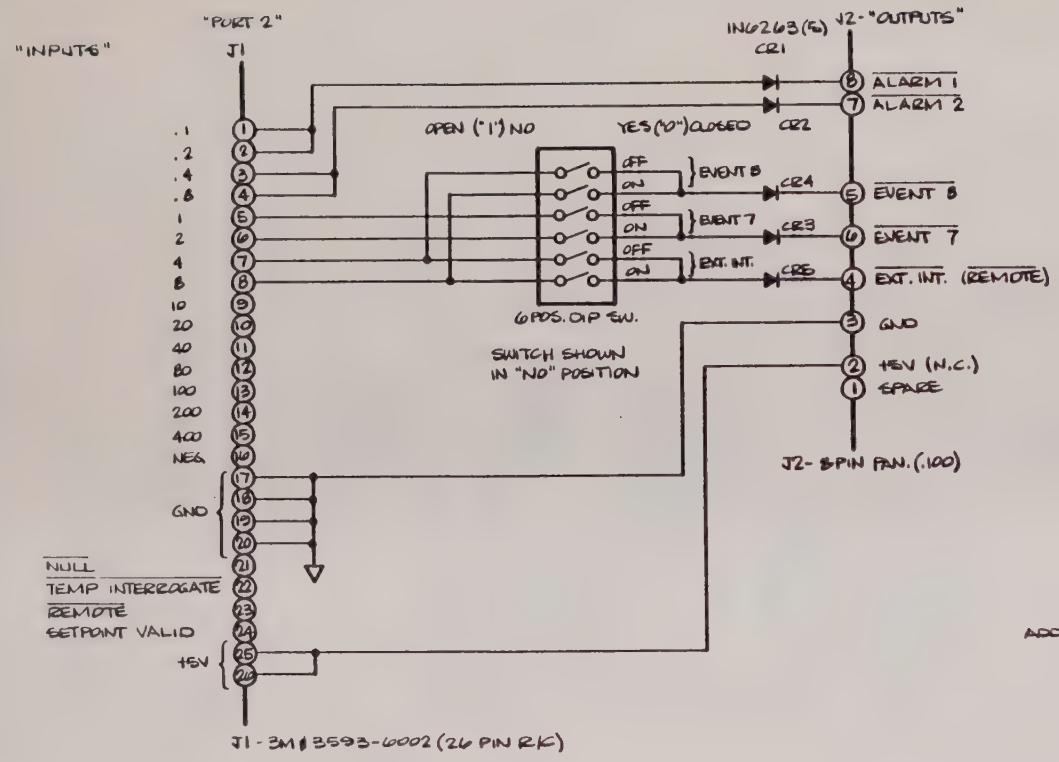

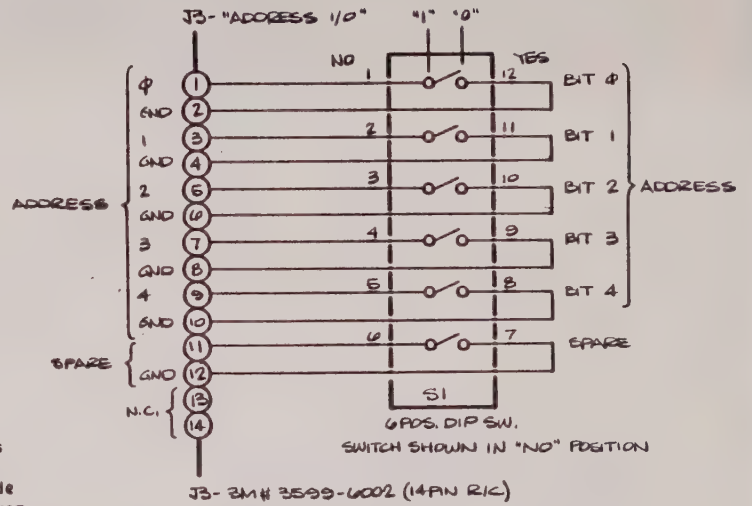

PROPRIETARY NOTICE
Information contained on this drawing is proprietary to JC Systems, Inc. and may not be copied, reproduced, nor parts made there from without written permission from JC Systems, Inc.

DASH	QTY	NEXT ASSY	USED ON	SERIAL NO.	DATE EFF	DWG REV
APPLICATION				EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES: DM
DECIMALS .XX ± .03 .XXX ± .010
ANGLES 0°30'
HOLE TOLERANCES
.013 THRU .135 +.004 -.001
.201 THRU .500 +.004 -.001
.136 THRU .500 +.006 -.001
.501 THRU .750 +.006 -.001
MATERIAL ⚠
FINISH ⚠
DO NOT SCALE DWG

ENGINEERING ACTIVITY	
DESIGN	JC SYSTEMS INC
DRAFTED	"
CHECKED	
APPROV	
RELEASE	

JC SYSTEMS, INC.

TITLE: PRINTED CIRCUIT BD. SCH- SRQ & DEVICE ADDRESS INTERFACE MODEL A184B

SIZE	CODE IDENT	
C		1847

SCALE N.A. SHEET 1 OF 1

⚠ FINISH (IF APPLICABLE)
⚠ MATL (IF APPLICABLE)
NOTES: UNLESS OTHERWISE SPECIFIED

REVISIONS				
ZONE	LTR	DESCRIPTION	DATE	APPD

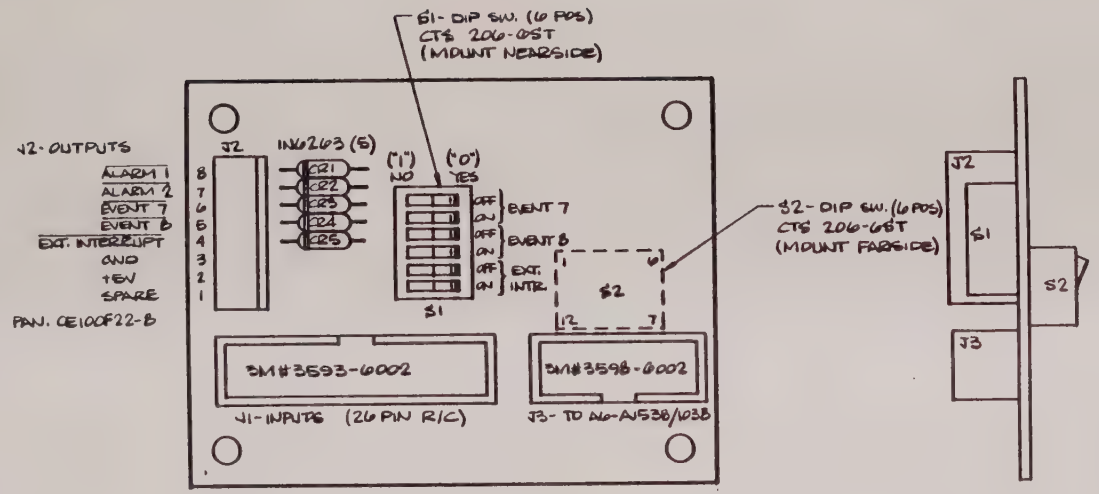

PROPRIETARY NOTICE
Information contained on this drawing is proprietary to JC Systems, Inc. and may not be copied, reproduced, nor parts made there from without written permission from JC Systems, Inc.

DASH	QTY	NEXT ASSY	USED ON	SERIAL NO.	DATE EFF	DWG REV
APPLICATION				EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES ON
DECIMALS: .XX ± .05, .XXX ± .010
ANGLES: 0°30'
HOLE TOLERANCES

MATERIAL ⚠
FINISH ⚠

ENGINEERING ACTIVITY		
DESIGN	JC SYSTEMS INC.	
DRAFTED	" 17 JULY 1985	
CHECKED		
APPROV		
RELEASE		
DO NOT SCALE DWG		

JC SYSTEMS, INC.

TITLE: PRINTED CIRCUIT BD. ASSY- GPIB & DEVICE ADDRESS INTERFACE MODEL A1848

SIZE	CODE IDENT	
C		1848

SCALE 2:1 SHEET 1 OF 1

⚠ FINISH (IF APPLICABLE)

⚠ MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

REVISIONS				
ZONE	LTR	DESCRIPTION	DATE	APPD
	A	J3A WAS 26 PIN; J7A WAS 4 PIN; REMOVED J2 & REWIRED CKT TO J8A	9-25-84	CR 27
	B	ADDED: Z3, Z4 & Z5; J2; CHANGED CKT FOR ISOLATED OUTPUTS	9-26-84	11

"SERIAL INTERFACE" J7A

SPARE

XMT

COM

RCV

(REAR PANEL) J7A

TO A1852/A1550-P7 - J7B

SPARE

RS232 OUT (RXD)

XMT

COM

RCV

RXD

(PANDUIT .100) J7B

TO A1669-P1 - J4

SPARE

GND

MSD

LSD

(14 PIN R/C HDR) - J4

Z3 H11N3

ISO+5V

R2 1K

CR16 IN4002

R1 470

ISOCOM

RS232C

J2-5

J2-1

S3A

RS422A

S3B

+5V

R3 1K

J2-6

J2-3

J2-4

J2-2

Z4 G.E. H11N3

R6 220

R7 220

"ON" "OFF"

(FACTORY SELECT JUMPERS 3,4 & 5 NORMALLY OMITTED)

J2-"REMOTE SELECT"

S3-1 N.C. S3A

S3-4 N.C. S3B

S3-2 N.O. S3A

S3-5 N.O. S3B

S3-3 W. S3A

S3-6 W. S3B

J2-PAN. (.100) 8 PIN

XMT TERMINATOR (PUSH ON, PULL OFF)

RCV TERMINATOR (PUSH ON, PULL OFF)

RCVR ON (WHEN JMPRD) RCVR GATED (NOT JMPRD)

Z1 26LS31

Z2 26LS33

R8 4.7K

R9 4.7K

R4 22K

R5 270

R10 100K

Z5 MCA230

R11 1K

"ON" "OFF"

BAUD RATE

300

600

1200

2400

4800

9600

19200

SPARE

C1 .33μF TANT

TO A1852/A1650-P3 - J3B

P1 1 2 3 4 5 6 7 8 P2 16 15 14 13 12 11 10 9

GND

+5V

XMT MODE

J3B

J3A - TO REAR PANEL "COMPUTER INTERFACE" (J4)

R12 100Ω ½W

CHASSIS GND

ISOCOM

RS422 XMT DATA

RS422 XMT DATA

RS422 RCV DATA

RS422 RCV DATA

ISOCOM

J3A - (40 PIN R/C HDR)

TB1

115VAC 50-60HZ

Ø A

CHAS GND

Ø N

EDI-SMN-01

T1 SIGNAL LP-6-1934

CR1 V180-ZA10

CR2 (OPT)

CR3 (OPT)

CR4

CR5

IN4002 (4)

C2 1000 16V

C3 .1μF

C4 .33μF TANT

7805

Q1

PAD

PAD

ISO+5V

ISOCOM

⚠ FINISH (IF APPLICABLE)

⚠ MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ON DECIMALS .XX ± .05 .XXX ± .010 ANGLES ± 0°30' HOLE TOLERANCES .001 TO .005 ± .005 .006 TO .010 ± .010 .011 TO .015 ± .015 .016 TO .020 ± .020

DASH QTY	NEXT ASSY	USED ON	SERIAL NO.	DATE EFF	DWG REV
APPLICATION			EFFECTIVITY		

MATERIAL ⚠ FINISH ⚠

ENGINEERING ACTIVITY

DESIGN	NC SYSTEMS INC
DRAFTED	" 22 JUNE 1984
CHECKED	10-1-85
APPROV	11-19-84
RELEASE	

DO NOT SCALE DWG

SYSTEMS, INC.

TITLE: PRINTED CIRCUIT BD. SCH- RS422A PROGRAMMER INTERFACE MODEL A1566

SIZE D | CODE IDENT | 15605 | B

SCALE N.A. | SHEET 1 OF 1

PROPRIETARY NOTICE
Information contained on this drawing is proprietary to JC Systems, Inc., and may not be copied, reproduced, nor parts made there from without written permission from JC Systems, Inc.

REVISIONS			
ZONE LTR	DESCRIPTION	DATE	APPD

– SEE SCH 15665 –

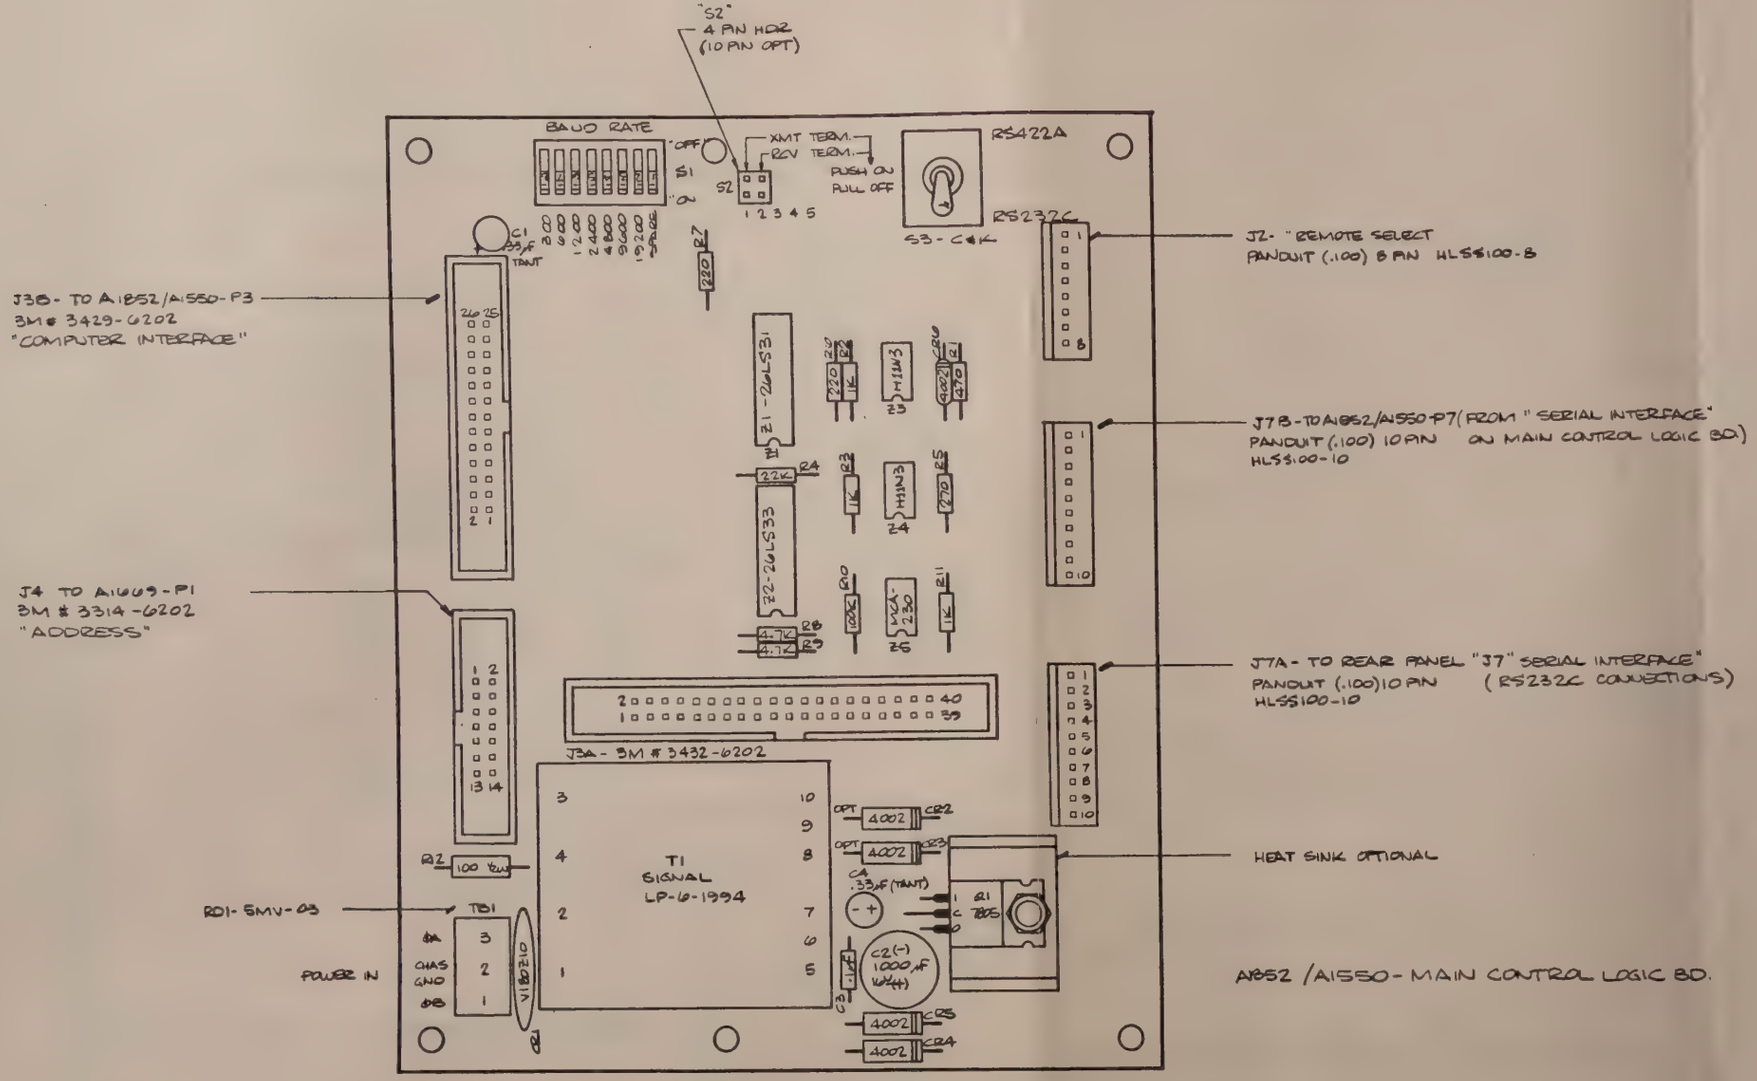

PROPRIETARY NOTICE
Information contained on this drawing is proprietary to JC Systems, Inc., and may not be copied, reproduced, nor parts made there from without written permission from JC Systems, Inc.

⚠ FINISH (IF APPLICABLE)

⚠ MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

DASH	QTY	NEXT ASSY	USED ON	SERIAL NO.	DATE EFF	DWG REV
APPLICATION				EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES ON
DECIMALS .XX ± .010 .XXX ± .005
ANGLES 0° 30'
HOLE TOLERANCES
.093 THRU .500 +.005 -.002
.501 THRU .750 +.010 -.005
.750 THRU .500 +.005 -.002
.501 THRU .750 +.010 -.005

MATERIAL ⚠
FINISH ⚠
DO NOT SCALE DWG

ENGINEERING ACTIVITY		
DESIGN	JC SYSTEMS INC	
DRAFTED	" 22 JUNE 1984	
CHECKED	[illegible] 10-11-84	
APPROV	[illegible] 11-19-84	
RELEASE		

JC SYSTEMS, INC.

TITLE: PRINTED CIRCUIT BD. ASSY- RS422A PROGRAMMER INTERFACE MODEL A1566

SIZE	CODE IDENT		
D		15666	B

SCALE 2:1 SHEET 1 OF 1

REVISIONS			
ZONE	LTR	DESCRIPTION	DATE	APPD

JC SYSTEMS INC. MODEL 520 WIRING DIAGRAM

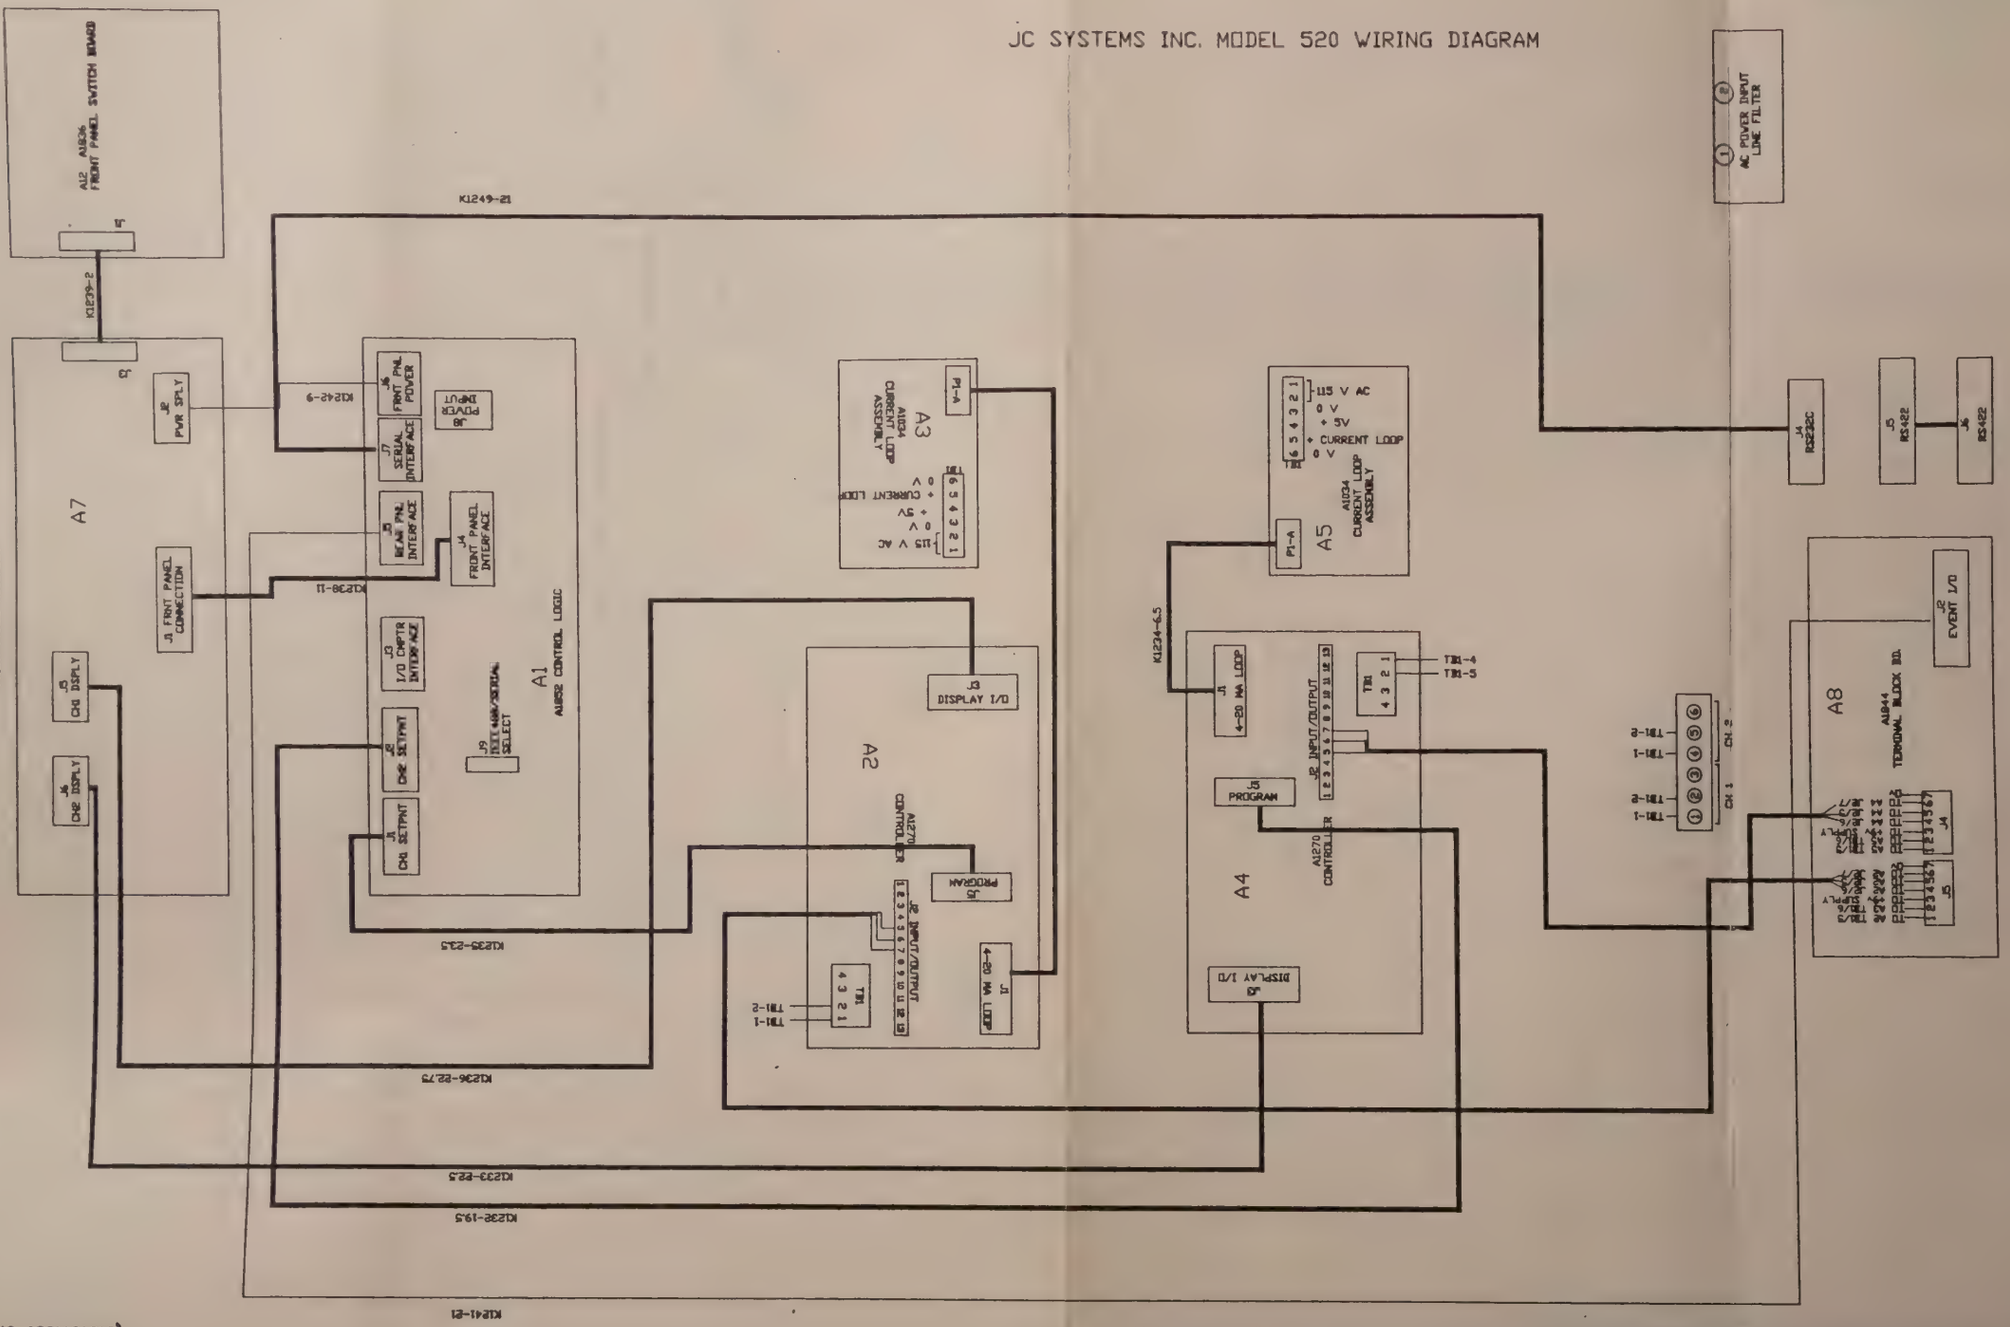

⚠ FINISH (IF APPLICABLE)

⚠ MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

DASH	QTY	NEXT ASSY	USED ON
APPLICATION			

SERIAL NO.	DATE EFF	DWG REV
EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES ON
DECIMALS: .XX ± .03, .XXX ± .010
ANGLES: 0°30'
HOLE TOLERANCES

MATERIAL ⚠

FINISH ⚠

ENGINEERING ACTIVITY	
DESIGN	
DRAFTED	
CHECKED	
APPROV	
RELEASE	
DO NOT SCALE DWG	

SYSTEMS, INC.

TITLE: MODEL 520 WIRING DIAGRAM

SIZE	CODE IDENT	
D		1932
SCALE		SHEET ___ OF ___

5200586

JC SYSTEMS INC. MODEL 520 W/IEEE OPTION WIRING DIAGRAM

REVISIONS			
ZONE	LTR	DESCRIPTION	DATE	APPD

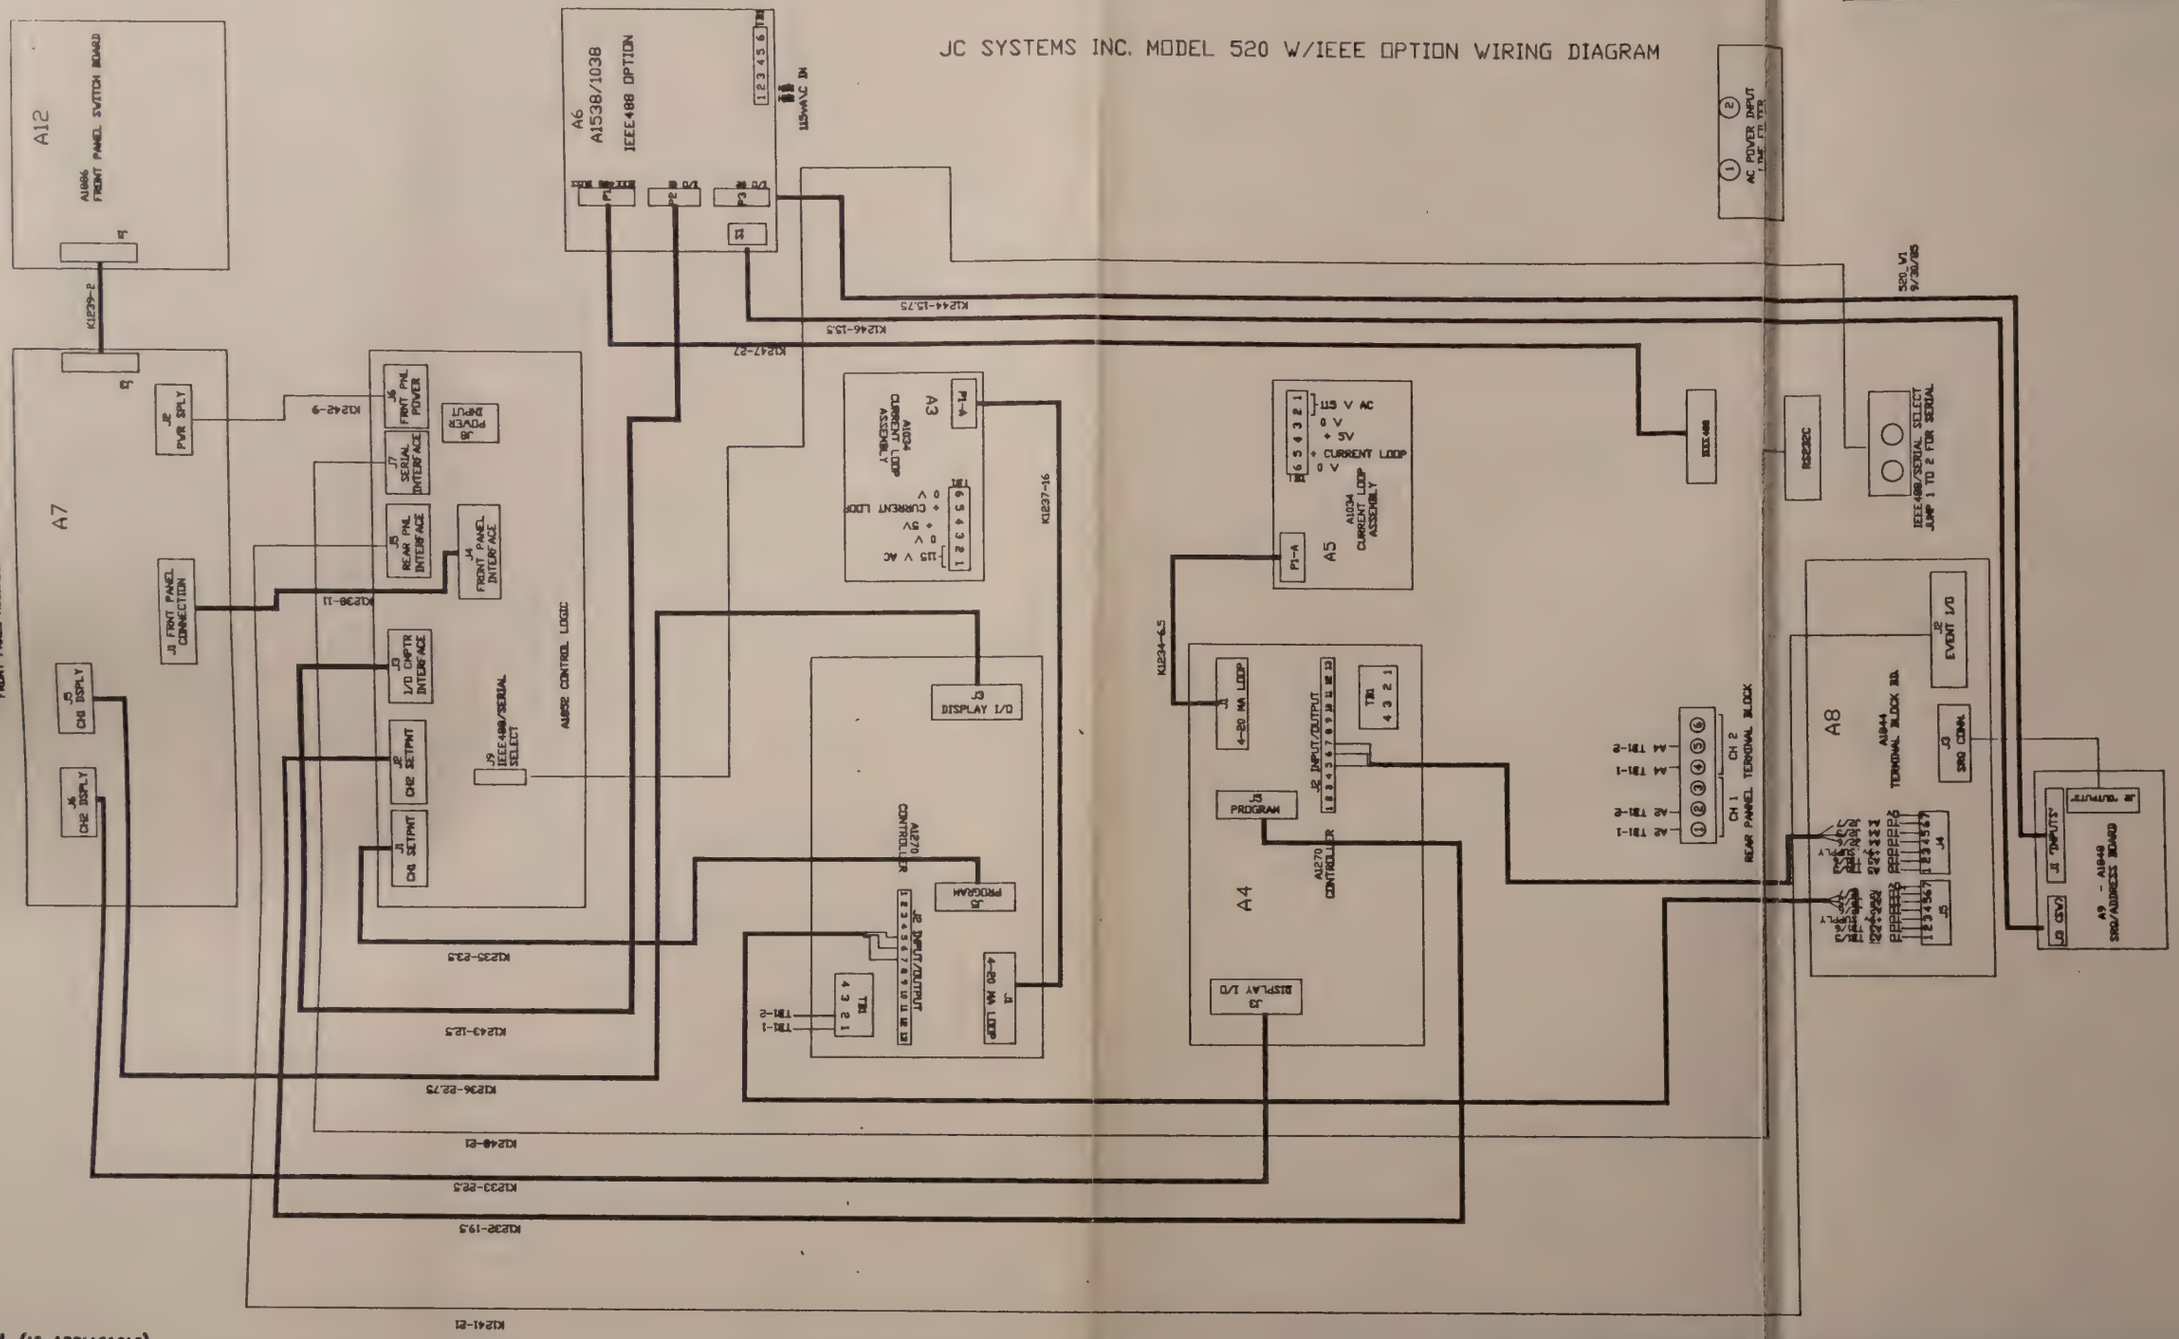

⚠ FINISH (IF APPLICABLE)

⚠ MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

DASH	QTY	NEXT ASSY	USED ON
APPLICATION			

SERIAL NO.	DATE EFF	DWG REV
EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES ON
DECIMALS: .XX ± .03, .XXX ± .010
ANGLES: 0°30'
HOLE TOLERANCES

MATERIAL ⚠
FINISH ⚠

ENGINEERING ACTIVITY	
DESIGN	
DRAFTED	
CHECKED	
APPROV	
RELEASE	
DO NOT SCALE DWG	

JC SYSTEMS, INC.

TITLE: MODEL 520 W/IEEE OPTION WIRING DIAGRAM

SIZE	CODE IDENT	
D		1931
SCALE		SHEET ___ OF ___

JC SYSTEMS INC. MODEL 520 W/422 WIRING DIAGRAM

REVISIONS			
ZONE	LTR	DESCRIPTION	DATE	APPD

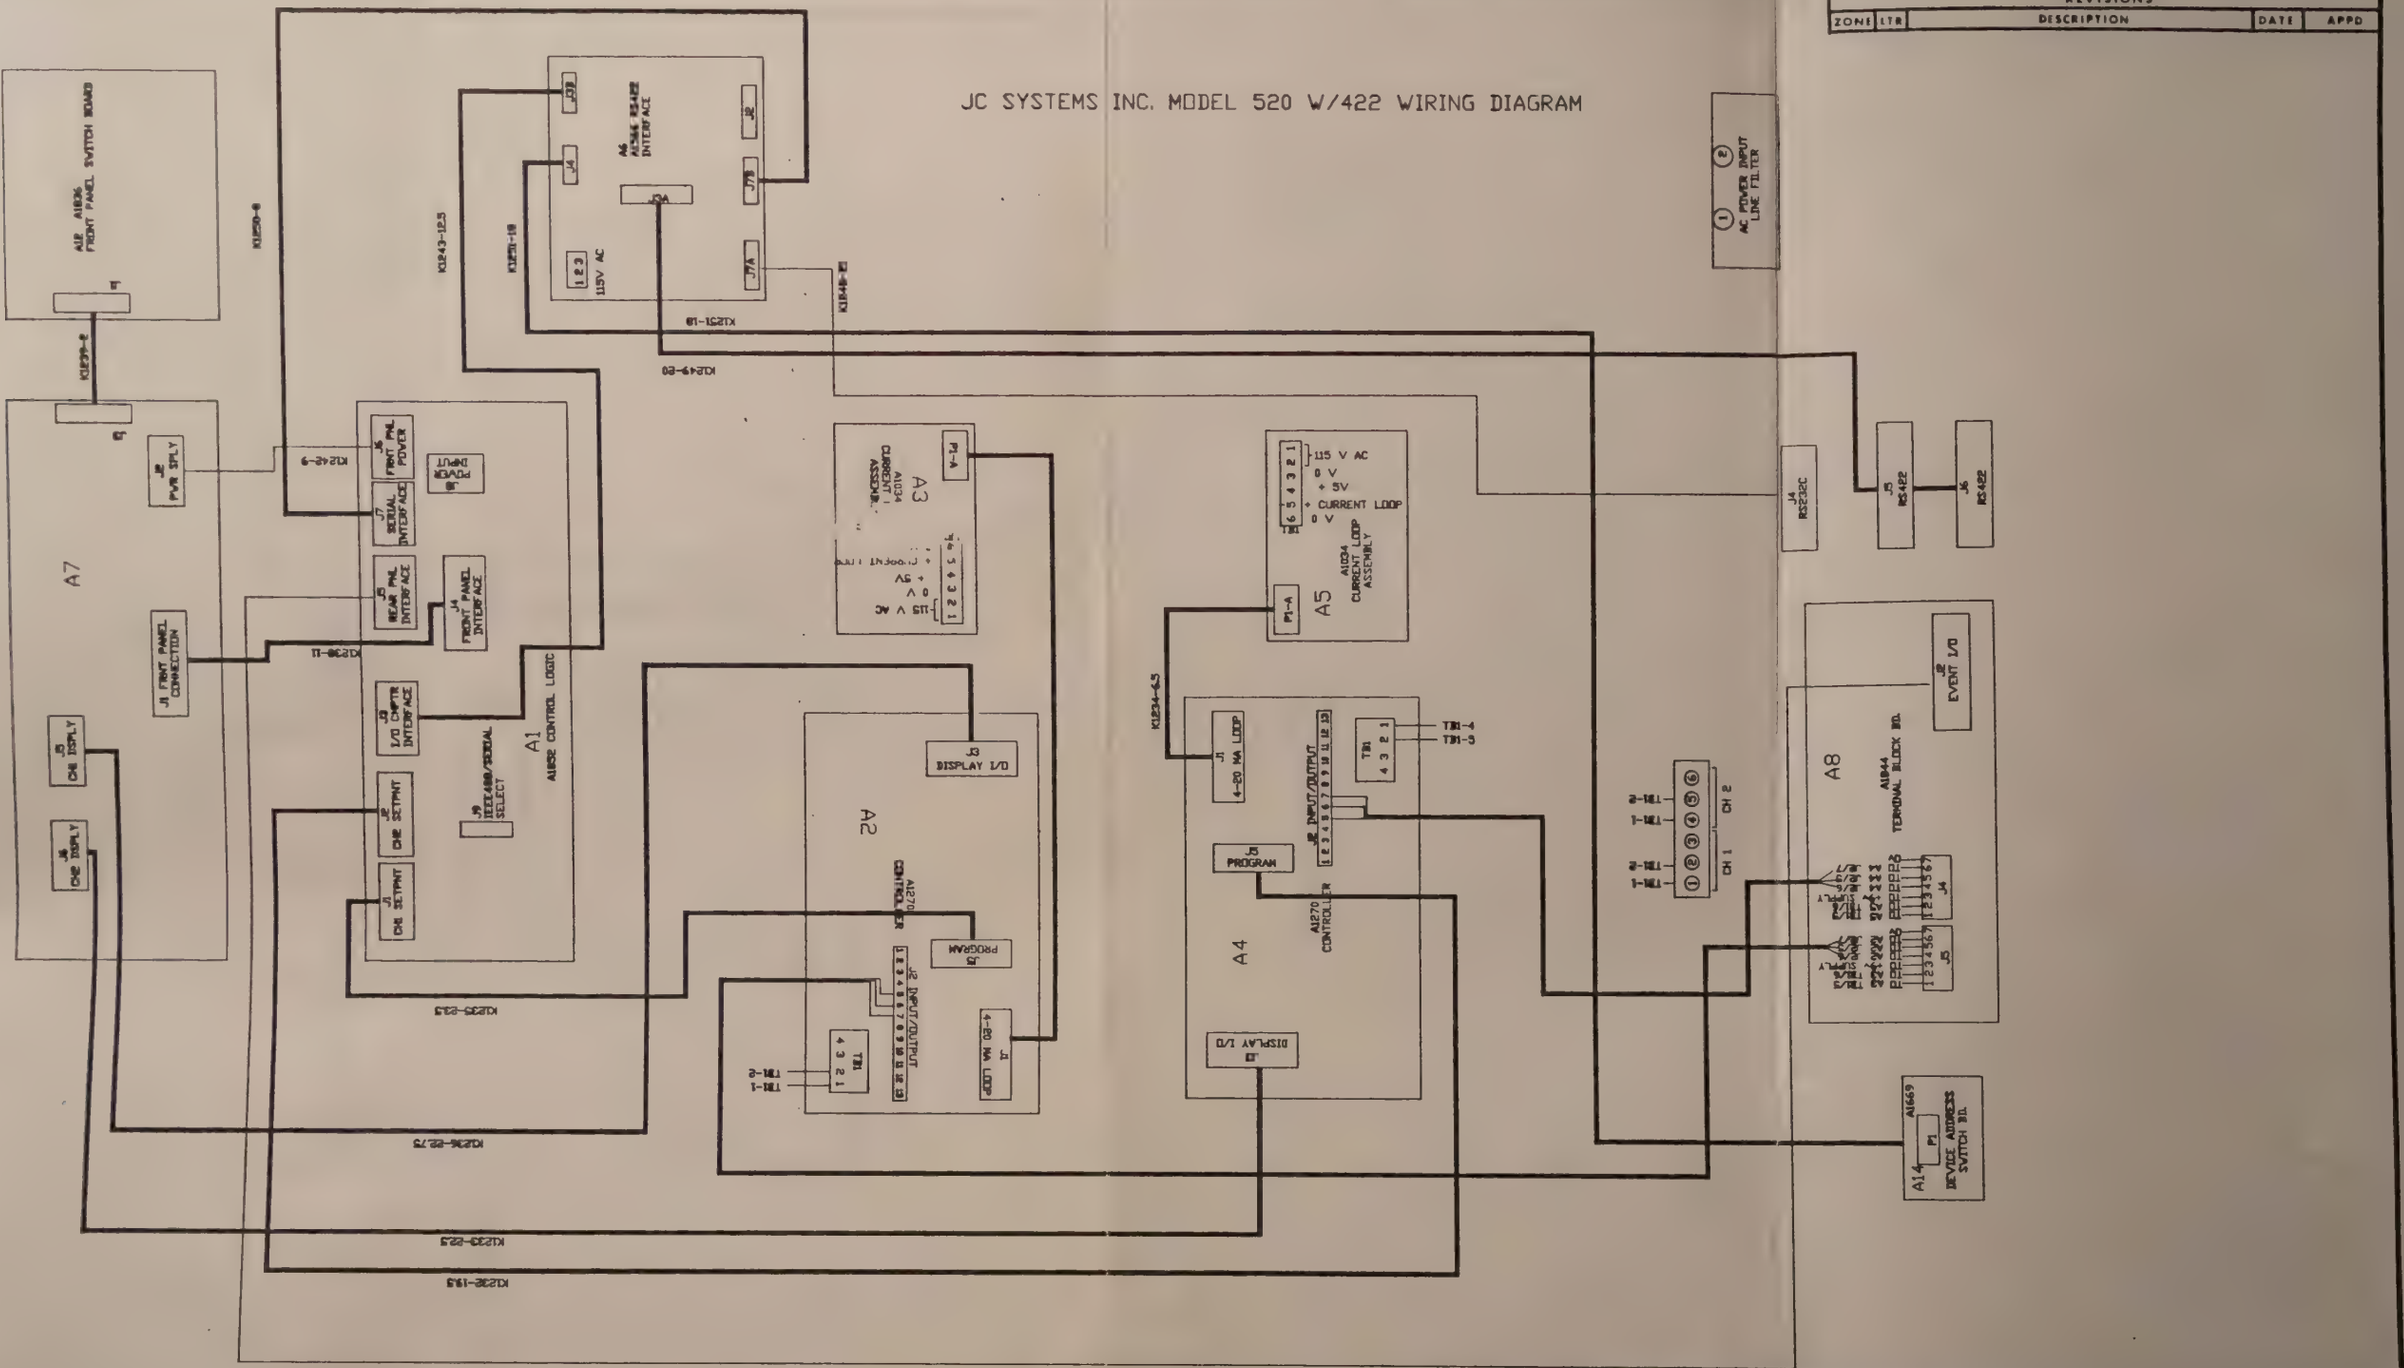

⚠ FINISH (IF APPLICABLE)

⚠ MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

DASH	QTY	NEXT ASSY	USED ON	SERIAL NO.	DATE EFF	DWG REV
APPLICATION				EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES ON
DECIMALS: .XX ± .03, .XXX ± .010
ANGLES: 0° 30'
MOLY TOLERANCES

MATERIAL ⚠
FINISH ⚠

ENGINEERING ACTIVITY

DESIGN	
DRAFTED	
CHECKED	
APPROV	
RELEASE	
DO NOT SCALE DWG	

JC SYSTEMS, INC.

TITLE: MODEL 520W/RS422A WIRING DIAGRAM

SIZE D | CODE IDENT | 1930

SCALE | SHEET ___ OF ___

5200586

REVISIONS			
ZONE LTR	DESCRIPTION	DATE	APPD

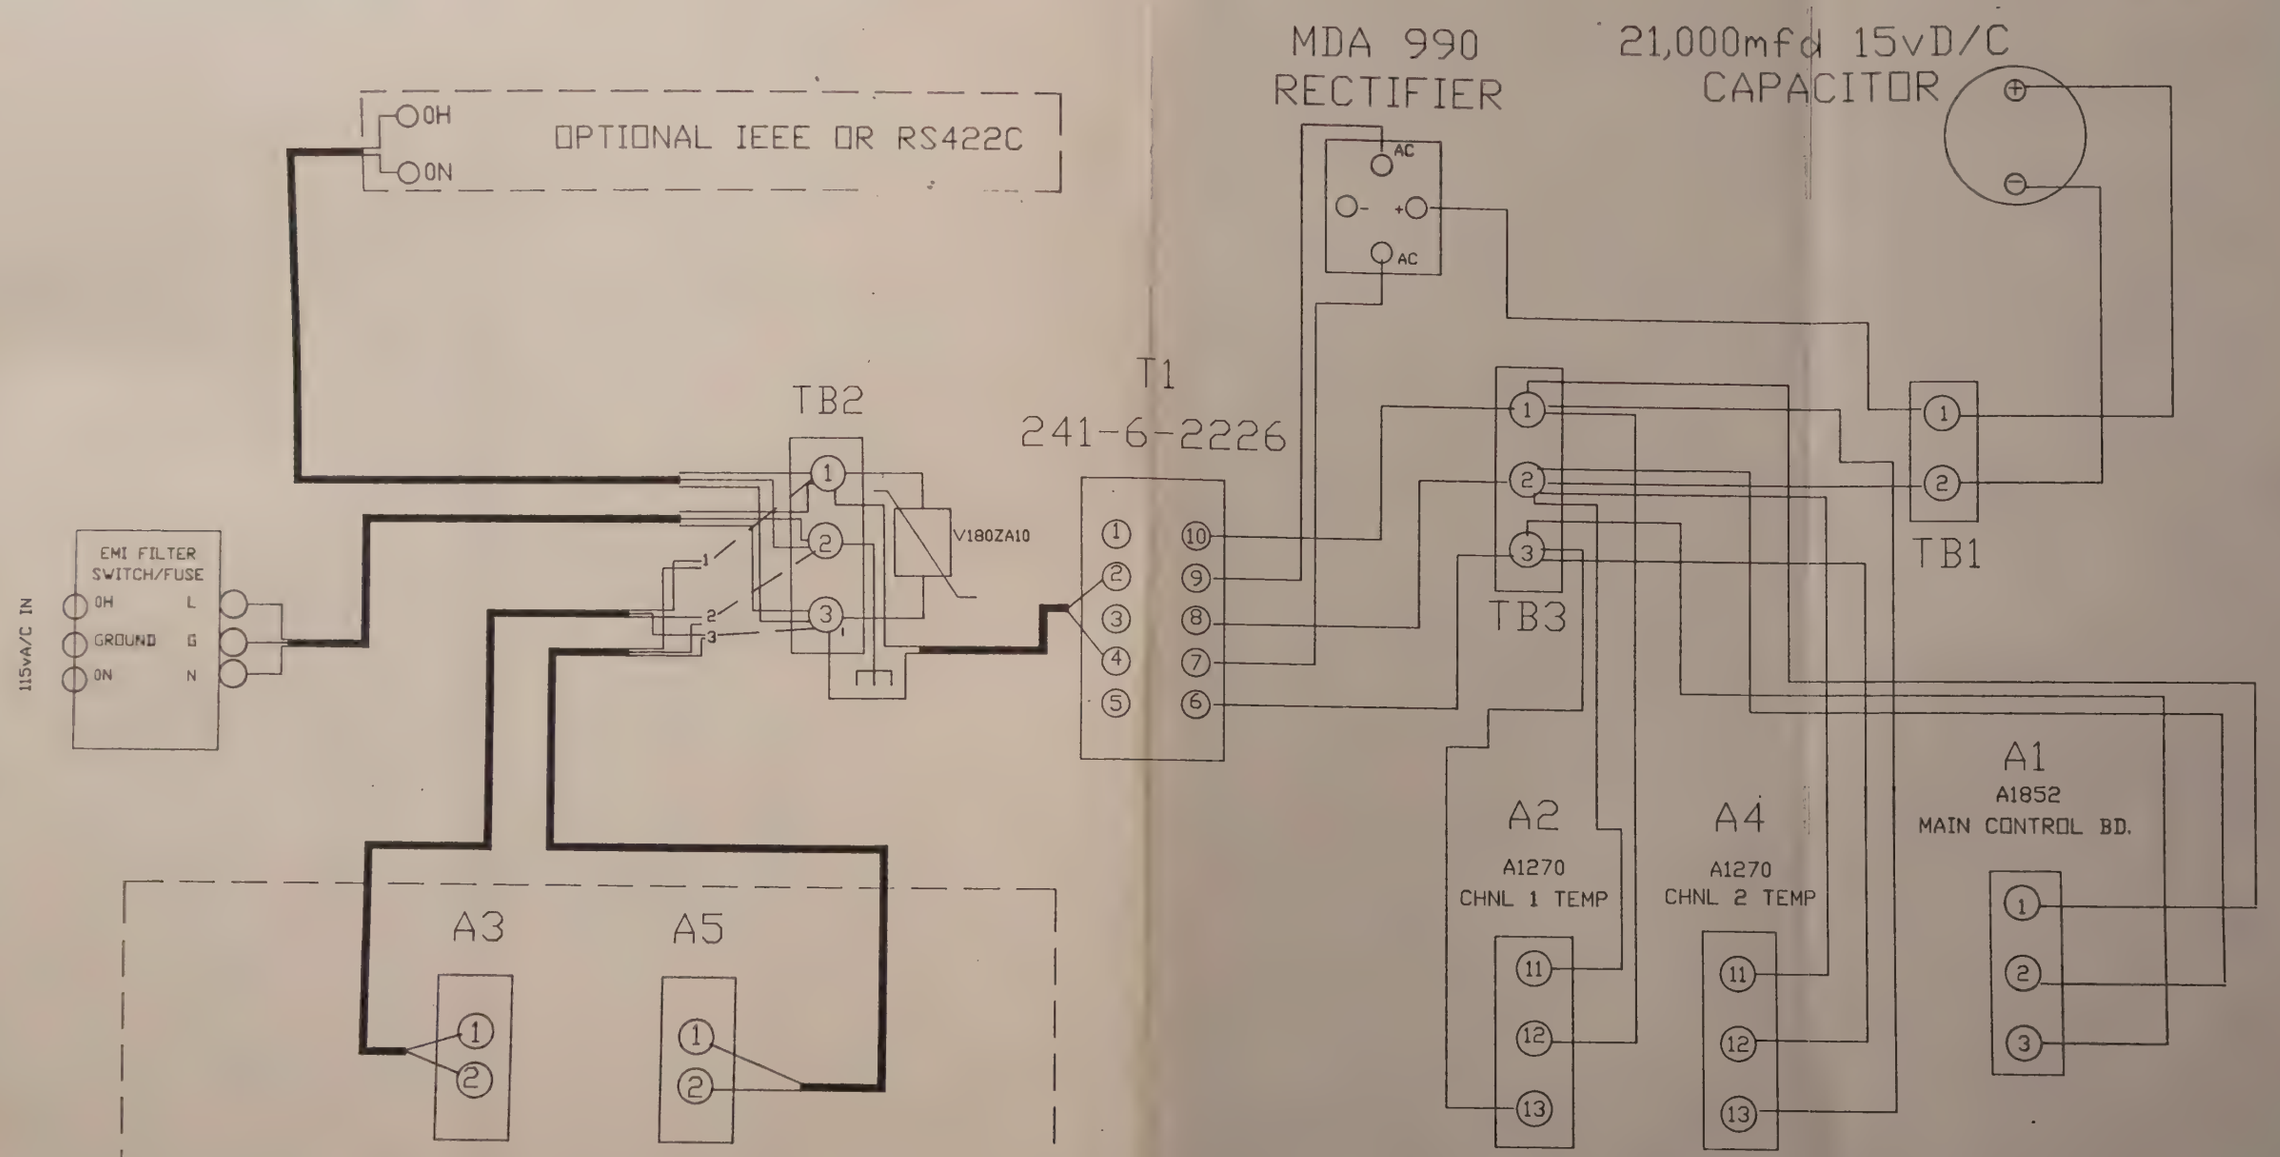

⚠ FINISH (IF APPLICABLE)

⚠ MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

DASH	QTY	NEXT ASSY	USED ON
APPLICATION			

SERIAL NO.	DATE EFF	DWG REV
EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES ON
DECIMALS: .XX ± .03, .XXX ± .010
ANGLES: 0° 30'
HOLE TOLERANCES

MATERIAL ⚠

FINISH ⚠

ENGINEERING ACTIVITY	
DESIGN	
DRAFTED	
CHECKED	
APPROV	
RELEASE	
DO NOT SCALE DWG	

SYSTEMS, INC.

TITLE: MODEL 520 A/C WIRING DIAGRAM

SIZE	CODE IDENT	
D		1933
SCALE		SHEET ___ OF ___

5200586

JC SYSTEMS INC.MODEL 510 WIRING DIAGRAM

REVISIONS			
ZONE	LTR	DESCRIPTION	DATE	APPD

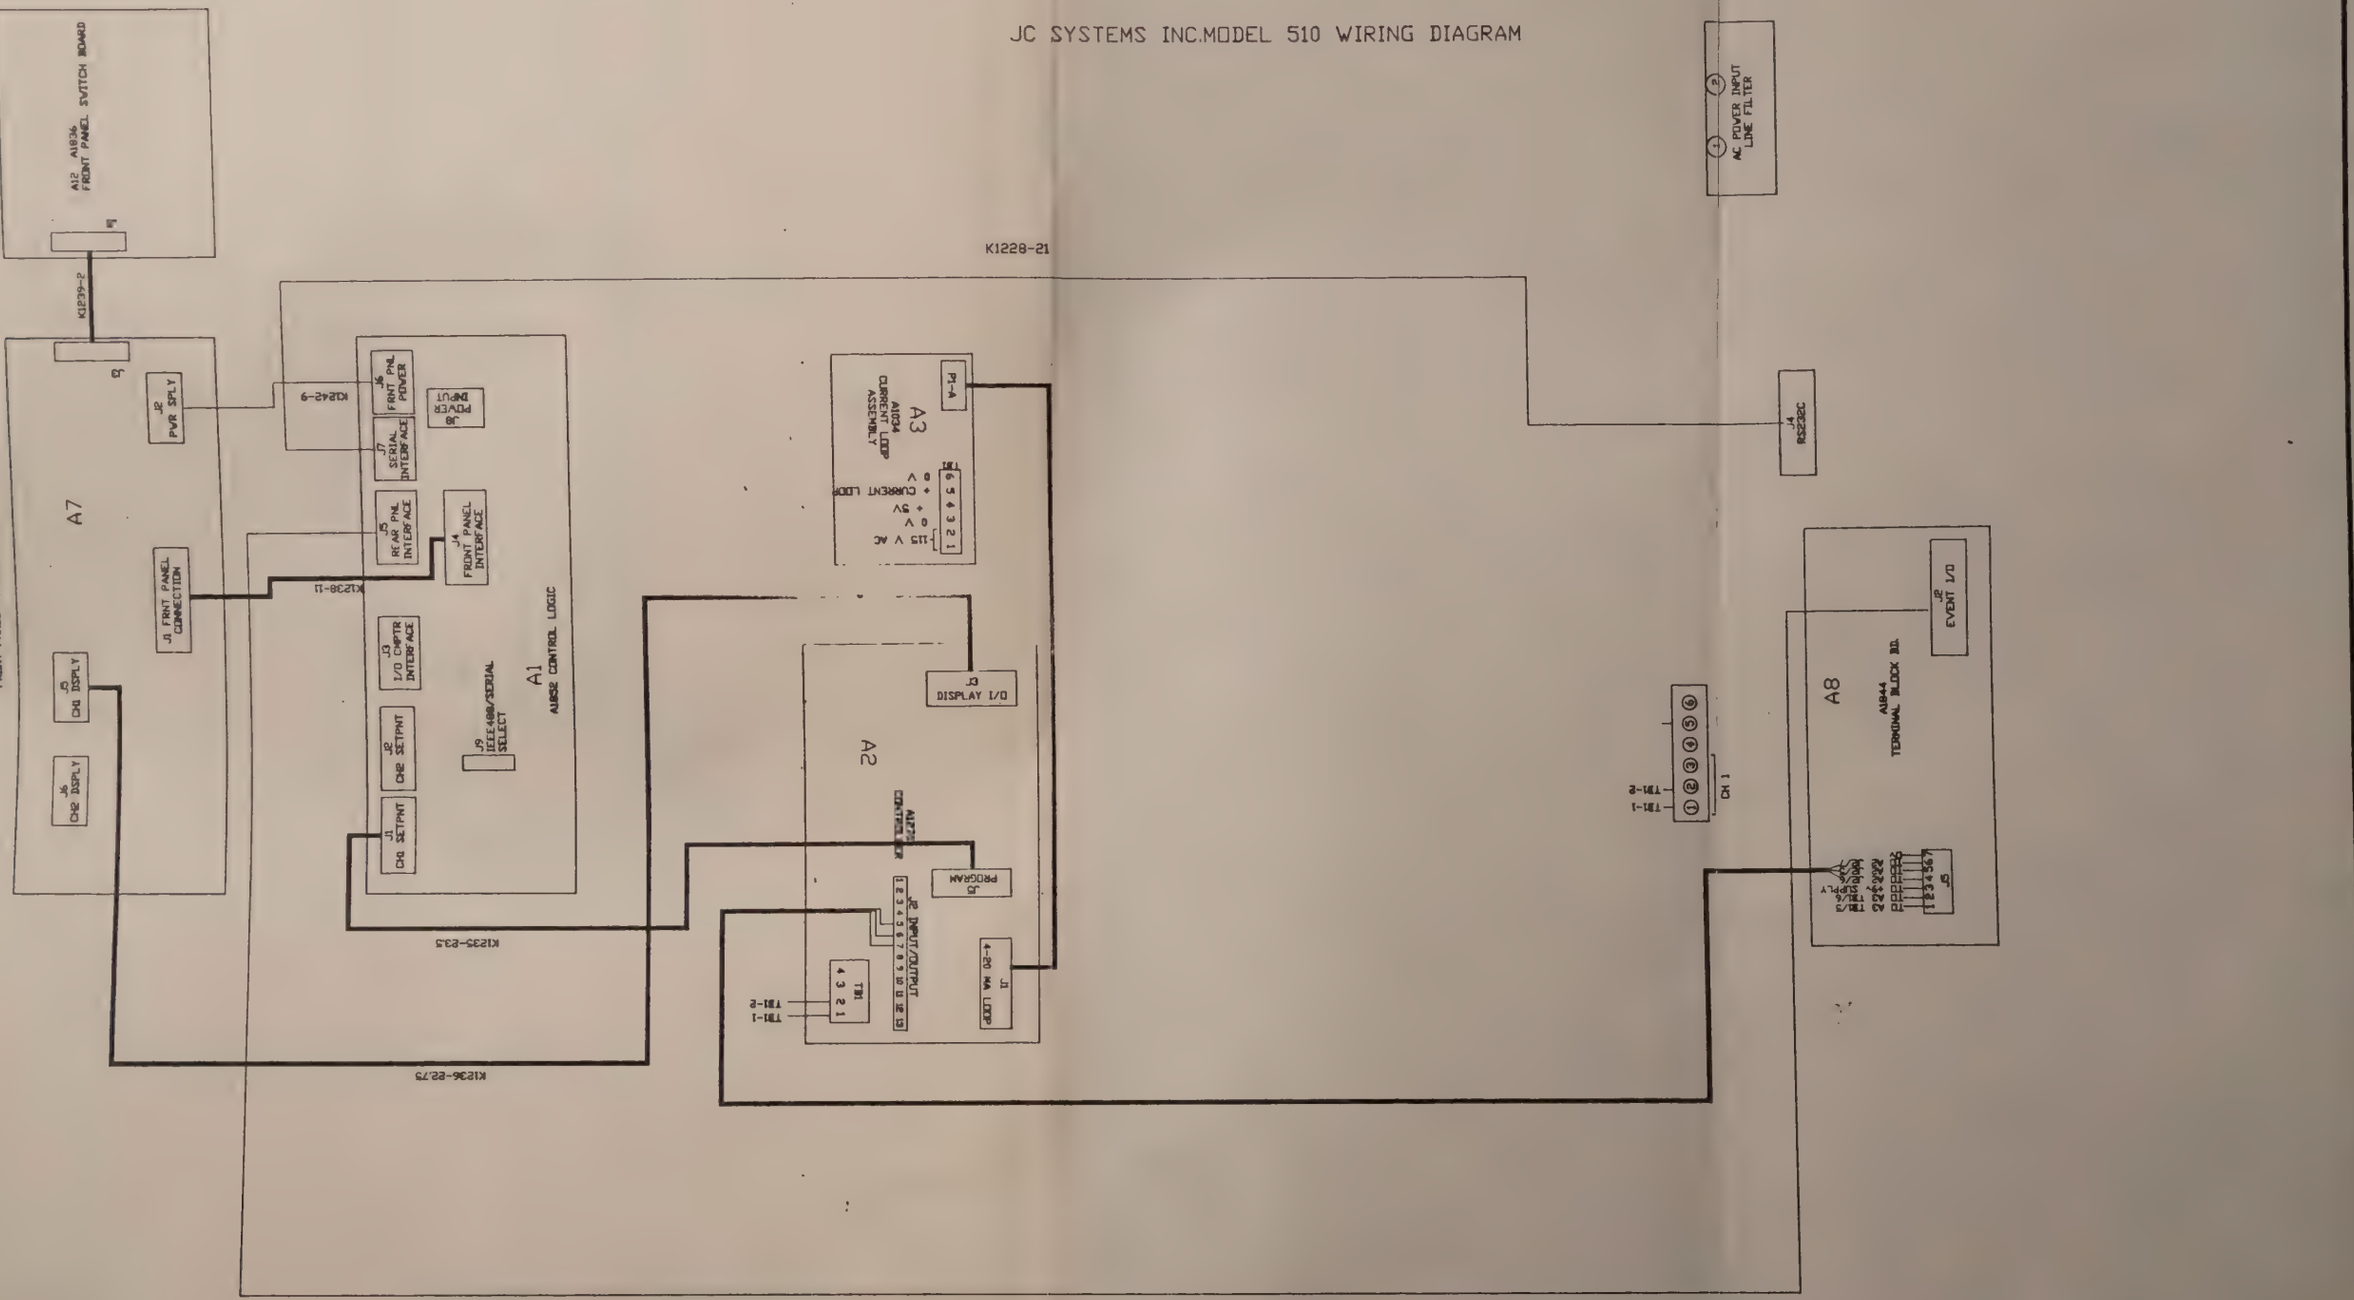

⚠ FINISH (IF APPLICABLE)

⚠ MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

DASH	QTY	NEXT ASSY	USED ON	SERIAL NO.	DATE EFF	DWG REV
APPLICATION				EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES ON
DECIMALS: .XX ± .05; .XXX ± .010
ANGLES: 0° 30'
HOLE TOLERANCES

MATERIAL ⚠
FINISH ⚠

ENGINEERING ACTIVITY

DESIGN	
DRAFTED	
CHECKED	
APPROV	
RELEASE	

DO NOT SCALE DWG

SYSTEMS, INC.

TITLE: MODEL 510 WIRING DIAGRAM

SIZE	CODE IDENT	
D		1936
SCALE		SHEET ___ OF ___

JC SYSTEMS INC. MODEL 510 W/ IEEE WIRING DIAGRAM

REVISIONS				
ZONE	LTR	DESCRIPTION	DATE	APPD

FRONT PANEL ASSEMBLY

A12 A1886 FRONT PANEL SWITCH BOARD

A7

A6 A1538/1038 IEEE488 OPTION

115VAC IN

AC POWER INPUT LINE FILTER

A3 A1034 CURRENT LOOP ASSEMBLY

A8 A1944 TERMINAL BLOCK BD.

A9 - A1940 SBC/ADDRESS BOARD

AUSB CONTROL LOGIC

A4578 CONTROLLER

IEEE488

RS232C

IEEE488/SERIAL SELECT JUMP 1 TO 2 FOR SERIAL

REAR PANEL TERMINAL BLOCK

K1239-2 · K1244-15,75 · K1246-15,5 · K1247-27 · K1242-9 · K1238-11 · K1237-16 · K1235-63,5 · K1243-12,5 · K1236-22,75 · K1248-21 · K1241-21

⚠ FINISH (IF APPLICABLE)

⚠ MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

DASH	QTY	NEXT ASSY	USED ON	SERIAL NO.	DATE EFF	DWG REV
APPLICATION				EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ON: DECIMALS .XX ± .03, .XXX ± .010; ANGLES ± 0°30'; HOLE TOLERANCES

MATERIAL ⚠

FINISH ⚠

ENGINEERING ACTIVITY	
DESIGN	
DRAFTED	
CHECKED	
APPROV	
RELEASE	
DO NOT SCALE DWG	

JC SYSTEMS, INC.

TITLE: MODEL 510 W/IEEE WIRING DIAGRAM

SIZE D · CODE IDENT · 1935 · SCALE · SHEET ___ OF ___

JC SYSTEMS INC MODEL 510 W/422 WIRING DIAGRAM

REVISIONS				
ZONE	LTR	DESCRIPTION	DATE	APPD

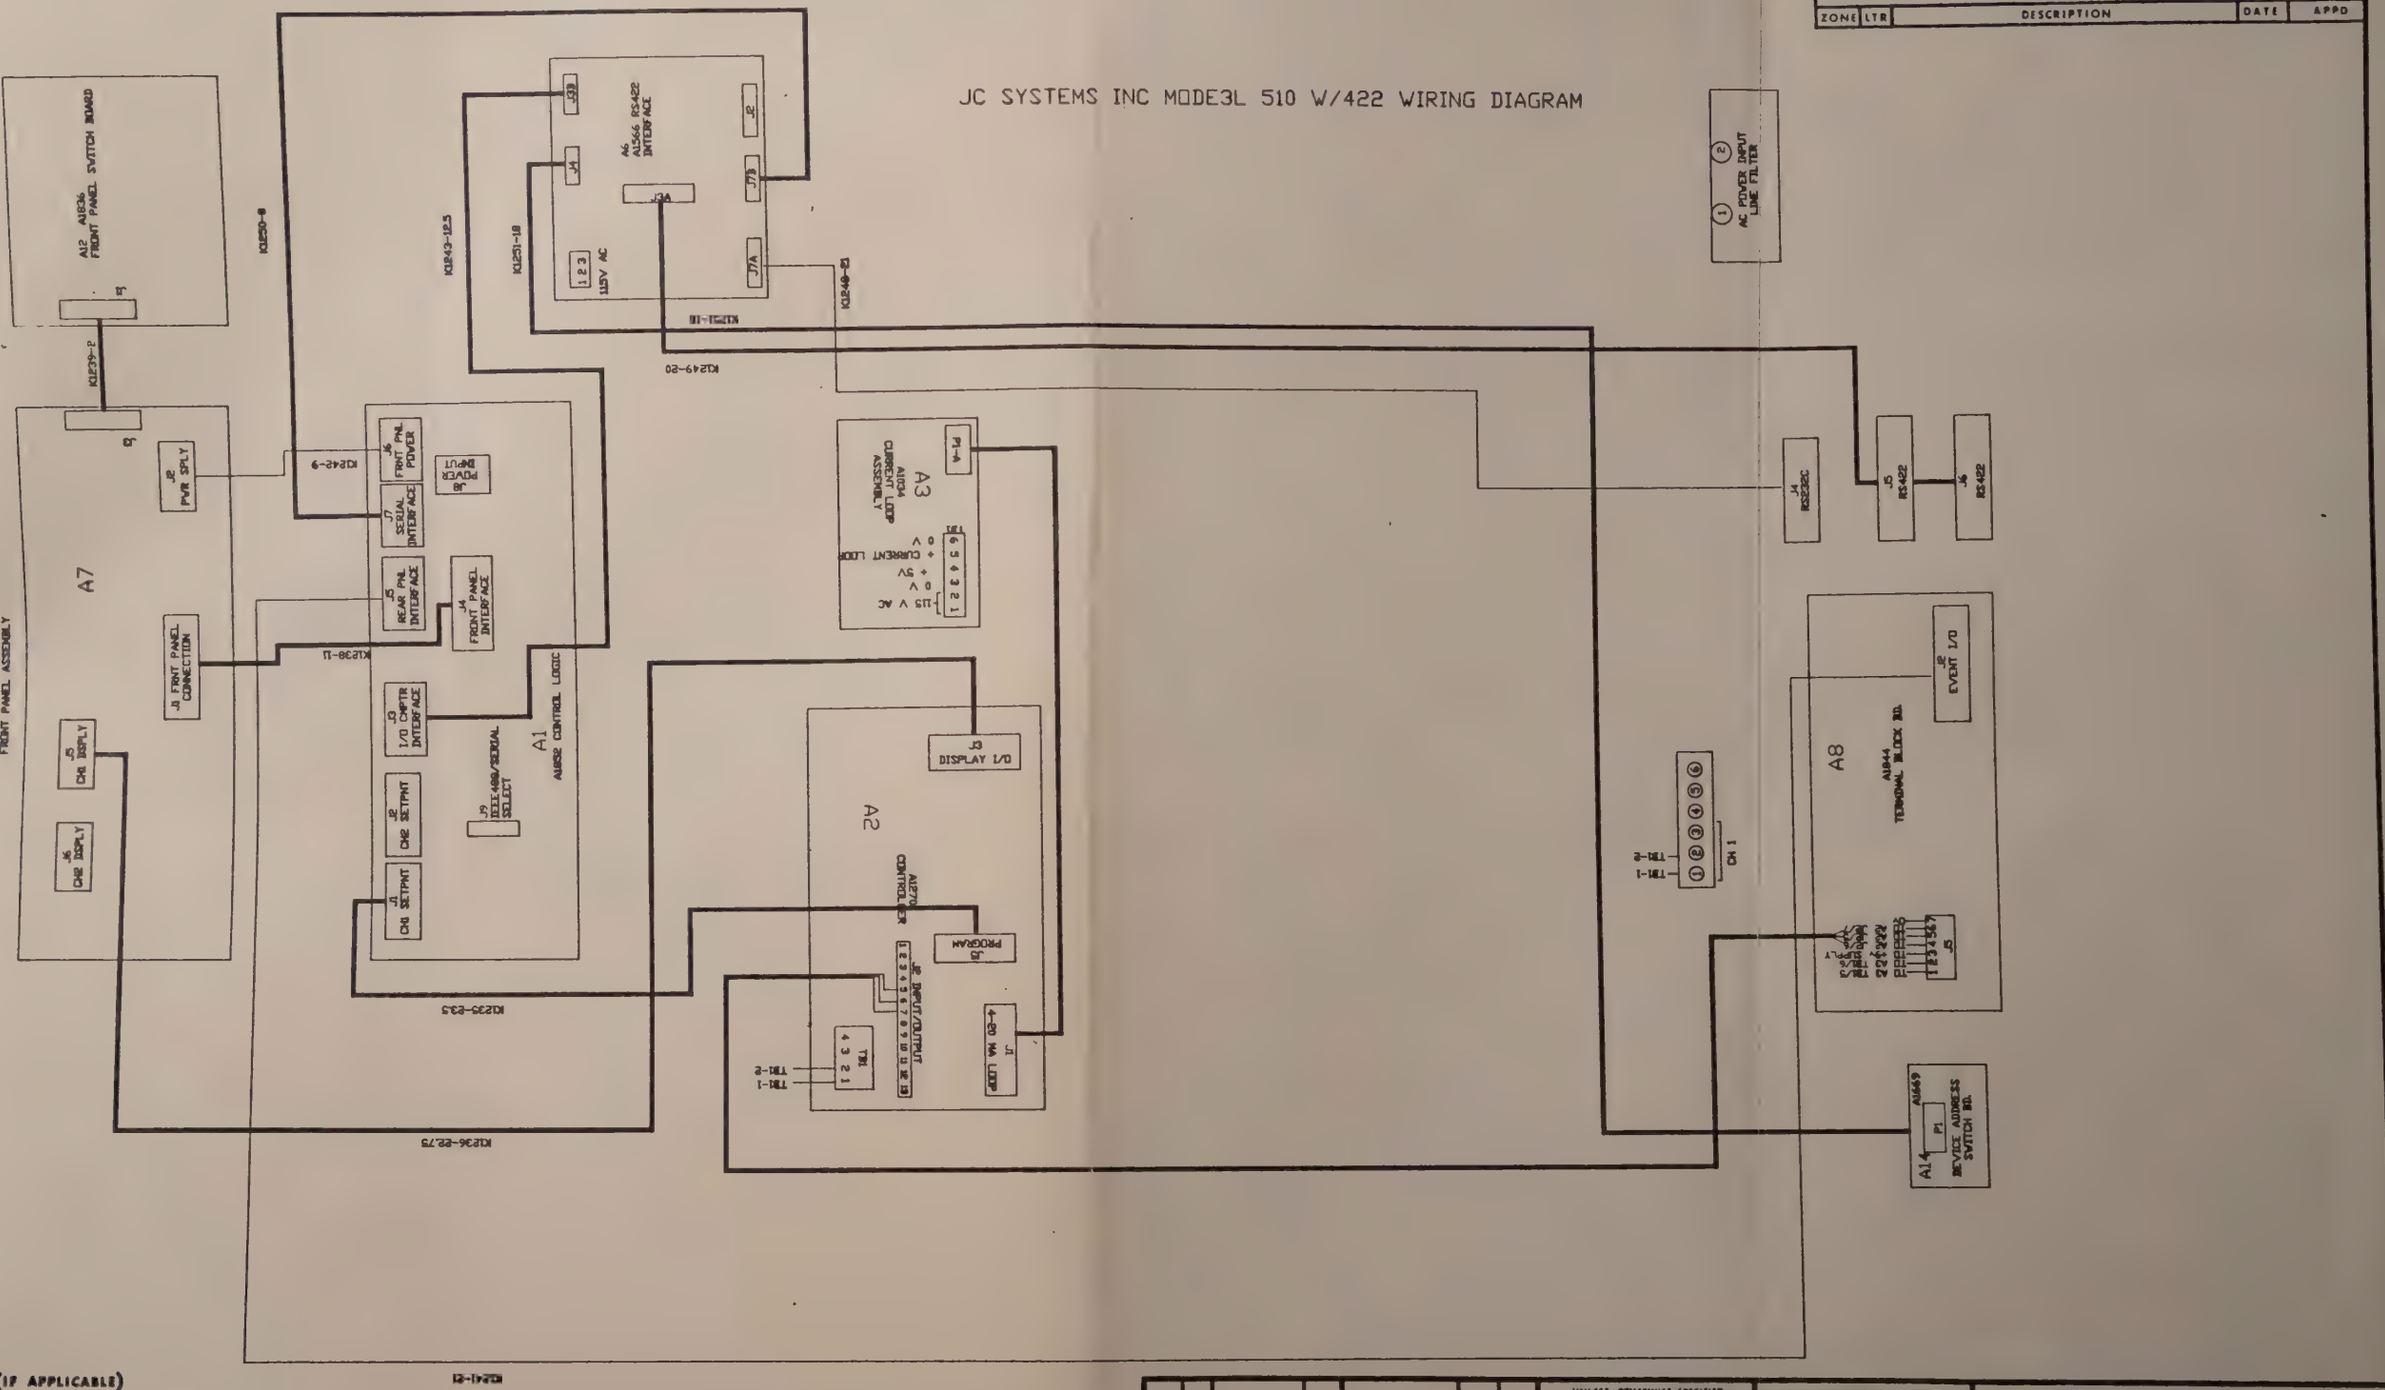

⚠ FINISH (IF APPLICABLE)

⚠ MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

DASH	QTY	NEXT ASSY	USED ON
		APPLICATION	

SERIAL NO.	DATE EFF	DWG REV
EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES ON
DECIMALS: .XX ± .03, .XXX ± .010
ANGLES: 0°30'
HOLE TOLERANCES

MATERIAL ⚠

FINISH ⚠

DO NOT SCALE DWG

ENGINEERING ACTIVITY	
DESIGN	
DRAFTED	
CHECKED	
APPROV	
RELEASE	

SYSTEMS, INC.

TITLE: MODEL 510 W/RS422 WIRING DIAGRAM

SIZE	CODE IDENT	
D		1934
SCALE		SHEET ___ OF ___

REVISIONS				
ZONE	LTR	DESCRIPTION	DATE	APPD

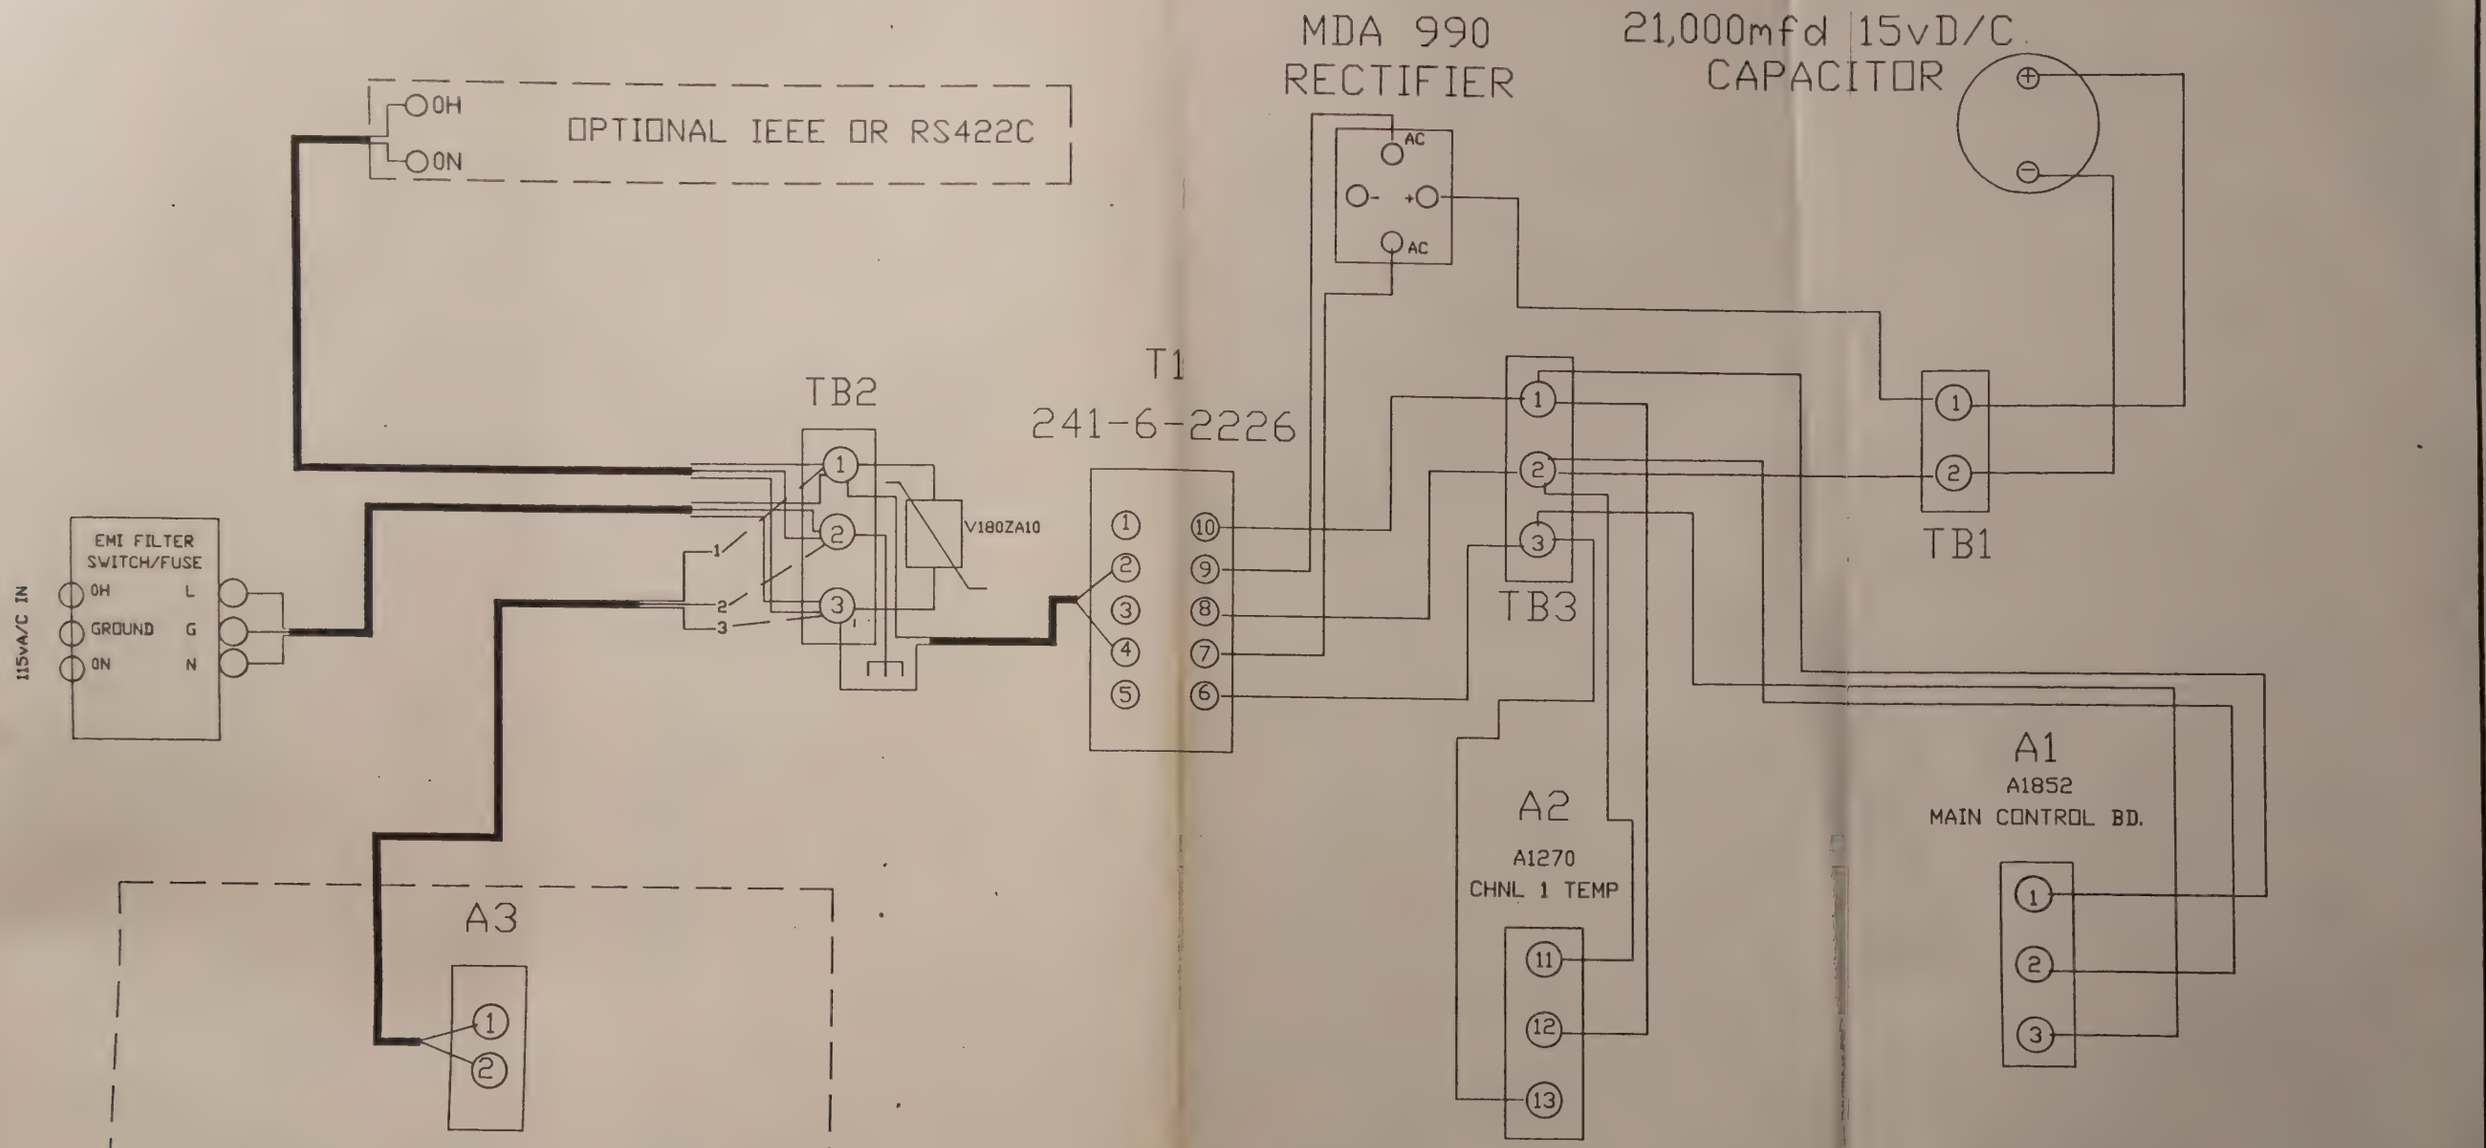

⚠ FINISH (IF APPLICABLE)

⚠ MATL (IF APPLICABLE)

NOTES: UNLESS OTHERWISE SPECIFIED

DASH	QTY	NEXT ASSY	USED ON
APPLICATION			

SERIAL NO.	DATE EFF	DWG REV
EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES ON
DECIMALS: .XX ± .03; .XXX ± .010
ANGLES: 0° 30'

HOLE TOLERANCES

MATERIAL ⚠

FINISH ⚠

ENGINEERING ACTIVITY	
DESIGN	
DRAFTED	
CHECKED	
APPROV	
RELEASE	

DO NOT SCALE DWG

SYSTEMS, INC.

TITLE: MODEL 610 A/C WIRING DIAGRAM

SIZE	CODE IDENT	
D		1937

SCALE

SHEET ___ OF ___

REVISIONS				
ZONE	LTR	DESCRIPTION	DATE	APPD

UTILIZATION OF THE JCS MODEL 1740 Ⓐ PERMITS THE USER TO BOTH CONTROL AND MONITOR UP TO 99 DIFFERENT DEVICES SIMULTANEOUSLY FROM ONE CENTRAL COMPUTER WITH A RS232C TYPE SERIAL INTERFACE PORT

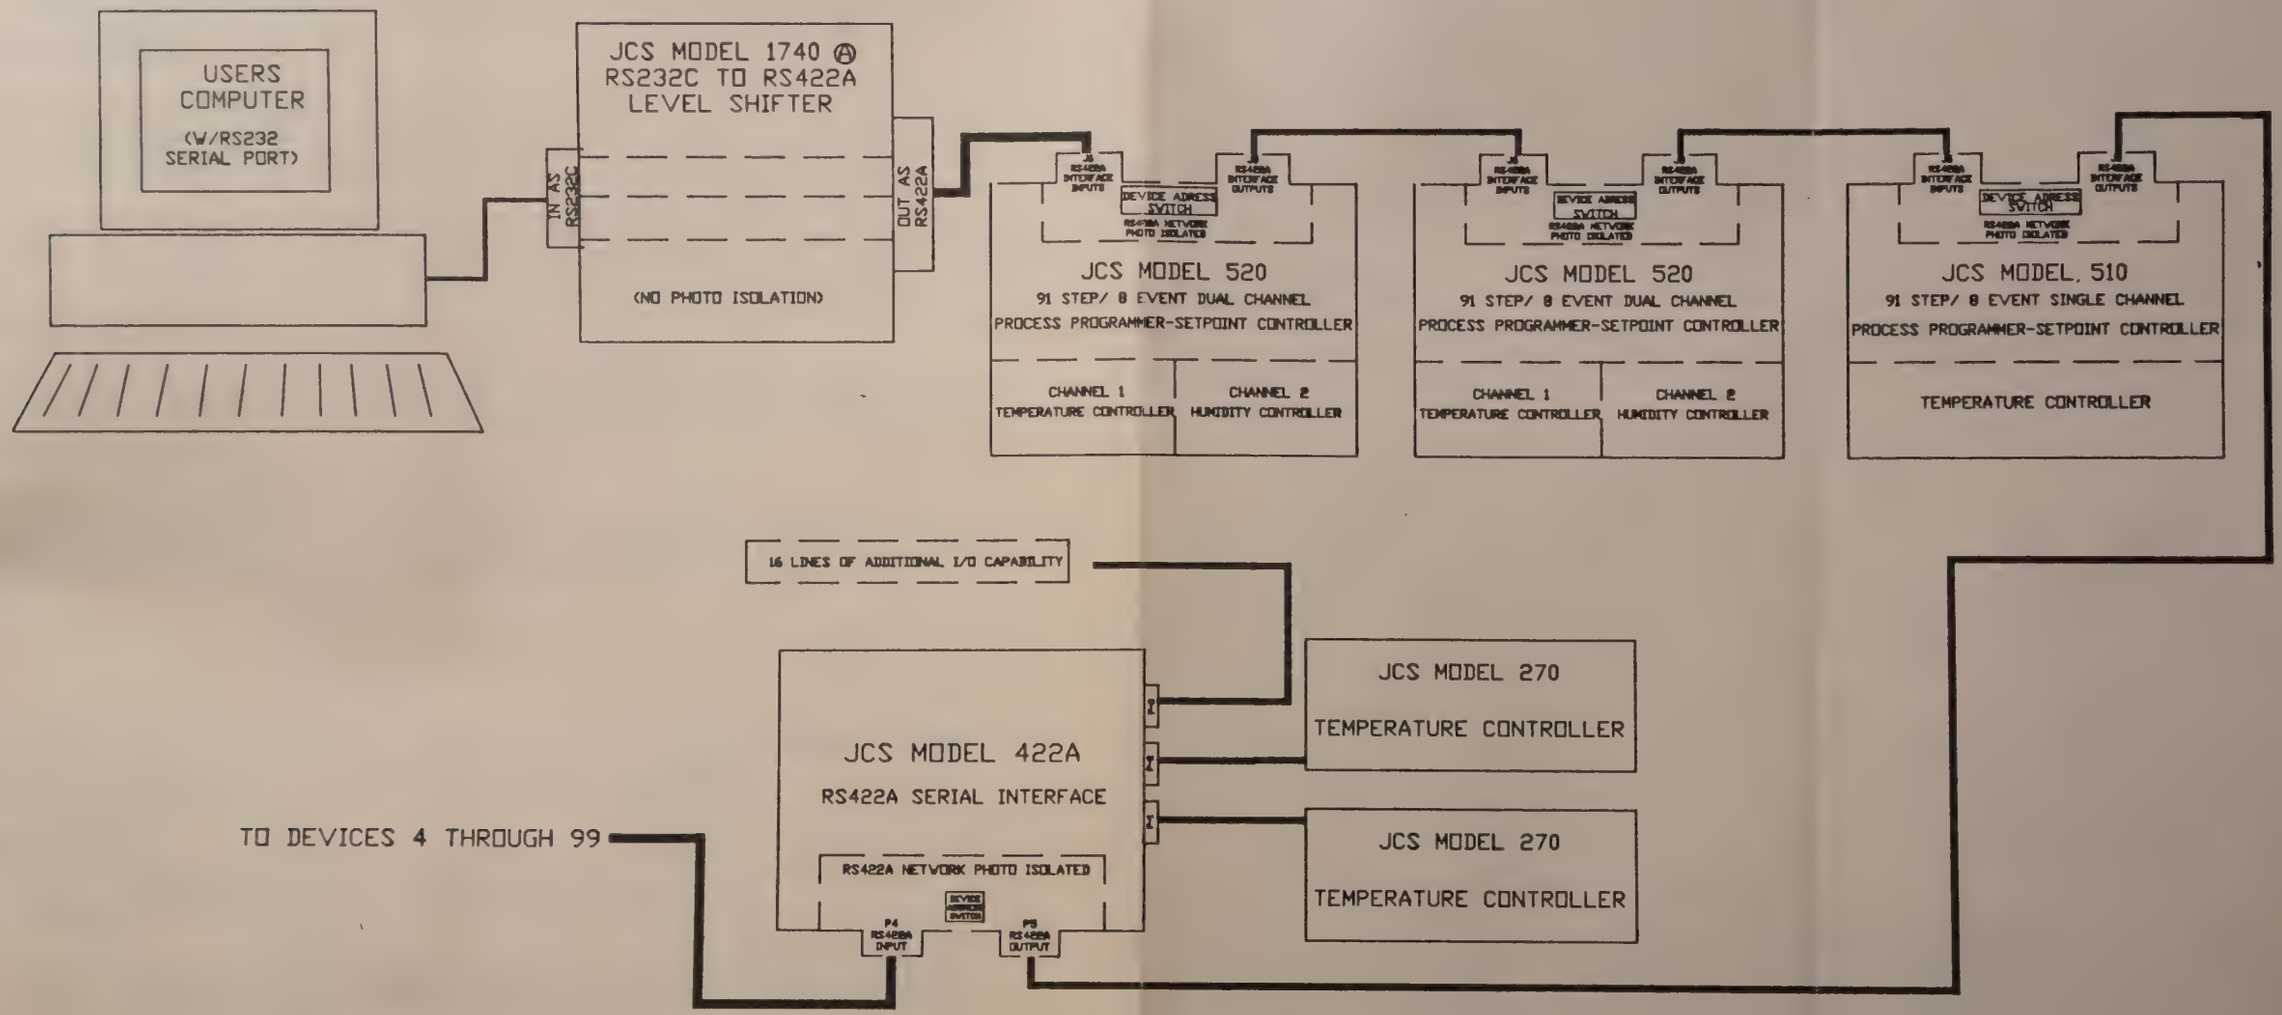

⚠ FINISH (IF APPLICABLE)

⚠ MATL (IF APPLICABLE)

S: UNLESS OTHERWISE SPECIFIED

DASH	QTY	NEXT ASSY	USED ON
APPLICATION			

SERIAL NO.	DATE EFF	DWG REV
EFFECTIVITY		

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES ON
DECIMALS: .XX ± .03, .XXX ± .010
ANGLES: 0° 30'
HOLE TOLERANCES

MATERIAL ⚠
FINISH ⚠

DO NOT SCALE DWG

ENGINEERING ACTIVITY

DESIGN	
DRAFTED	
CHECKED	
APPROV	
RELEASE	

SYSTEMS, INC.

TITLE: JCS MODEL 1740
RS422A INTERFACE PICTORIAL

SIZE	CODE IDENT	
D		1960 A

SCALE | SHEET ___ OF ___

Appendix D. Model A2014 Multi-programmer Synchronizer

D.1 SUMMARY.

JC System's Model A2014 Multi-Programmer Synchronizer option synchronizes Model 510, 520 and 240A programmers so that all units track on the same time basis. Up to 10 units can be daisy-chained. Each unit waits for every other unit, so all units work as an integrated system.

All units must be on and in the RUN state before any/all will run. For example, if an out-of-limits condition stops a ramp for one unit, all other units will stop until the condition returns to within limits.

D.2 APPLICATIONS.

Synchronization is an ideal approach for applications where you must control three or more set-points. In ECA tests, these typically would be DUT temperature, cooling air temperature, and cooling air mass flow rate.

A typical application would be an airborne package under test in a temperature-controlled environment (simulating the internal cockpit), with cooling air introduced from the outside world at a specified (controlled) temperature and velocity. Figure D-1 below shows such a typical ECA test setup.

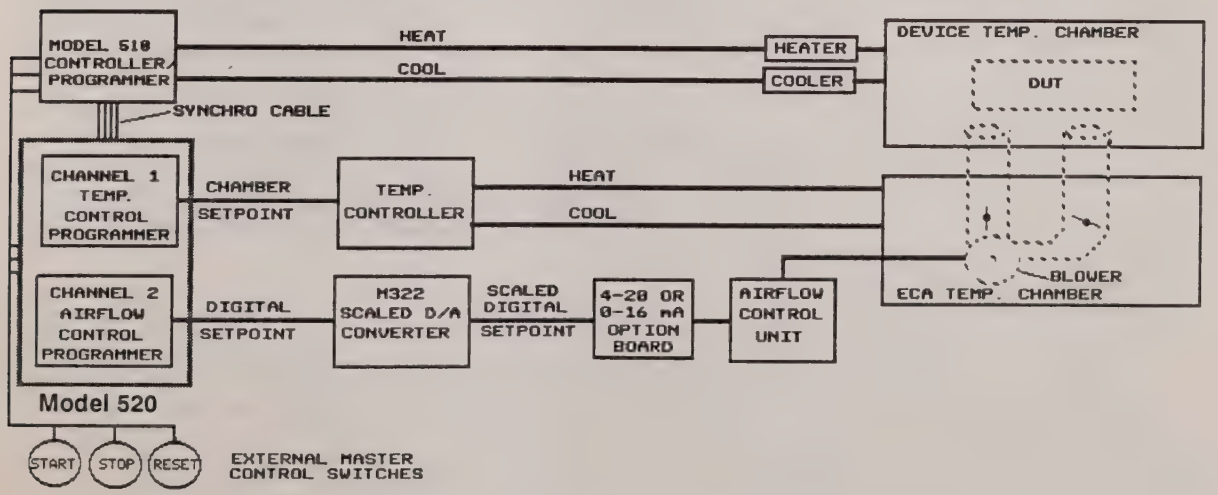

Figure D-1. Typical Synchronizer Application.

D.3 INSTALLATION.

The synchronizer is a small option board installed in the programmer by JC Systems and enabled using switch S1-7. Synchronized units are connected in daisy-chain fashion with customer-installed twisted pairs between the synchronizer I/O board terminal blocks on the programmer rear panels. If no cable is connected to a programmer equipped with the synchro option board, or if S1-7 is in the off position, the programmer functions as a normal standalone type.

Synchronized units should be mounted in the same 19-in. rack or set side-by-side.

D.4 OPERATION.

D.4.1 Programming.

To use the synchronizer option, enter programs with the same time base and step duration for all units to be operated synchronously. If one programmer gets to the end of its step before the others, it will wait for the other programmers, and then all units will resynchronize before starting the next step. No unit will start until all units are ready.

D.4.2 Remote Commands.

When using synchronized programmers, you don't need a computer talking to the units as a network to make the system run. External STOP, START and RESET command inputs on the individual programmers can all be connected in parallel as shown in Figure D-1. This way, one set of master switches can be used to start, stop, or reset all units simultaneously.

INDEX

A
ACCESS A STEP DURING MANUAL CONTROLLER OPERATION, 3-21
ACCESS A STEP IN OPERATE MODE, 3-22
ACCESS A STEP IN PROGRAM MODE, 3-21
Active Displays, 3-23
ADJUST BALANCE, 6-10
ADJUST CONTROLLER REFERENCE VOLTAGE AND BALANCE, 6-10
ADJUST REFERENCE VOLTAGE, 6-10
Alarm Actions, 2-9
Alarm Auto Reset, 3-6
Alarm Condition Response, 5-4
Alarm Conditions, 2-9
Ambient Calibration, 6-9

B
BENCH MOUNTING, 2-1

C
CALIBRATE CONTROLLER, 6-8
CALIBRATE FOR THERMOCOUPLE INPUT, 6-8
Channel 1 Guaranteed Soak Window, 3-5
Channel 2 Guaranteed Soak Window, 3-6
Commands and Format (IEEE-488), 5-14
COMPARE CARTRIDGE AND MODEL 520 MEMORY CONTENTS, 4-4
Computer Handshake and Current Loop Select Test, 6-7
CONFIGURE MODEL 520 FOR IEEE-488 INTERFACE, 5-12
CONFIGURE MODEL 520 FOR PROMSAVE COMMUNICATION, 4-2
CONFIGURE MODEL 520 FOR RS-232C COMMUNICATION, 5-3
CONFIGURE MODEL 520 FOR RS-422 COMMUNICATION, 5-8
CONNECT ALARM OUTPUTS, 2-7
CONNECT ELECTRICAL POWER, 2-1
CONNECT EVENTS INTERFACE, 3-4
CONNECT POWER PROPORTIONING (CURRENT LOOP) OUTPUT OPTION, 2-4
CONNECT POWER PROPORTIONING OUTPUTS, 2-4
CONNECT PROMSAVE POWER, 4-2
CONNECT RTD SENSORS, 2-2
CONNECT TEMPERATURE INPUTS, 2-2
CONNECT THERMOCOUPLES, 2-2
CONNECT TIME-PROPORTIONING OUTPUTS, 2-3
Considerations for Selecting Proportional Bandwidth, A-15
Controller Dip Switches, 3-1
Controller Shutdown/Setpoint Hold, 3-6
CONVENTIONS USED IN THIS MANUAL, 1-2

D
Definitions, A-1
Derivative Control, A-9
Determining and Selecting Proportional Gain Setting, A-18
Determine Thermal Overshoot, A-18

D (Cont.)
Diagnostic Tests:
-500.9 ENTER SETPOINT TEST, 6-7
-590.0 A/D DATA VALID TEST, 6-4
-590.2 COMPUTER HANDSHAKE AND CURRENT LOOP SELECT TEST, 6-4
-590.3 MODE SELECT SWITCH TEST (S7), 6-4
-590.4 CYCLE TIME/DEAD BAND SWITCH TESTS (S1), 6-4
-590.5 AUTOMATIC RESET SWITCH TEST (S2), 6-4
-590.6 NULL BANDWIDTH SWITCH TEST (S3), 6-5
-590.7 RESET WINDUP INHIBIT SWITCH TEST (S4), 6-5
-590.8 RATE SWITCH (S5), 6-5
-590.9 PROPORTIONAL GAIN SWITCH (S6), 6-5
-591.0 CYCLE TIME (DEAD BAND), 6-5
-591.1 FRACTIONAL PART OF AUTOMATIC RESET SWITCH SETTING, 6-5
-591.2 WHOLE NUMBER PART OF AUTOMATIC RESET SWITCH SETTING, 6-6
-591.3 RATE SETTING, 6-6
-591.4 PROPORTIONAL GAIN, 6-6
-591.5 SPAN, 6-6
-591.6 PROPORTIONAL BAND, 6-6
-591.7 RESET WIND-UP INHIBIT BANDWIDTH, 6-6
-591.8 LOWER SETPOINT LIMIT, 6-6
-591.9 UPPER SETPOINT LIMIT, 6-6
-592.0 WATCHDOG TIMER CIRCUIT CHECK, 6-6
-594.0 EXERCISE DISPLAY AND OUTPUTS, 6-6
DIP Switch Position Response, 5-4
DISPLAY TEST, 6-7
Dual Parameters Display, 6-3

E
End Program After One Execution, 3-15
ENTER A PROGRAM WITH NESTED LOOPS, 3-15
ENTER A SETPOINT, 2-10
ENTER A PROGRAM, 3-8
Enter a Parameter, 5-7
ENTER ADDITIONAL INTERMEDIATE STEPS, 3-14
Enter and Select Diagnostic Test, 3-2, 6-1
Enter Channel 1 Alarm Limits, 3-13
Enter Channel 1 Setpoint, 3-13
Enter Channel 2 Alarm Limits, 3-13
Enter Channel 2 Setpoint, 3-13
ENTER DEVIATION ALARM LIMIT, 2-10
ENTER END-OF-PROGRAM (EOP) STEP, 3-14
Enter Setpoint Test, 6-7
ENTER STEP 1, 3-13
Enter Time (Step Duration), 3-14
Events Status, 3-7
Exit Diagnostics, 3-4, 6-3

F
FACTORY SWITCH SETTINGS, 3-1
Final Calibration and Verification, 6-9
FINDING SWITCHES AND DISPLAYS, 3-12
FORMAT FOR ENTERING RS-422A COMPUTER COMMANDS, 5-11
FRONT PANEL SWITCH AND DISPLAY TEST, 6-11
FULL REMOTE COMPUTER CONTROL VIA RS-232C INTERFACE, 5-4
FULL REMOTE COMPUTER CONTROL VIA RS-422A INTERFACE, 5-11
Full-Scale Calibration, 6-9

G
GAIN ACCESS TO INTERNAL COMPONENTS, 6-10

H
How It (Remote Computer Control) Works, 5-4
HOW THE MANUAL IS ORGANIZED, 1-2
HOW THE PROMSAVE WORKS, 4-1
HOW TO DETECT A FAILURE, 2-9
HOW TO FIND INFORMATION, 1-1
HOW TO SET A DIP SWITCH, A-3
HOW TO USE THIS MANUAL, 1-1

I
Importance of End-of-Program Step, 3-8
INSTALLATION, 2-1
INTERRUPT PROMSAVE (RESET), 4-3
Invalid Setpoint, 2-9

L
LIST OF DIAGNOSTIC TESTS, 6-3
LOAD PROGRAM INTO MODEL 520 FROM CARTRIDGE, 4-3
Loop Execution, 3-18
Loop Format, 3-18
Loop Location, 3-18
Loop Storage, 3-18

M
MAKE THE (PROGRAM) CHANGE, 3-21
Mode Response, 5-4
MONITOR DISPLAYS, 3-23
MONITORING MODEL 520 STATUS VIA RS-232C INTERFACE, 5-3
MONITORING MODEL 520 STATUS VIA RS-422A INTERFACE, 5-11
MOUNTING, 2-1

O
OPERATING WITH EXTERNAL CONTROL INPUTS, 5-1

P
Parameter Response, 5-4
PERFORM CORRECTIVE MAINTENANCE, 6-1
PERFORM PREVENTIVE MAINTENANCE, 6-1
PRINCIPAL COMPONENTS, 1-4
Probe Open, 2-9
PROCEDURE FOR LINEAR INPUT CONTROLLER, 6-9
Program Cycles, 3-15
Program Length and Model 520 Program Storage Capacity, 3-11
Programmer Logic Control Board A1852/1550 Switch S1, 3-1, 3-6
PROGRAMMING A NESTED LOOP, 3-18
Proportional Control, A-2

R
RACK MOUNTING, 2-1
Random Access, 3-21, 3-22
Read Service Request (Serial Poll) Data, 5-13
READ SWITCH SETTINGS USING DIAGNOSTICS, 3-2
REFERENCE DRAWINGS (LIST), C-1
REMOTE COMPUTER INTERFACE VIA IEEE-488 (GPIB) OPTION, 5-12
REMOTE COMPUTER INTERFACE VIA RS-232 SERIAL CONNECTION, 5-3
REMOTE COMPUTER INTERFACE VIA RS-422A SERIAL NETWORK OPTION, 5-8
REMOTE COMPUTER OPERATIONS VIA THE IEEE-488 INTERFACE, 5-14
Reset, 3-24, A-6
RESETTING CONTROLLER SWITCHES, A-13
RESPOND TO ALARMS, 3-24
RESPOND TO INVALID SETPOINT INDICATION, 3-25
RESPOND TO PROBE OPEN INDICATION, 3-25
Restart at Any Other Step, 3-27
Restart at First Step of Present Program, 3-27
RESTART PROGRAM, 3-26
RESTARTING AT RAMP OR SOAK STEP (XX.XX STEP TIME), 3-26
RESTARTING WITHOUT RAMP OR SOAK (00.00 STEP TIME), 3-27
Reviewing Programmed Values for Current Step, 3-23
REVISE THE PROGRAM, 3-20
RS-422 Interface Switch Settings, 5-9
RUN DIAGNOSTICS, 6-1
Run During Deviation, 3-6, 3-24
RUN SYSTEM AS A MANUAL CONTROLLER, 2-7
RUN THE PROGRAM, 3-22

S
SAVE MODEL 520 PROGRAM TO CARTRIDGE, 4-2
Select a Parameter, 5-7
Select a Step, 5-7
Select Automatic or Manual Current Loop Function (S7-2), 2-6
SELECT EVENTS PRESET FOR MANUAL OPERATION, 2-7
Select EVENTS Status, 3-14, 3-20
SELECT MANUAL MODE, 2-10
SELECT RESTARTING STEP, 3-27
Select Reverse or Direct Action (S7-3), 2-6
Select Single-Current or Split-Range Output (S7-1), 2-5

S (Cont.)
SELECT STARTING STEP, 3-12
Select Temperature or Linear Input, 2-7
Select/Read Controller Modes, 5-6
Sequential Access, 3-21, 3-22
Service Request Enable/Disable, 5-14
SET CYCLE TIME (S1), A-7
SET CYCLE TIME TO ONE SECOND, 2-4
SET DERIVATIVE CONTROL, A-16
Set Device Address, 5-14
SET DIP SWITCHES, 3-5
Set Front Panel Dip Switch Z33, 3-5
SET INTEGRAL CONTROL, A-16
SET MODEL 520 GPIB/SERIAL SWITCH, 4-2
SET MODEL 520 TO REMOTE, 4-2
SET STAGING OR NULL BANDWIDTH (SWITCH-SELECTABLE DEVIATION S3), A-17
SET PROPORTIONAL BANDWIDTH, A-15
SET RESET WINDUP INHIBIT, A-16
Set Service Request DIP Switch, 5-12
Set Time Base, 3-6
SHUT DOWN CONTROLLER, 2-11
Single-Step (Programmed Stop) Operation, 3-7
SOFT START, 3-26
START OPERATION, 3-23
STOP THE PROGRAM FOR REVIEW, 3-25
STORE THE PROGRAM, 3-20
SYSTEM APPLICATIONS, 1-3
SYSTEM DESCRIPTION, 1-2

T
TURN ON PROMSAVE POWER, 4-2
TURN ON THE SYSTEM, 2-9

U
UNPACKING, 2-1
USE THE WORKSHEET TO PLAN A PROGRAM, 3-8
USING DIAGNOSTICS, 6-2
USING THE NESTED LOOP CAPABILITY, 3-15

V
Voltage Connections, 5-8

W
Watchdog Timer Circuit Check, 6-8
WATCH PROGRAM LENGTH, 3-11